



home
&CO

**Cordless Water Kettle
WK8329A22
User Manual**

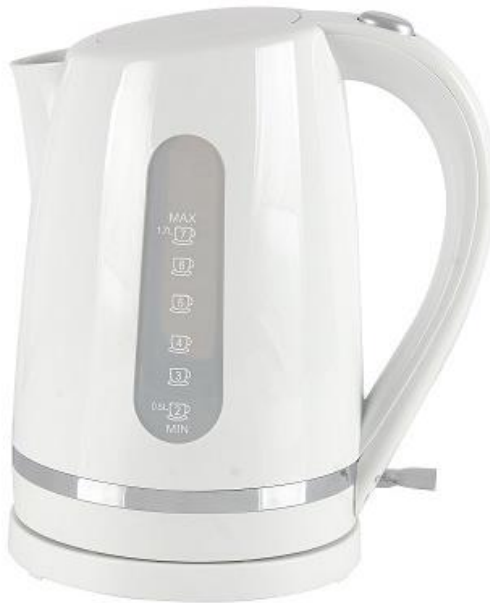

**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

Parts of the Product

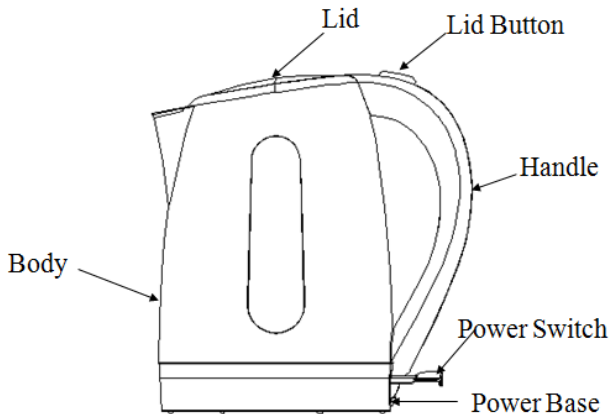

IMPORTANT SAFETY INSTRUCTIONS

- Please read these instructions carefully before using the water kettle for the first time.
- To protect against risk of electrical hazard, do not immerse the appliance, power cord or plug in water or any other liquids.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children shall be supervised to ensure that they do not play with the appliance
- If the supply cord is damaged, it must be replaced by a qualified electrician in order to avoid a hazard or the product must be disposed.

CAUTION! If the kettle is overfilled, boiling water may be ejected.

- Kettle is only to be used with the base provided.
- This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- Use the kettle in accordance with the user instructions supplied, any misuse may cause an electric shock, scalding or other hazards.
 - Before you connect the kettle to the mains supply, make sure that the voltage indicated on the rating plate, located on the bottom of the water kettle matches the mains voltage in your home. If it does not, contact Kmart and do not use the kettle.
 - The kettle will switch off automatically when the water has boiled. If you want to stop the heating process before the kettle automatically switches off, lift the ON/OFF switch up.
 - After the kettle has switched off automatically (or has been switched off manually) it may need time to cool down. After 15-20 seconds, the kettle can be switched back ON again.
 - Always fill the kettle with water before switching it ON.
 - If the water kettle is accidentally switched ON without water, the boil dry protection circuit will activate to prevent damage to the heating element.
 - If the kettle ever boils dry, the power indicator will go out. Allow 15 minutes to cool down. The safety cutout will reset automatically during this time. Remove the kettle from the power base and fill with cold water. The kettle will function again.
 - Place the kettle on a stable flat surface.
 - Do not use this appliance outdoors.
 - Ensure that the kettle is switched off before removing it from its base.
 - Do not remove the kettle from its base during operation
 - Never immerse the kettle or cord in water or any other liquid. Water must not be allowed to come into contact with the electrical parts from underneath.
 - Prevent children from pulling on the mains power cord or knocking the kettle over.
 - Ensure that the mains lead does not overhang over the bench top.
 - The outside surface of the kettle may get hot during use, please take care

when using the kettle.

- Never fill in water more than the maximum acceptable water level.
- Never use the kettle with the lid open.
- Do not open the lid when steam is coming out of the spout.

Before cleaning the kettle disconnect from the power supply and wait until it has cooled down completely.

WARNING: Avoid spillage on the electrical connector.

WARNING: Misuse may cause injury.

WARNING: The heating element surface is subject to residual heat after use.

WARNING: Do not open the lid while the water is boiling.

CAUTION! Do not operate the kettle on an inclined plane. Do not operate the kettle unless the element is fully immersed. Do not move while the kettle is switched ON.

Save These Instruction For Household Use Only

Before First Use

Before first use, it is recommended to operate the kettle for 2 or 3 times following the instructions above, this will remove any dust or residue remaining from the manufacturing process.

- Remove the jug kettle from the base before filling.
- To fill the container, open the top cover by pressing the lid button downwards, then fill to the desired level (Min 0.5L - Max.1.7L), close the lid by put it down until it clicks into place.
- Plug the power supply cord into mains power. Press down on the On/Off switch, and the power indicator will light up.
- When the water has boiled the kettle will switch off automatically.

You can stop the boiling process at any time by lifting up the On/Off switch. The power indicator will go out.

Cleaning

- First read the instructions in the section titled “IMPORTANT SAFETY INSTRUCTIONS”.
- Avoid using abrasive cleaning agents.
- Empty the kettle and allow it to cool. Open the lid, lift out the filter, rinse the filter under warm water and brush off any impurities.
- Reassemble after cleaning.

CAUTION: To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.

Descaling

- Half-fill the kettle with tap water and add the juice of 1 lemon to the water.
- Boil this mixture and allow it to stand for 15 minutes. Re-boil the mixture and allow it to stand a further 15 minutes. Re-boil this mixture a third time then rinse the kettle well.

Technical Specification

Voltage : 220-240V~ 50/60Hz

Power : 1850-2200W

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](https://www.kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.