



LIQUID
EARS

TRUE WIRELESS

BUDS

LEBTWSWH
LEBTWSBK



Read this user manual and in particular the safety notes, before using the product.

Keep the user manual for future reference and include it when passing the product on to third parties.

Liquid Ears will not in any way be held responsible for injury or damage caused to persons or property arising from misuse of the product.

Charging

For first time use, charge the battery to full capacity. To charge, plug the charging cable into the product charging port connecting it to a charger/pc with a USB port (5V, 1A). The blinking blue lights inside the charging case shows the progress. When the lights are still, the charging case is fully charged.

Once you place the earphones inside the charging case, the charge will start and a red light will turn ON on each bud. When the red light turns OFF, the earphones are completely charged.

Turning on and pairing

Remove the earphones from the charging case and they will automatically turn ON. The earphones must be connected to a device within 10 minutes, otherwise the earphones will go into power saving mode. To activate the pairing mode again, simply put the earphones back in the charging case and wait a few seconds before doing the above procedure again. Turn ON the Bluetooth® on your device, go to Bluetooth® menu, search for "LE TWS", select to pair and connect. You will hear "Connected" sound when pairing is complete.

Automatic reconnection

When the earphones are removed from the case they will automatically turn ON and sync to each other. If they have previously been paired to a device they will also automatically re-connect provided it is within range.

MONO/STEREO function

You can also use only one earbud to listen to music and to take calls. This function (MONO function) is available for both earbuds. To use this function remove one earbud from the charging case. To switch to the STEREO mode, remove the second earbud at any time. To switch to MONO mode, place one earbud back into the charging case.

Multifunction buttons

	Left earphone (L)	Right earphone (R)
Play/pause	Single click	Single click
Reply/end calls	Single click	Single click
Refuse calls	Press and hold	Press and hold
Previous track	Double click	-
Next track	-	Double click
Volume -	Press and hold for 2 seconds	-
Volume +	-	Press and hold for 2 seconds
Voice assistant	Triple click	Triple click

Auto power off

Earphones will automatically turn off if there is no operation for 10 minutes after removing from charging case.

Pairing left and right earphone

If the connection from right to left is lost, put both earphones back in the charging case. Wait a few seconds and then take out both earphones from the charging case and they will re-connect automatically. If this procedure does not work, disconnect the earphones from your device, wait a few minutes, then reconnect them (both earphones must be placed inside the charging case). For both procedures it is necessary that the earphones inside the charging case are charging, so make sure that the charging case is sufficiently charged to guarantee the charging of the earphones.

Maintenance

1. Do not use abrasive cleaning solvents to clean the product.
2. Do not touch the product with any sharp object as this will cause scratching and damage.
3. Please keep the product away from high-temperature, dust and humidity.

Specifications

- Bluetooth® version: 5.2
- Earphones charging time: 1.5h
- Charge case charging time: 2h
- Earphones battery type: Li-polymer 3.7V/50mAh
- Charge case battery type: Li-polymer 3.7V/300mAh
- Microphone sensitivity: -42dB±3dB
- Frequency response: 20Hz-20KHz
- Bluetooth® range: 10m
- Talk time: 5h
- Playing time: 24hr including case recharges,
7hr on earphones battery
- Standby time: 80h
- Operation temperature: 0° - 40° C



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by The Crest Company is under licence. Other trademarks and trade names are those of their respective owners.

WARNING Do not dispose of unit in fire or water. • Never attempt to disassemble and reassemble. • Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. • Check with your local authority for recycle advice.

- Keep your device and all accessories out of the reach of children and animals.
- Small parts may cause choking or serious injury if swallowed.
- Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C).
- Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device.
- Do not allow your device to get wet—liquids can cause serious damage.
- Do not handle your device with wet hands.