

## Assembly Instructions

### 1. To Assemble the Chair

#### Legs.

- Insert the front legs with matching "FR" as shown in Fig 1.
- Insert the rear legs with matching "RR" as shown in Fig. 1.



Fig.1

### Operating Instructions

### 2. To Open the Highchair

- Lift the backrest and seat in the direction of the arrows until the highchair is fully opened. (Fig. 2)



Fig. 2

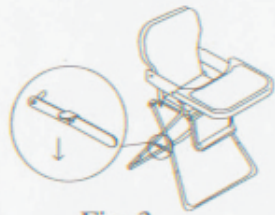


Fig. 3

- Press down **FIRMLY** on the frame hinge until it is locked into place. Your highchair is ready for use. (Fig. 3)

### 3. Folding the Highchair

- Lift the frame hinge and release wire as indicated.(Fig. 4)



Fig. 4



Fig.5

- Push backrest and seat in the direction of the arrows shown until the highchair is folded.(Fig.5)


## Operating Instructions

### Restraints

To secure the child in the harness, push buckle A and B into the buckle housing C until the buckle prongs snap into position.

Carefully adjust the waist harness by pulling the slider D until the desired length is achieved, Follow the same procedure to adjust the shoulder strap. To release the buckles, squeeze the top and bottom prongs

until the buckle disengages. Always adjust the harness when changing seating positions.

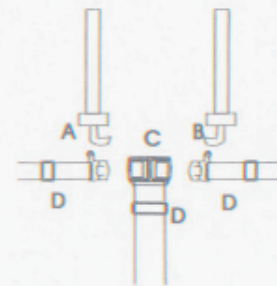


**Warning:** Many unrestrained children suffer injuries by falling from the high chair, Use safety harness at all times.

### Adjusting the Tray

- Lift the side latches and move the tray to the desired position

**! WARNING:** Prevent serious injury from falling or sliding out."

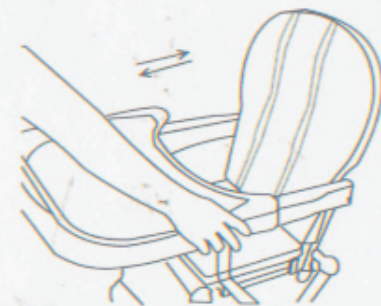

To insert the tray.

**! WARNING:** The child should be secured in the high chair at all times by the restraining system, The tray is not designed to hold the child in the chair. It is recommended that the high chair be used only when children are capable of sitting upright unassisted."