

**VS**  
SASSOON

**FOR MEN**



**THE BEARDBUDDY**

# TOOL TIPS

for the lithium powered trimmer  
for your beard & stubble, nose & ears.

VSM703A

**HEY YOU!**  
**TAKE A BOW FINE SIR.**

---

THINGS ARE LOOKING UP  
& **YOU'VE JUST MADE A  
QUALITY PURCHASE**  
WITH THIS NEW GROOMING TOOL.

---

WE KNOW YOU'VE GOT THIS, BUT BEFORE YOU JUMP INTO  
USING YOUR NEW SIDE KICK, HERE'S A FEW TIPS & TRICKS  
TO KNOW BEFORE LETTING YOUR CREATIVITY RUN LOOSE.

---

HIT UP [VSFORMEN.COM.AU](http://VSFORMEN.COM.AU) FOR MORE GROOMING & INSPIRATION.



# THE BEARD BUDDY

BRAVO. YOU'VE MADE A QUALITY PURCHASE.

The Beard Buddy is the lithium powered trimmer for your beard & stubble, nose & ears.



- 1. Diamond sharpened blades
- 2. 30mm Trimming Blade
- 3. Rotary Trimming Blade

- 4. 6 position comb guide (4mm to 18mm)
- 5. 2 position taper control
- 6. 2x AAA lithium batteries

# PREPPING YOUR NEW TOOL

## INSERTING THE BATTERY

- To insert the AAA lithium batteries, first ensure that the trimmer is switched off, then remove the battery compartment cover at the back of the appliance by pulling straight down.
- Align the two lithium AAA batteries with the positive and negative positions indicated inside the battery compartment. Being careful not to bend the clips, insert the negative end of each battery first so it will slip easily into position.
- If the appliance remains unused for a while or if the batteries have run down, remove them from the appliance. This will increase the life of the trimmer.
- After inserting the batteries, replace the battery compartment cover to its original position by pushing it in and up until it clicks into place.
- Always purchase the correct size and grade of batteries most suitable for intended use.
- Clean the battery contacts and also those of the appliance prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Exhausted batteries are to be removed from the appliance and safely disposed of.
- When the batteries have run down, they should be disposed of at a recycling centre to safeguard the environment. If the batteries leak avoid touching them and dispose of them at a recycling centre.
- Non-rechargeable batteries are not to be recharged.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon zinc), or rechargeable (nickel cadmium) batteries.
- Store unused batteries in their original packaging, away from metal objects that could short-circuit them. Never short-circuit batteries.

## **BEFORE USING**

- Always inspect the trimmer for noticeable signs of damage.
- Always inspect the trimmer before use to ensure the blades are free from hair, debris etc.
- Ensure the batteries are correctly inserted before use.
- For best performance use on clean, dry hair that has been combed until tangle-free.

## USING THE 6 POSITION COMB GUIDE

The Beard Buddy comes with a 6 position comb guide (4mm to 18mm) for crafting a short stubble look, or keeping your beard in top shape.

Use the shortest setting for maintaining a short stubble look, or use the longest setting for maintaining a longer beard.

## ATTACHING THE 6 POSITION COMB GUIDE + ADJUSTING THE SETTINGS

To attach the comb guide, ensure that the trimmer is switched off.

Slide the comb guide over the top of the 30mm trimming blade and with your thumb, slide the comb guide up and down until it clicks into the desired cutting length.

## REMOVING THE COMB GUIDE

To remove the comb guide, ensure the appliance is switched off.

With your thumb, slide the comb guide up until it is fully released from the head of the 30mm trimming blade. If you want to completely remove hair, use the 30mm trimming blade without the comb guide.

## 2 POSITION TAPER CONTROL

The taper control provides 2 precision settings for blending layers & a precise, close cut, everytime from 0.2mm to 0.4mm.

To increase the cutting length, slide the switch down.

To reduce the cutting length, slide the switch up.

## CHANGING THE TRIMMING BLADES

To remove a trimming blade, place both of your thumbs at the top of the trimmer and push the blade head away from you until it comes away from the trimmer power handle.

---

**CAUTION:** WHEN REMOVING THE BLADE OR COMB GUIDE ATTACHMENT, BE CAREFUL NOT TO CUT YOUR FINGERS AS THE BLADES ARE SHARP.

---

# TRIMMING TIPS

Hit up [www.vsformen.com.au](http://www.vsformen.com.au) for more grooming & inspiration.

## TRIMMING YOUR NECKLINE USING THE 30MM TRIMMING BLADE

- Hold the trimmer with the teeth of the trimmer pointing upwards, yet flat against the skin.
- Attach the 6 position comb guide and select the desired cutting length setting.
- Move the trimmer upward and outward through the hair, against the direction of hair growth.
- The trimmer will work most efficiently when cutting through hair at its own speed. Never force the trimmer.
- Never switch the appliance off whilst in the hair.



## TRIMMING YOUR SIDEBURNS USING THE 30MM TRIMMING BLADE

- Attach the 6 position comb guide and select the desired cutting length setting.
- Always trim your sideburns from the top down.



## TRIMMING & OUTLINING STUBBLE/BEARD USING THE 30MM TRIMMING BLADE

- Attach the 6 position comb guide and select the desired cutting length setting.
- After you have combed through your beard in the direction it grows naturally, you will want to outline the desired shape, beginning under your jawline.
- Begin defining your beard's shape under your chin and work upward on each side of your face toward your ears. Then define the upper outline of your beard across your cheeks, past your sideburns and towards your hairline.



## TRIMMING YOUR MOUSTACHE USING THE 30MM TRIMMING BLADE

- For best results, start with a clean, slightly damp moustache.
- Use a comb to comb hairs in the direction of growth.
- Attach the 6 position comb guide and select the desired cutting length setting. It is a good idea to start with the longest trimming length setting (You can always go back and cut your moustache closely with a shorter setting).
- Always trim your moustache from the top down.
- After your moustache has been trimmed to the desired length, remove the comb guide and using the blades only, define the outline of the bottom of your moustache.



## USING THE ROTARY BLADE

1. Attach the rotary trimming blade.
2. Switch the trimmer on by sliding the On/Off switch upwards so that the "I" marking is visible
3. Insert the trimmer into the nose or ear and gently move the trimmer in a circular motion.
4. Always turn the trimmer on BEFORE you insert into your nostril or ear canal to avoid painfully snagging hairs.
5. Never insert the trimmer more than 5-6mm into your nose or ears.
6. Never turn the trimmer off whilst in the nose and ears.



# TRIMMER CLEANING & MAINTENANCE

Because the trimmer blades are precision made for a very special use, they should always be handled with care. To ensure long-lasting performance of your trimmer, it is important to clean the blades after every use.

The blades are washable for easy cleaning.

To remove the trimming blade, follow the instructions at **CHANGING THE TRIMMING BLADES**.

Take a small brush and brush away any loose hairs that have collected in the blades.

To clean the handle of your trimmer, simply wipe with a cloth that has been dampened in water and mild detergent.

---

**NEVER IMMERSE THE HANDLE OF THE TRIMMER IN WATER.**

# LIMITED TWO YEAR WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.

You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. In New Zealand our goods come with a guarantee that cannot be excluded under the Consumer Guarantee Act 1993.

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twenty-four months from the date of purchase if the appliance is defective in workmanship or materials.

This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please read the Warranty Leaflet included or contact Conair Customer Service at [aus\\_info@conair.com](mailto:aus_info@conair.com).

---

**TO MAKE A WARRANTY CLAIM YOU MUST  
RETAIN YOUR PROOF OF PURCHASE.**

# IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

**DANGER:** When the unit is used in a bathroom, remove the batteries after use since the proximity of water presents a hazard even when the appliance is switched off.



**WARNING:** Do not use or leave the trimmer in a position where it can become wet or there is a danger of it falling into a basin or other vessels containing water. Keep the appliance dry, unless it otherwise specified. Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water.

- Do not immerse appliance in water or other liquids.
- Do not reach for an appliance that has fallen into water.
- Take care to avoid contact between the moving blades of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

**IMPORTANT:** Always ensure the appliance is switched off when not in use or before cleaning. Do not leave unattended when switched on. Do not place on any heat sensitive surface.

- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Use this appliance only for its intended use as described within this instruction booklet.
- This appliance is not intended for commercial use.
- Never drop or insert any object into an opening.
- Do not use the appliance with damaged or broken attachment combs or with any teeth missing from the blades, as injury may occur.
- Do not place on any surface while it is operating.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use the appliance if it is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.





Vidal Sassoon and related logos are trademarks of  
The Procter & Gamble Company used under license by Conair.

©2016 Conair Australia Pty. Ltd.  
Suite 101, 18 Rodborough Rd  
Frenchs Forest NSW 2086  
Australia

Conair New Zealand Limited  
PO BOX 251159  
Pakuranga, Auckland 1706  
New Zealand

## CONTACT US

For advice & tips on your new VS product email us on:  
[aus\\_info@conair.com](mailto:aus_info@conair.com)

## CUSTOMER SERVICE

Australia: 1800 650 263  
New Zealand: 0800 266 247

Visit [VSFORMEN.COM.AU](http://VSFORMEN.COM.AU) for grooming tips & inspiration.

**VS**  
SASSOON

**FOR MEN**

**YOU WERE  
BORN TO  
BE REAL,  
NOT TO BE  
PERFECT**

IB-16/179