



BRILLIANCE

User Manual

SB300





We congratulate you for choosing Sauber Brilliance, efficient and eco-friendly cleaning using the natural principle of dry steam. Before operating the Sauber Brilliance please read this instruction manual carefully and keep for future reference.

sauber - It's German for clean



Safety Instructions

- This product has been developed for domestic use only. Any professional use, inappropriate use or failure to comply with the instructions, will exonerate Sauber from any responsibility and the guarantee will not apply.
- The Sauber SB300 is built in accordance with the safety type IPX 4. Thus it is splash resistant.
- Children should be supervised to ensure they do not play with the appliance.
- Persons (including children) who are physically, mentally or because of lack of experience unable to operate the appliance safely are not allowed to operate this machine without supervision. Keep the appliance out of the reach of children.
- Never leave the unit unattended, when connected or still warm. Always disconnect the plug, also for short times when unattended.
- Compare the electric contact data on the rating plate with the mains voltage, frequency and maximal ampere, these figures have to comply.
- The hose and cord contain electrical components and should be checked regularly, they must not be used if damaged.
- In case of damages switch off and unplug immediately the unit and contact a Sauber Service Centre.
- Any repair must be carried solely by authorised Sauber technicians. Use only Sauber ORIGINAL spare parts. Appliances repaired by unauthorised technicians can represent a danger to the users and render the warranty void.
- Do not try to modify the unit by yourself.
- Do not attempt to open the security cap when the unit is in use (boiler is pressurised).
- Do not pull the cord to disconnect the plug.
- Do not pull the unit so far away from the socket that the cable becomes stretched.
- Do not immerse the unit in water.
- Never aim the steam jet towards people or animals.
- Never clean electrical components or electrical devices with the steam.
- Never aim the steam jet directly at non heat resistant materials.

- Never aim steam jet directly at silk, Dralon, fur, leather, suede, velvet or velour. Before the use on sensitive materials, we recommend that you test it on a hidden area of the surface to be cleaned.
- The symbol on the handle indicates that you can get scalded from the hot steam.
- Disconnect the unit before every water filling, accessory change, service or cleaning and after its use. Let the unit cool down.
- Only use pure tap water without additives, perfumes or any chemical substances.
- Do not insert any object in the various openings of the appliance and do not use the appliance in case one of the openings is blocked.
- Keep the device in a dry place. Do not expose it to atmospheric agents, humidity or heat sources.
- Do not use the unit with wet hands or bare feet.
- The unit can not be transported on public roads as long as it is still under pressure.
- It is forbidden to use the unit for cleaning of people, or clothes they are wearing, as well as for cleaning of animals.
- Do not use the unit to cook or rework food. Do not use it to fill containers like bottles, bags or balloons.
- It is not allowed to use the unit to dissolve or remove substances that are dangerous for the human health.



Accessories



Display



Hose





Overview

- A** Patented tank closure (filler cap)
- B** Display
- C** Carrying handle
- D** Heater switch
- E** Hose connection with security closure cap
- F** ON/OFF button
- G** Button for cable compartment
- H** Hose with control handle
- I** Extension rods
- J** Floor brush
- K** Floor brush protection plate
- L** Diamond shaped brush
- M** High pressure steam nozzles
- N** Special cleaning brushes
- O** Filling bottle
- P** Window Wiper and Brush
- Q** Iron

Display

- A** Water shortage, no heating
- B** Steam level 1
- C** Steam level 2
- D** Steam level 3
- E** Low steam in the boiler, heating up
- F** Working pressure, heating up
- G** Max tank pressure, no heating
- H** Heating power 50%
- I** Heating power 100%

Hose

- J** Steam level 1 (●)
- K** Steam level 2 (●●)
- L** Steam level 3 (● & ●●)
- M** Safety switch



Assembly



- 1 Open the shutter and gently push the powered hose in the canister opening.



- 2 Insert the hose coupling into the connector opening. To click it into place, press the switch on the coupling.



- 3 Turn the locking ring in the clockwise direction. Connect the tube. Turn the locking ring in the anticlockwise direction. The ring needs to latch. In the same way you can connect steam nozzles, floor brush and diamond shaped brush.

Start the unit



- 1 Fill the steamer with water. See section "Water filling".



- 2 Open the cable compartment.



- 3 Remove the cable and plug the cable in the power socket. Close the cable compartment.




- 4 Turn the heater switch on 100%.



- 5 Switch on the unit by pressing the ON/OFF button, the orange lamp turns on. On the display the indicators 100% heating [I] and heating up [E] will turn on.



- 6 Wait until the steamer has reached the maximum temperature and pressure [G].

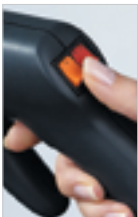

- 7 Before commencing cleaning remove eventual condensed water and warm up the hose by letting off steam for approximately 15 seconds. To do this press the switches on the control handle • and •• [L]; move the handle away from you and press the safety switch under the handle [M] to release steam.

Note: Steam will only release when the safety switch is depressed.



Operation



ATTENTION - The surfaces treated with the steamer have to be steam and heat resistant. Test the colour fastness in a hidden corner (excluding: Carpets, upholstery). Do not clean cold surfaces; the temperature shock can damage the surface (excluding: A window pane breaks).

Water filling

Before filling water into the unit always steam out the remaining steam in the boiler. The pressure can remain in the boiler over days.



1 Open the cable compartment.



2 Remove the cable and plug the cable in the power socket.



3 Turn the heater switch on 0%.



4 Switch on the unit by pressing the ON/OFF button, the orange lamp turns on.



5 Press the switches on the control handle ● and ●●; move the handle away from you and press the security switch under the handle to let out steam.



6 Switch off the unit by pressing the ON/OFF button, the orange lamp will turn off.



7 Unplug the unit.



8 The patented safety cap can only be unscrewed when the pressure in the boiler is below 0.5 bar. Turn carefully the cap in anti clockwise direction. In case steam streams out, close the cap and release steam from the unit again.





9 Fill the unit only with water using the filling bottle (no chemicals). In a tank you can fill 3 bottles. You can use warm water to reduce the heating time. Close the security cap carefully.




Operation


What the Lights Mean on the Display

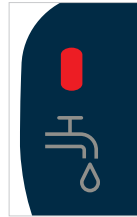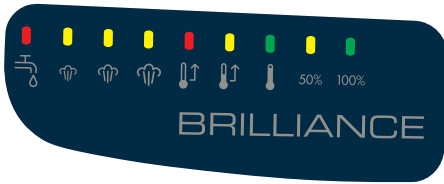


Not enough water in the boiler. When this symbol is illuminated, the steamer is no longer heating. All steam must be released before opening the safety cap and refilling the boiler with water.

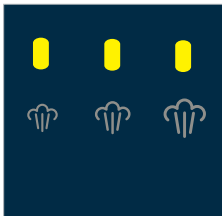

Steam Level 1, 2 and 3.
1 – Minimum steam output.
2 – Medium steam output.
3 – Maximum steam output.

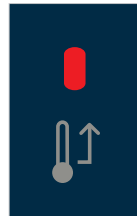


The water in the boiler is still cold and heating up. Wait until the water in the boiler is heated before commencing use.

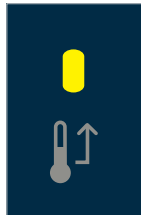


The water in the boiler is ready for use. The water will continue to heat while in use.



The water in the boiler is at maximum temperature. The water is no longer heating until required.

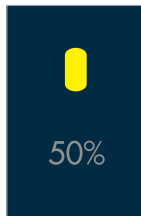

The heating power of the boiler is at 50% (Note: when using the iron accessory, the heating power of the boiler will only be at 50%).

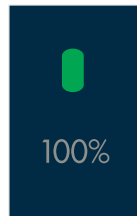

The heating power of the boiler is at 100%.

Cleaning tiled floors



- 1 Fix the cleaning cloth on the front brush clamps; behind the cloth remains free. In this way you can clean (steam level 2), scrub (Steam level 3) and dry wipe (no steam) the tiled floors.

Carpet cleaning (delicate floors)



- 1 Click the protection plate on the floor brush.



- 2 Fix the cleaning cloth on all four brush clamps. Let the brush glide without pressing on the floor (Steam level 1).

Cleaning with diamond shaped brush



- 1 Fix the cloth to the brush clamps.



Operation

Cleaning with diamond shaped brush



2

You can lock or unlock the brush swivel according to your needs. With the diamond shaped brush you can clean flat smaller surfaces (ex. Wall tiles, cupboards, working surfaces, shower cabins, window frames etc. – steam level 2).

Steam nozzle



1

Connect the nozzle to the hose handle. With this accessory you can clean toilets, sinks, grooves, ovens, shower frames, etc. Wipe the dissolved dirt with a cloth.



2

To remove stains from carpets (not wool carpets) hold the nozzle low and even above the floor.



3

Spray a short, strong steam jet on to the stain (steam level 2). Protect your fingers behind the cloth. If needed repeat the process.



4

Never treat a stain by aiming directly from above.



Accessories for the steam nozzles



1

Drain cleaner (steam drains free of blockage, Steam level 3).



2

Small nylon brush (scrubbing of tough dirt).



3

Natural fibre brush small/big (cleaning of delicate surfaces).



4

Copper brush (scrubbing of hard surfaces! Pay attention not to scratch).

Iron



1

Always pay attention to the ironing indication of the clothes producer on the clothing label.



Iron




- 2 Plug in the Iron and set the temperature. When the lamp turns off the temperature is reached. Only use steam in the temperature area indicated by the line.



- 3 Release the initial steam on a cloth to remove condensed water from the tube.



- 4 Steam level 1 (delicate fabrics).

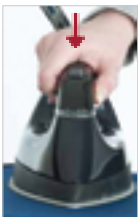

- 5 Steam level 2 (Shirts, pants, table clothes).



- 6 Steam level 3 (Steaming of jackets, or multiple layer ironing).



Window wiper



1 Connect the window wiper with the connector to the hose.



2 Set the wiper on the brush side, steam and brush the windows.



3 Press the switches on the control handle on 0, turn the wiper on the squeegee side and wipe the window dry from the top to the bottom. Wipe away the dirty water with a cloth.

Cleaning the unit

Overtime lime scales residues can deposit in the boiler. The patented system of the steamer avoids the scaling of the boiler walls. Therefore the boiler only needs to be rinsed and not descaled with special products.



1 Open the security cap as in “Water filling” and use it as a screwdriver to loosen the drain cap. Pay attention that the water is not hot. Rinse with clear water until no lime scales come out from the boiler.

Iron

- Connect your iron only to a Sauber Brilliance steam generator with a voltage between 220V and 240V.
- The soleplate and generator iron-rest can become very hot and cause burns: never touch these parts.
- Take care that you do not come into contact with electrical cords with the hot iron soleplate. Ensure that the cord does not come into contact with sharp edges.
- The steam produced by the iron can reach very high temperatures which can cause burns. Do not direct the steam towards persons, animals or plants.
- Always put the iron with the sole plate down on the iron rest plate (silicone side with the pins).
- Do not immerse the iron in water.

Security cap

- The security cap should not be opened when the unit is still under pressure. The red indicator in the cap moves to the top.
- You should never press the indicator down with an object and turn the cap at the same time.
- When there is no more pressure in the tank, the indicator falls down and the cap can be opened. In case of doubt, contact Sauber Customer Service.

Customer Service

For Customer Service or product enquiries please visit our website or call:

1800 SAUBER
1800 728 237
www.sauber.com.au
www.sauber.co.nz



Technical Data

Dimensions: 32 x 54 x 30cm
Weight: 7.3 kg
Voltage: 240V/50Hz
Max heating power: 2000W
Utilisable boiler capacity: 2.4L
Max Pressure in the boiler: 3.6 bar
Boiler Material: Inox steel
Patented self-decalcifying system

Professional Iron Technical Data

Voltage: 240V/50Hz
Wattage: 750W



Approved by the National Asthma Council Australia and Asthma Foundation's (NZ) Sensitive Choice program. On the basis of its exclusive five stage medi-clean™ filtration system.

Parts and Accessories

Product Name	Product Code
Floor tool assembly	31110222
Cloth pad	31400146
Square brush	31151780
High pressure nozzle	31151781
Tool kit	31600041
Plastic bottle	63200313
Iron	31151782
Safety cap	33101060

S

2 Year Warranty Sauber Brilliance



Conditions of warranty

Your Sauber cleaner, in the case of domestic use, has a 2 year parts and labour warranty, in the case of commercial use, is limited to a 6 month parts and labour warranty on the body and pump and 3 month on the fittings, against product defect and failures when the product is used in accordance with the terms and conditions of this warranty statement.

This warranty commences from the original date of purchase and is not transferable; please retain your original proof of purchase for any warranty claims. This warranty is valid only in the country where the steam cleaner is purchased.

The appliance must be operated in accordance with these instructions and used only for domestic ironing and steam cleaning applications. This appliance is not fit to be used as an industrial iron and if used in these circumstances may be harmful to your appliance and may void the manufacturer's warranty.

Accessories and consumable, unless defective in manufacture, are not subject to this warranty. In order to prolong the life of accessories and consumable, regular care and maintenance is recommended.

When properly used and cared for, your steam cleaner will render excellent service; refer to the instruction manual for further details, as misuse or failure to follow the instructions makes this warranty void.

In the event of service or advice being needed, please contact Sauber Customer Service, Level 1, Building 2, Brandon Business Park, 530 Springvale Road, Glen Waverley, Vic 3150, or on 1800 728 237, Monday-Friday 9am-5pm EST.

The decision to repair or replace the cleaner is at the sole discretion of Sauber. If Sauber decide to repair or replace the cleaner, it will do so at its own cost.

Sauber is unable to accept responsibility under this warranty for any repair work not carried out by an authorised Sauber Service Agent or from the use of non-genuine parts. If any part is no longer available or manufactured, Sauber will replace it with a genuine functional replacement part. This warranty does not apply to the cost of replacing any parts of the product due to normal wear and tear, alterations, improper installation, physical abuse, misuse or accidental damage. Any transportation costs involved in the repair of defective parts shall be borne by the claimant.

If proof of purchase cannot be provided at the time of a warranty claim or service, any work carried out on the cleaner is chargeable.

The repair or replacement of the cleaner under this warranty does not extend the original period of warranty.

The benefits conferred by this warranty are in addition to all other rights and remedies in respect of the product as outlined under the Competition and Consumer Act and other State and Territory laws.

"Our goods come with guarantees that cannot be excluded in the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure."