

**SEIKO**

SINCE 1881

INSTRUCTION MANUAL FOR WATCH CALIBRE

4R36

## **Cal. 4R35/36/37/38/39**

<b>INSTRUCTIONS</b>	<b>(P. 3)</b>
<b>BEDIENUNGSANLEITUNG</b>	<b>(S. 27)</b>
<b>INSTRUCTIONS</b>	<b>(P. 54)</b>
<b>ISTRUZIONI</b>	<b>(P. 79)</b>
<b>INSTRUCCIONES</b>	<b>(P. 105)</b>
<b>INSTRUÇÕES</b>	<b>(P. 131)</b>
<b>ИНСТРУКЦИИ</b>	<b>(P. 157)</b>
<b>用法說明</b>	<b>(182 頁)</b>

You are now the proud owner of a SEIKO Automatic Watch Cal. 4R35/36/37/38/39. To ensure its optimum performance, please read the instructions in this booklet carefully before using it. Please keep this manual handy for ready reference.

Sie sind jetzt stolzer Besitzer eines SEIKO Automatikuhr Kal. 4R35/36/37/38/39. Lesen Sie diese Bedienungsanleitung vor der Verwendung aufmerksam durch, um Ihre Uhr optimal zu nutzen. Heben Sie diese Bedienungsanleitung gut auf, um jederzeit wieder nachlesen zu können.

Vous voici l'heureux propriétaire d'une montre automatique SEIKO Cal. 4R35/36/37/38/39. Pour en obtenir des performances optimales, veuillez lire attentivement cette brochure avant d'utiliser la montre. Conservez ce manuel pour vous y référer en cas de besoin.

Grazie di aver acquistato questo nuovo Orologio Automatico SEIKO Cal. 4R35/36/37/38/39. Per poter utilizzare l'orologio al massimo delle sue prestazioni leggere attentamente questo manuale di istruzioni prima di passare all'uso dell'orologio stesso, e conservarlo poi per qualsiasi eventuale futura consultazione.

Usted es ahora el orgulloso propietario de un Reloj Automático de SEIKO Cal. 4R35/36/37/38/39. Para asegurar el óptimo rendimiento de su reloj, sírvase leer cuidadosamente las instrucciones contenidas en este manual antes de su uso. Guarde este manual en un lugar muy accesible para la rápida referencia.

Você poderá sentir-se orgulhoso de possuir um Relógio Automático SEIKO Cal. 4R35/36/37/38/39. Para garantir o seu excelente rendimento, leia atentamente as instruções contidas neste opúsculo antes de usá-lo. Conserve este manual à mão para consultas futuras.

Вы стали гордым обладателем автоматических часов SEIKO калибра 4R35/36/37/38/39. Чтобы использовать часы оптимальным образом, внимательно прочитайте эту инструкцию, прежде чем приступать к пользованию. Сохраните эту брошюру, чтобы обратиться к ней в случае необходимости.

歡迎購買精工 4R35/36/37/38/39 機型自動手錶。為保證在最佳狀態下操作手錶，請在使用手錶之前仔細閱讀本手冊內的各項使用說明。並妥善保管本使用手冊以備今後參考。

## CONTENTS

	Page
CHARACTERISTICS OF A MECHANICAL WATCH .....	4
NAMES OF THE PARTS.....	5
HOW TO USE .....	9
HOW TO SET THE TIME AND DATE (FOR CAL. 4R35 AND 4R37).....	11
HOW TO SET THE TIME, DAY AND DATE (FOR CAL. 4R36).....	14
HOW TO SET THE TIME (FOR CAL. 4R38 AND CAL. 4R39) .....	17
TO PRESERVE THE QUALITY OF YOUR WATCH .....	18
PLACES TO KEEP YOUR WATCH .....	22
NOTES ON OVERHAUL.....	22
NOTES ON GUARANTEE AND REPAIR.....	23
TROUBLESHOOTING .....	23
ACCURACY OF MECHANICAL WATCHES.....	25
SPECIFICATIONS.....	26

 
# SEIKO CAL. 4R35/36/37/38/39

## CHARACTERISTICS OF A MECHANICAL WATCH (self-winding type, automatic winding type)


- This mechanical watch operates using power obtained from a mainspring.
- If the watch is completely stopped, manually turn the crown approximately 20 times to wind up the mainspring to start the watch.
- While loss/gain of a quartz watch is indicated by a monthly or annual rate, accuracy of a mechanical watch is normally indicated by a daily rate (loss/gain per day).
- Normal usage accuracy of a mechanical watch varies according to conditions of use (time period that the watch is worn on the wrist, temperature environment, hand movement, and winding state of the mainspring).
- When the watch is affected by strong magnetism, it temporarily gains or loses time. If the watch encounters a strong magnetic field, the parts of the watch may be magnetized. In this case, repairs such as removal of magnetism are required. Contact the retailer from whom the watch was purchased.

## NAMES OF THE PARTS

### ● 4R35

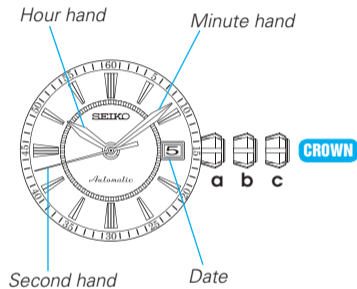


### ● 4R37

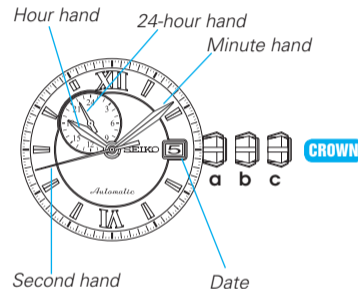 

#### CROWN


- a) Normal position : winding up the mainspring (manual operation)
- b) First click position : date setting
- c) Second click position : time setting
 
## ● 4R36

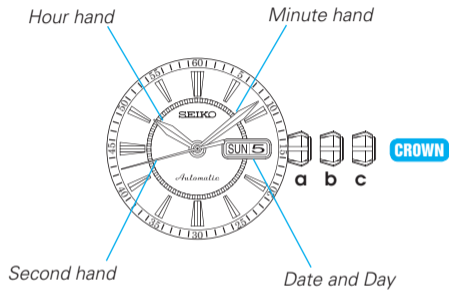**CROWN**


- a) Normal position : winding up the mainspring (manual operation)
- b) First click position : date/day setting
- c) Second click position : time setting

## ● 4R38

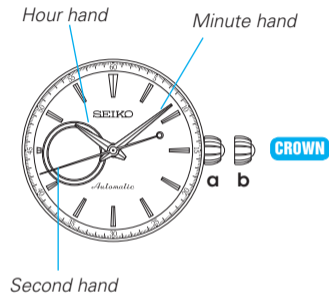 
**CROWN**

- a) Normal position : winding up the mainspring (manual operation)
- b) First click position : time setting

## ● 4R39

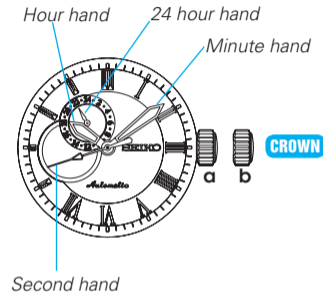 

## ● Check the type of the crown of your watch

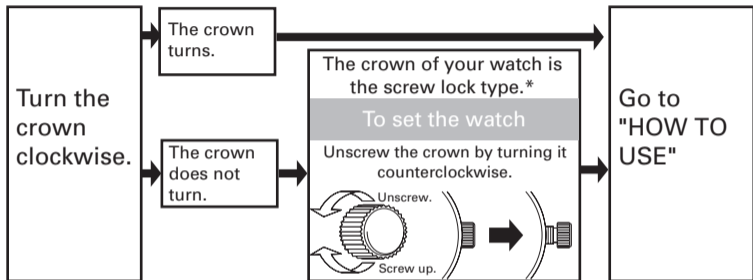 

\* If your watch has a screw-lock crown, the crown will screw into the watch case for added protection.


- After completing all settings of the watch, screw the crown in again by turning it clockwise while pressing it.
- If the crown turns out to be too stiff to be screwed in, turn the crown counterclockwise once and then give another try.
- Do not screw it in by force as it may damage the slots of the crown.

## HOW TO USE

 This watch is an automatic watch equipped with a manual winding mechanism.

- When the watch is worn on the wrist, the motion of the wearer's arm winds the mainspring of the watch.
- If your watch is completely stopped, it is recommended that you manually wind the mainspring by turning the crown.

### ● How to manually wind the mainspring by turning the crown

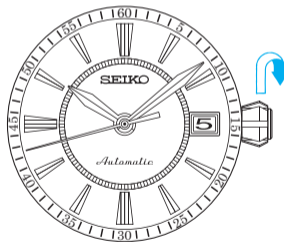

1. Slowly turn the crown clockwise (in the 12 o'clock direction) to wind the mainspring.

*Turning the crown counterclockwise (the 6 o'clock direction) does not wind the mainspring.*

2. Continue to turn the crown until the mainspring is sufficiently wound. The second hand will start moving.
3. Set the time and date before putting the watch on your wrist.

- The winding operation for 4R35, 4R36, 4R37, 4R38 and 4R39 are the same.


- There is no need to turn the crown further when the mainspring is fully wound. But the crown can be turned without damaging the watch mechanism.
- Once the watch is wound up fully, it operates for about 41 hours.
- If the watch is used without being wound up fully, gain or loss of the watch may result. To avoid this, wear the watch for more than 10 hours a day. If the watch is used without wearing on the wrist (if it is used on the desk like a clock, for example), be sure to wind it up fully every day at a fixed time.
- If the watch has stopped with the mainspring unwound, winding the mainspring with the crown will not start the watch immediately. This is because the mainspring torque (force) is low at the beginning of its winding due to the characteristics of mechanical watches. The second hand starts to move when a certain degree of strong torque is reached after the mainspring has been wound up. However, swinging the watch from side to side to forcibly turn the balance can start the watch sooner.

## HOW TO SET THE TIME AND DATE (FOR CAL. 4R35 AND 4R37)

 - Check that the watch is operating, and then set the time and date.
- The watch is provided with a date function and is so designed that the date changes once every 24 hours. The date changes around 12 o'clock midnight. If AM/PM is not properly set, the date will change around 12 o'clock noon.

1. Pull out the crown to the first click. (The second hand continues moving and the accuracy of the watch is unimpaired.)
2. The date can be set by turning the crown counterclockwise. Turn it until the previous day's date appears.

Ex.) If today is the 5th of the month, first set the date to "4" by turning the crown counterclockwise.

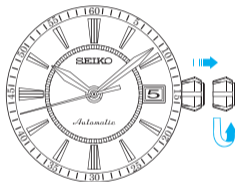


### CAUTION

- Do not set the date between 9:00 p.m. and 1:00 a.m. If you do so, the date may not change properly / it may cause a malfunction.


3. Pull out the crown to the second click when the second hand is at the 12 o'clock position. (The second hand stops on the spot.)

Turn the crown to advance the hands until the date changes to the next. The time is now set for the a.m. period. Advance the hands to set the correct time.

 4. Push the crown back in to the normal position in accordance with a time signal.

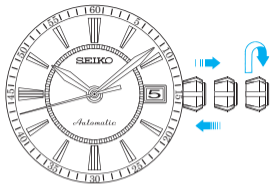

 - Cal. 4R37 has a 24-hour hand, which moves correspondingly with the hour hand. When setting the time, check that the 24-hour hand is correctly set.

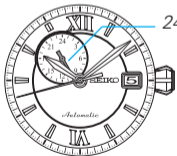

10:08

24-hour hand



22:08

**CAUTION**

 
- The mechanism of mechanical watches is different from that of quartz watches. When setting the time, be sure to turn back the minute hand a little behind the desired time and then advance it to the exact time.

### ● Date adjustment at the beginning of the month

It is necessary to adjust the date on the first day after a month that has less than 31 days.

Ex.) To adjust the date in the a.m. period on the first day of a month following a 30-day month.

- The watch displays "31" instead of "1". Pull out the crown to the first click.
- Turn the crown to set the date to "1" and then push the crown back in to the normal position.

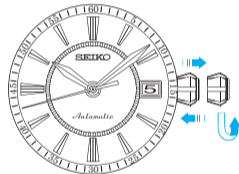**CAUTION**


- Do not set the date between 9:00 p.m. and 1:00 a.m. If you do, the date may not change properly / it may cause a malfunction.

## HOW TO SET THE TIME, DAY AND DATE (FOR CAL. 4R36)

 - Check that the watch is operating, and then set the time, day and date.
- The watch is provided with a day and date function and is so designed that the day and date changes once every 24 hours. The date changes around 12 o'clock midnight, and the day around 4:00 a.m. If AM/PM is not properly set, the date will change around 12 o'clock noon, and the day around 4:00 p.m.

1. Pull out the crown to the first click. (The second hand continues moving and the accuracy of the watch is unimpaired.)
2. The day can be set by turning the crown clockwise.
3. The date can be set by turning the crown counterclockwise. Turn it until the previous day's date appears.

Ex.) If today is the 5th of the month, first set the date to "4" by turning the crown counterclockwise.

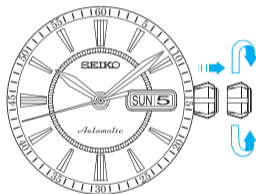


### CAUTION

- Do not set the date between 9:00 p.m. and 4:00 a.m. If you do, the date may not change properly / it may cause a malfunction.

4. Pull out the crown to the second click when the second hand is at the 12 o'clock position. (The second hand stops on the spot.)

Turn the crown to advance the hands until the date changes to the next. The time is now set for the a.m. period. Advance the hands to set the correct time.

 5. Push the crown back in to the normal position in accordance with a time signal.

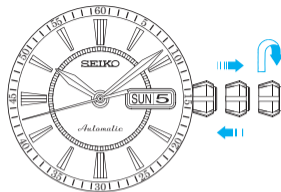


### CAUTION

- The mechanism of mechanical watches is different from that of quartz watches.  
When setting the time, be sure to turn back the minute hand a little behind the desired time and then advance it to the exact time.

## ● Date adjustment at the beginning of the month

It is necessary to adjust the date on the first day after a month that has less than 31 days. Ex.) To adjust the date in the a.m. period on the first day of a month following a 30-day month.

 1. The watch displays "31" instead of "1". Pull out the crown to the first click.
2. Turn the crown to set the date to "1" and then push the crown back into the normal position.

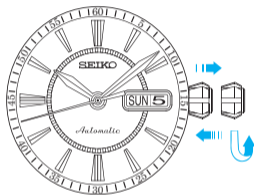


### CAUTION


- Do not set the date between 9:00 p.m. and 4:00 a.m. If you do, the date may not change properly / it may cause a malfunction.

## HOW TO SET THE TIME (FOR CAL. 4R38 AND CAL. 4R39)

 1. Pull out the crown to the first click when the second hand is at the 12 o'clock position. (The second hand stops on the spot.)
2. Turn the crown to set the hour and minute hands to the correct time.
3. Push the crown back in to the normal position in accordance with a time signal.

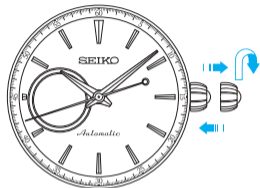

 - Cal. 4R39 has a 24-hour hand, which moves correspondingly with the hour hand. When setting the time, check that the 24-hour hand is correctly set.

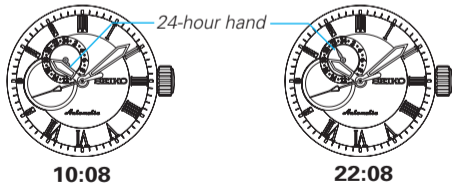

## TO PRESERVE THE QUALITY OF YOUR WATCH



### CAUTION

#### ● **CARE OF YOUR WATCH**

- The case and band touch the skin directly. Keep the case and band clean at all times. This will help to extend the life of the watch and will reduce the risk of skin irritations.
- When you take the watch off, wipe off moisture, sweat or soil with a soft dry cloth as soon as possible. This will help to extend the life of the case, band and gasket.

#### <Leather strap>

- Gently blot up the moisture using a soft dry cloth. Do not rub the leather, as this may cause abrasions or discoloration.

#### <Metal bracelet>

- To keep the bracelet clean, use a soft toothbrush dipped in clean or soapy water. Be careful not to get water on the case.



### CAUTION

#### ● **RASH AND ALLERGIC REACTION**

- Adjust the band to allow a little clearance around your wrist to ensure proper airflow.
- Prolonged and/or repeated contact with the band may cause skin irritation or dermatitis for those susceptible.
- Possible causes of dermatitis
  - Allergic reaction to metals or leathers
  - Rust, contamination or perspiration accumulated on the watch case or band.
- If you should develop any allergic symptoms or skin irritation, immediately stop wearing the watch and seek medical attention.

#### ● **WATER RESISTANCE**



#### ● **Non-water resistance**

If "WATER RESISTANT" is not inscribed on the case back, your watch is not water resistant, and care should be taken not to get it wet as water may damage the movement. If the watch becomes wet, we suggest that you have it checked by the retailer from whom the watch was purchased or your SERVICE CENTER.



● **Water resistance (3 bar)**

If "WATER RESISTANT" is inscribed on the case back, your watch is designed and manufactured to withstand up to 3 bar, such as accidental contact with splashes of water or rain, but it is not designed for wearing while swimming or diving.



● **Water resistance (5 bar)\***

If "WATER RESISTANT 5 BAR" is inscribed on the case back, your watch is designed and manufactured to withstand up to 5 bar and is suitable for wearing while swimming, yachting and taking a shower.



● **Water resistance (10 bar/15 bar/20 bar)\***

If "WATER RESISTANT 10 BAR", "WATER RESISTANT 15 BAR" or "WATER RESISTANT 20 BAR" is inscribed on the case back, your watch is designed and manufactured to withstand up to 10 bar/15 bar/20 bar, respectively, and is suitable for wearing while taking a bath or shallow diving, but not for scuba diving. We recommend that you wear a SEIKO Diver's watch while scuba diving.

- \* *Before using a water resistant 5, 10, 15 or 20 bar watch in water, make sure the crown is pushed in completely. Do not operate the crown when the watch is wet or in water. If used in sea water, rinse the watch in fresh water and dry it completely.*

- \* *When taking a shower while wearing a water resistant 5 bar watch, or taking a bath while wearing a water resistant 10, 15 or 20 bar watch, make sure to observe the following:*
- *Do not operate the crown when the watch is wet with soapy water or shampoo.*
  - *If the watch is left in warm water, a slight time loss or gain may be caused. This condition, however, will be corrected when the watch returns to normal temperature.*

**NOTE:**

*Pressure in bar is a test pressure and should not be considered as corresponding to an actual diving depth since swimming movements tend to increase the pressure at a given depth. Care should also be taken when diving with the watch into water.*

**PRECAUTIONS ON WEARING YOUR WATCH**

- Exercise care when you hold an infant or small child while wearing the watch on your wrist, as the infant or child may be injured or develop an allergic reaction caused by direct contact with the watch.
- Avoid undue shocks such as dropping or scratching against hard surfaces or playing active sports, which may cause temporary malfunctions.
- There is a possibility of injury caused by wearing the watch on your wrist especially if you fall down or bump into other people or objects.

## PLACES TO KEEP YOUR WATCH

- Do not leave the watch in a place where it will be subjected to strong magnetism (for example, near television sets, loudspeakers or magnetic necklaces) or static electricity.
- Do not leave the watch where there are strong vibrations.
- Do not leave the watch in dusty places.
- Do not expose the watch to chemical substances or gases.  
(Ex.: Organic solvents such as benzine and thinner, gasoline, nail polish, cosmetic sprays, detergents, adhesives, mercury, and iodine antiseptic solution.)
- Do not leave the watch in close contact with hot spring water.

## NOTES ON OVERHAUL

- The watch is a precision device with many moving parts lubricated with special oils. If the parts run short of oil or get worn out, the watch may lose time or stop operation. In such a case, have the watch overhauled.

## NOTES ON GUARANTEE AND REPAIR

- Please contact the retailer the watch was purchased from or SEIKO CUSTOMER SERVICE CENTER for repair or overhaul.
- Within the guarantee period, please present the certificate of guarantee to receive repair services.
- Guarantee coverage is provided in the certificate of guarantee. Please read carefully and retain it.

## TROUBLESHOOTING

Problem	Possible causes	Solutions
The watch stops operating.	The power supplied by the mainspring has been consumed.	Turn the crown or swing the watch to wind it up. The watch will start operating. If the watch does not start, consult the retailer from whom the watch was purchased.
Even though you wear the watch every day, it soon stops operating.	The watch is worn on your wrist only for a short period of time, or the amount of arm movement is small.	Wear the watch for an extended period of time, or when taking off the watch, turn the crown to wind the mainspring.

Problem	Possible causes	Solutions
The watch gains/loses time temporarily.	The watch has been left in extremely high or low temperatures for a long time.	Normal accuracy will resume when the watch returns to normal temperature.
	The watch was brought into close contact with a magnetic object.	Normal accuracy will resume when the watch is kept away from close contact with the magnetic source. If this condition persists, consult the retailer from whom the watch was purchased.
	You dropped the watch, hit it against a hard surface or wore it while playing active sports. The watch was exposed to strong vibrations.	Normal accuracy will not resume. Consult the retailer from whom the watch was purchased.
	The watch has not been overhauled for more than 3 years.	Consult the retailer from whom the watch was purchased.
The date change at 12 o'clock noon.	AM/PM is not properly set.	Advance the hands by 12 hours.
The glass is blurred and the blur persists for a long time.	Water got inside the watch due to the deterioration of the gasket, etc.	Consult the retailer from whom the watch was purchased.

- For the solution of troubles other than listed above, contact the retailer from whom the watch was purchased.

## ACCURACY OF MECHANICAL WATCHES

- The accuracy of mechanical watches is indicated by the daily rates of one week or so.
- The accuracy of mechanical watches may not fall within the specified range of time accuracy because of loss/gain changes due to the conditions of use, such as the length of time during which the watch is worn on the wrist, arm movement, whether the mainspring is wound up fully or not, etc.
- The key components in mechanical watches are made of metals which expand or contract depending on temperatures due to metal properties. This exerts an effect on the accuracy of the watches. Mechanical watches tend to lose time at high temperatures while they tend to gain time at low temperatures.
- In order to improve accuracy, it is important to regularly supply energy to the balance that controls the speed of the gears. The driving force of the mainspring that powers mechanical watches varies between when it is fully wound and immediately before it is unwound. As the mainspring unwinds, the force weakens.  
Relatively steady accuracy can be obtained by wearing the watch on the wrist frequently for the self-winding type and winding up the mainspring fully everyday at a fixed time to move it regularly for the wind-up mechanical type.
- When affected by external strong magnetism, a mechanical watch may lose/gain time temporarily. The parts of the watch may become magnetized depending on the extent of the effect. In such a case, consult the retailer from whom the watch was purchased since the watch requires repair, including demagnetizing.

# SPECIFICATIONS

1	Features	
	4R35.....	3 hands, time display (Hour, minute and second hands), and date display
	4R36.....	3 hands, time display (Hour, minute and second hands), day and date display
	4R37.....	4 hands, time display (Hour, minute, second and 24-hour hands) and date display
	4R38.....	3 hands, time display (Hour, minute and second hands)
	4R39.....	4 hands, time display (Hour, minute, second and 24-hour hands)
2	Vibrations per hour.....	21,600
3	Operational temperature range.....	Between -10 °C and 60 °C (Between 14 °F and 140 °F)
4	Continuous operating time .....	More than approx. 41 hours
5	Driving system.....	Automatic winding type with manual winding mechanism
6	Jewels	
	4R35.....	23 jewels
	4R36, 4R37, 4R38 and 4R39.....	24 jewels
7	Magnetic resistance .....	4,800 A/m (60 gauss)

- The specifications are subject to change without prior notice for product improvement.