

ZTE F252

HSDPA Dual band 3G Mobile Phone

User Manual

PC Software Requirements

Join Me PC Software included supports Windows 2000 with Service Pack 4 or Windows XP with Service Pack 2 only.

Warnings and Safety Notices

Please read all the safety notices before using this device

Copyright © 2007 ZTE Corporation All rights reserved.

1st Edition February 2007

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

ZTE Corporation operates a policy of continuous development. ZTE Corporation reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages.

The user should refer to the enclosed warranty card for full warranty and service information.

Contents

RF Safety Information	5
General Safety Information.....	6
Support Information	8
1 Getting Started	12
1.1 Install the USIM Card	12
1.2 Insert the Battery	13
1.3 Switch the Phone on and Connect the Charger.....	14
1.4 Charging and Battery life	15
1.5 Basic Navigation.....	16
1.6 Enter your Contacts.....	18
1.7 Edit your Contacts to Change Ringtones and Groups.....	20
1.8 Set Speed Dials.....	21
1.9 Make a Call	22
1.10 Send an SMS (Text Message).....	24
1.11 Emergency Calls	25
1.12 Notes on Text modes, Predictive Text and Special Characters	26
1.13 Personalise your Phone	28
1.14 Using File Manager	33
1.15 Make a Video Call	34
1.16 Receive a Video Call	35
1.17 Set Alarms and Appointments.....	36
1.18 Send an E-mail.....	38
1.19 Take Pictures and Videos	39
1.20 Send a Multimedia Message (MMS).....	41

1.21	Browse the Internet using Telstra My Place	42
1.22	Download Music, Pictures, Ringtones and Games	43
1.23	Use your Phone as a Music Player (MP3 Player)	44
2	Advanced Operation	46
2.1	Use Join Me to Connect your Phone to your PC	46
2.2	Installing Join Me.....	47
2.3	Use Join Me to Copy your Pictures to your PC.....	48
2.4	Use Join Me to Copy Music Files from your PC to your Phone.....	50
2.5	Enter your Contacts using Join Me	52
2.6	Import your Contacts from Microsoft Outlook.....	54
2.7	Use Join Me to Connect your PC to the Internet.....	55
2.8	Send a Fax from your PC	57
2.9	Connect to a Bluetooth Device	58
2.10	Other Facilities	62
2.11	Advanced Message Settings	67
2.12	Advanced Handset Settings	70
2.13	Advanced Call Settings	71
3	Technical Information and Help	74
3.1	Troubleshooting and FAQ's	74
3.2	Glossary of Terms	76
3.3	Technical Parameters.....	77
4	Environmental Statement	78
5	Menu Listing	80
6	Index	82

RF Safety Information

The handset has an internal antenna located under the bottom of the keypad. For optimum performance with minimum power consumption do not cover the antenna area with your hand. Hold the handset between thumb and finger on the main hinge section. Covering the antenna affects call quality, may cause the handset to operate at higher power level than needed, and may shorten talk and idle times.

Radio Frequency Energy

Your handset is a low-power radio transmitter and receiver. When switched on it intermittently transmits radio frequency (RF) energy (radio waves). The transmit power level is optimized for best performance and automatically reduces when there is good quality reception. Maximum power is only used at the edge of network coverage so under most circumstances the power output is very low. Under poor network conditions the phone will transmit at a higher power, may get hot and will have a significantly shorter battery life.

Declaration of Conformity

We declare under our sole responsibility that the product(s) detailed in this manual, and in combination with our accessories, conform with the essential requirements of The Radio Communications Standard (Electro-magnetic Radiation Human Exposure) 2003 and the Australian Communications and Media Authority Section 376 of the Telecommunications Act 1997.

General Safety Information

The handset contains delicate electronic circuitry, magnets and battery systems. You should treat it with care and pay attention to the following points:

- Handle the handset with care. Do not drop or throw the handset down roughly.
- Do not immerse in any liquid. The handset contains a liquid detection sticker and the warranty will be voided by any liquid damage.
- Do not place the handset near computer disks, credit cards, and other magnetic media. The information contained on disks or cards may be erased or damaged.
- Do not leave the handset or battery in direct sunlight or near other heat sources where the temperature could exceed 45 °C
- Keep the handset, battery, charger and any other accessories away from children.
- In the unlikely event of a battery leak avoid contact with your eyes or skin. In the event of contact please flush thoroughly with water and consult a doctor.
- Observe and obey warning signs at petrol stations, airports and hospitals.
- The operation of some medical electronic devices, such as hearing aids and pacemakers, may be affected by the handset.
- Take care not to allow metal objects such as coins or keys to come into contact with the battery.
- Do not dispose of batteries in a fire.
- Do not throw used batteries into household rubbish, return them to a recycling point. (see Chapter 4)
- Do not connect the handset to any other chargers or cigarette lighter chargers.
- Only use the supplied charger.
- Be careful not to pierce the battery with sharp objects and do not use damaged batteries.

- Do not disassemble or modify the battery.
- Stop using the battery if abnormal heat, odour, discolouration, deformation, or abnormal condition is detected during use, charge, or storage.
- Do not put the battery in your mouth.
- Only use original replacement batteries.
- Do not attempt to dismantle the handset or any of its accessories.
- Do not place the handset close to the edge of a table in case it moves when set on vibrate mode.
- Do not put the handset into a microwave oven, dryer, or high-pressure container.
- Do not use your handset while driving or operating other machinery.
- Do not use the handset where blasting is in progress.
- Switch your phone off when boarding aircraft.
- Do not leave your handset at the bottom of a bag where it may be damaged by sharp objects.
- Do not leave the handset discharged or disconnected for a long time, otherwise your personal data may be lost.
- Remember to make backup copies of all important data on your handset
- Take care when your phone is in your pocket. Sitting down may damage the handset.
- It is normal for the handset to become warm while the battery is being charged.
- Under poor network conditions battery life is considerably reduced
- When the battery is thrown away cover the terminals with insulating tape.
- Please recycle the packaging and all parts as stated in Chapter 4.

Support Information

- For technical support please consult this manual and search our web site and FAQ section at www.zte.com.au. For Warranty Service in the event of a fault please call 1800 670 796.
- Please do not call the warranty service line for general support enquiries.
- All calls for PIN number enquiries, Network problems, Telstra Next G Services, BigPond account information, Web Access, Account and Billing Information, USIM card registration and general enquiries should be directed to Telstra on 125 111.

Warranty Information

The warranty does not apply to defects or errors in the product caused by:

- (a) Reasonable abrasion
- (b) Misuse including mishandling, physical damage, improper installation, unauthorized disassembly of the product
- (c) Water or any other liquid damage
- (d) Any unauthorized repair or modification
- (e) Power surges, lightning damage, fire, flood or other events outside ZTE's reasonable control
- (f) Use of the product with any unauthorized third party products such as generic chargers
- (g) Any other cause beyond the range of normal usage for products.

The End User shall have no right to reject, return, or receive a refund for any product from ZTE under the above-mentioned situations.

Key Layout





Left view



























Right view

Notes

- The handset is available in various colours. For illustration purposes only the above images are shown in black.
- There is no keylock available. This is common to Clam Shell designs because the keys are protected by closing the flip.

 
Display Icons

	Signal Strength of the GPRS Network		Battery Level Indicator
	Signal Strength of the 3G Network		Missed Call
	New SMS Message		Missed Video Call
	New Multimedia Message		Call Forward is Active
	New E-mail		Silent Mode
	New Wap Push Message		Vibrate mode enabled
	Message Memory is Full		Headset Mode
	Multimedia Message Memory is Full		Headset and Vibrate Mode
	E-mail Memory is Full		GPRS Attach
	Wap Push Message Memory is Full		PDP Context Established (Data
	Roaming		Signal Strength of the EDGE Network
	Alarm is set		Bluetooth ON

1 Getting Started


1.1 Install the USIM Card

The **USIM card** (Universal Subscriber Interface Module) is the small plastic chip with gold contacts supplied by Telstra. This contains your phone number and acts as a store for your contacts. It can be moved between different phones if required. Insert this face down into the carrier inside the back panel of the phone. Make sure it is pushed all the way to the left as shown below:

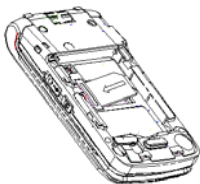

1.2 Insert the Battery

 Insert the battery carefully with the contacts located against the gold springs. The battery will only fit one way.

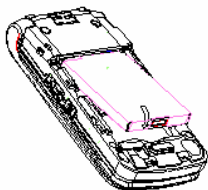


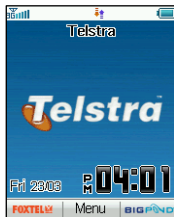 
Close the case by locating the plastic cover into the grooves and *sliding* the cover up to close it. Do NOT force the cover down by pressing on it. This will damage the cover.



Slide the cover up gently

1.3 Switch the Phone on and Connect the Charger

Press and hold the  key for two seconds to switch your phone on. The phone takes about 10 seconds to initialize. Enter the PIN number supplied by Telstra with your USIM card. The start up screen below is referred to throughout the manual as the **Idle Screen** :



Charge your Phone

Insert the charger lead carefully with the arrow on the top. The lead only fits one way. Do NOT use excessive force to insert the lead. Check it is the right way round.



1.4 Charging and Battery life

- Only use the charger supplied.
- Normal charge time is 2-3 hours.
- When not using the phone for a long period remove the battery and store it in a cool dry place.
- Do not leave the phone connected to the charger for extended periods of time eg > 24 hrs.
- If the battery is not fully charged after 3 hours please stop charging.
- Charge the battery between 0°C~50°C. If the temperature of the handset is too high, switch it off and let it cool.
- Battery life can be maximized by regularly allowing the phone to fully discharge before recharging the battery.
- Charge the battery promptly when flat.
- Under poor network conditions (less than 2 bars) it is normal for the battery to only last 1 day.
- To maximize battery life turn off Bluetooth and reduce the back lighting to 10 seconds (see Section 1.13 - 'Personalise your Phone').

1.5 Basic Navigation

From the **Idle Screen** press the **OK Key** to access the **Main Menu**:



Idle Screen

OK



Main Menu

The icons are described at the bottom of the screen.

Arrow Keys

Use the **Arrow Keys** for shortcuts to menus, to move around the **Main Menu** and to move the cursor

Up (Shortcut to My Place)

Left (Shortcut to E-Mail)



Right (Shortcut to SMS Messages)

Down (shortcut to Contacts)



Select Keys

The two keys at the top of the keypad are called the **Select Keys**.



The left and right **Select Keys** are used to choose the options from the bottom of the screen. In the above example the **Left Select Key** opens **Foxtel** and the **Right Select Key** launches **BigPond**.

Back and Exit Keys

Press the  key to go back one step or the  key to **Exit** to the **Main Menu**.

1.6 Enter your Contacts

There are several methods available to enter contacts into your phone. The Getting Started Section deals with adding your contacts manually and copying contacts from a previous SIM card. See the Advanced Section for adding contacts from your PC and importing contacts from Microsoft Outlook. All contacts can be stored in **Groups** for easy management.

Adding Your Contacts Manually


- At the Idle Screen enter the phone number on the keypad then press the Left Select Key to Save.
- Press the OK Key to Create New Contact.
- Add the persons name using the abc keys (see notes on entering text in section 1.12).
- Press the OK Key to Save.

Copy Contacts from a previous SIM Card

- Insert your old SIM card. Switch the phone on and press the **Down Arrow Key** to enter **Contacts**
- Press the Right Arrow button once for USIM to show the list of Contacts from your old SIM card.
- Press **Options, More, Copy all to phone**, press **OK** to Select and then press **Yes** to confirm.

Add a contact from a received call number

If someone calls you and you wish to save their number as a new contact, perform the following:

- Press the  key to bring up your Call List.
- The last call received will be at the top of the list.
- Press the Right Select Key to Save the number.
- Enter the contact name and any other details and press the OK Key to Save.

Add a contact from a received SMS (Text Message)

You can save a Contact from a received SMS:

- Press the **Right Arrow Key** to access your SMS Menu and go to your Inbox.
- View the required message and press **Options**. Press **Use highlight object** to save the number.
- Choose New Contact to create a new contact from the received SMS number.

Searching Contacts

You can search your contacts by pressing the letter keys that correspond to your contact name. From the contacts list press any letter key to bring up the contacts associated with that letter.

1.7 Edit your Contacts to Change Ringtones and Groups


Once you have added some contacts you can edit them to change the Group and to set a personalised Ring Tone.

- Contacts are normally stored in the default Group, Unclassified.
- You can move your contacts into other Groups: Mates, Family, Friends, Work, and VIP.
- Regardless of Group, all your contacts are displayed under All.
- From the Idle Screen go to your Contacts list by pressing the OK Key—Contacts or just press the **Down Arrow Key**
- Use the arrow keys to search and press OK to View the required Contact.
- Press **OK** to Edit the Contact.
- When you are in Edit mode you can assign a specific Group and change the Ringtone if desired.
- Use the **Down Arrow key** to navigate through the menu.
- Use the **Right Select Key** to Modify the incoming Ringtone.
- Use the **Left or Right Arrow keys** to change Groups.
- Changing the Ringtone to a personalised tune will let you recognise key callers instantly

by their unique tune.

1.8 Set Speed Dials

Once you have entered some contacts you can assign speed dial keys to your chosen contacts:




- Press **Down Arrow Key** to enter the **Contacts** menu.
- Use the Arrow Keys to scroll to the contact you wish to assign a Speed Dial Number.
- Press the **Left Select Key** for Options.
- Press 3 or scroll down to item 3 for Set Speed Dial.
- Assign your chosen contact to the next available number (1,2 and 3 are preset and cannot be changed).
- Press the **OK Key** to Setup the speed dial (or to Cancel an existing speed dial).
- Press the  key to exit when finished or the back key to choose another contact.

Make a call using Speed Dial



- From the Idle Screen press and hold the required Speed Dial Key to make a call to that contact.
- E.g. A long press on the 1 key will automatically dial your voicemail number.

1.9 Make a Call




Dial the number manually

- If required press the * key twice for the International Prefix '+'.
- Enter the number on the keypad and press the  key to make the call.
- When the call is connected you can press the OK Key for Handsfree mode.
- Press the  key to end the call.

Choose a number from your Contacts list

- Press **Down Arrow Key** to enter the **Contacts** menu.
- Use the **Up and Down Arrow Keys** to scroll to your chosen contact.
- Press the  key to make the call.
- When the call is connected you can press the **OK Key** for Handsfree mode.
- Press the  key to end the call.

 
Choose a number from your call list (incoming, outgoing and missed calls)

- Press the  key to bring up your call list.
- Use the Up and Down Arrow Keys to scroll to the desired number (last number redial select the top number).
- Press the  key to make the call.
- When the call is connected you can press the OK Key for Handsfree mode.
- Press the  key to end the call.

Notes

- You can adjust the volume using the side keys.
- The microphone is under the small hole between the **7** and the *** key**. Be careful not to block it with your hands.
- Press the **Left Select Key** for further options during a voice call. Use the Back key to return to the call menu.
- Hold: Puts the current call on hold. You can dial a third party. Press hold again to switch your two calls.
- Record: Record the current call. The audio file will save to Tools-File-File Manager-Audios-My Audios.
- DTMF Off/On: Enable or disable sending DTMF tones. Default is ON.
- SMS: Switch to SMS interface during a call.
- Contacts: Switch to Contacts interface during a call.

1.10 Send an SMS (Text Message)

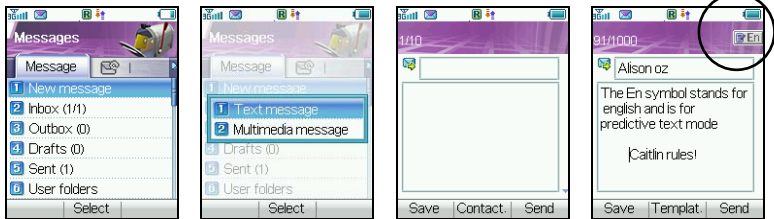



From the **Idle Screen** press the **Right Arrow Key** to open the Messages Menu:



- Press the **OK Key** to select New Message. Press the **OK Key** to select Text Message.
- Press the **OK Key** to select from your Contacts list or enter your number manually
- Select the chosen contact and press the **OK Key** twice to enter your contact.
- Press the **Down Arrow key** twice to move the cursor into the text field.
- The default text mode is Predictive Text indicated by the En symbol for English (see 3.11 for more details).
- Enter your text by pressing the corresponding keys once for each letter you require eg 43556 for hello.
- To change into conventional abc text mode press the # key to toggle between En, 123, ABC and abc modes.
- When completed press the Right Select Key to Send your message.

1.11 Emergency Calls

To make an emergency call during normal use

- 1 Ensure that your handset is switched on and in service.
- 2 Press the  key repeatedly to clear the display and return to the **Idle Screen**.
- 3 Enter the emergency number for your present location using the keypad, (eg 000)
- 4 Press  key to call the number. Follow instructions received and do not end the call until told to do so.

To make an emergency call without a USIM Card

When the USIM card is not inserted enter the emergency number and press  or  to make the call.

Notes

- Tell the operator which service you require. Give your position and remain stationary to get the best coverage.
- Due to the nature of the cellular system the connection of emergency calls cannot be guaranteed.
- Never rely solely on any wireless device for essential communications like medical emergencies.

1.12 Notes on Text modes, Predictive Text and Special Characters

- Your current text mode is indicated by En (predictive text), 123, ABC or abc displayed directly beneath the battery symbol.
- Use the # key to switch between different text modes En, 123, ABC and abc.
- In ABC or abc mode press the key with the required letter once for the first letter, twice for the second letter etc.
- Press and hold the key to enter the corresponding number.
- To insert a space press the 0 key. To delete letters press the **Clear key**.
- If the next letter is on the same key, wait until the cursor appears or press the **Right key** to move the cursor on.
- Press the **1 key** for common punctuation marks.
- Press the *** key** for special characters.
- Predictive text (En) is based on a built-in dictionary and generates words from the combination of letters pressed.
- In En mode press the letter keys once for each letter. For example to write "set", press 738.
- In En mode when you finish writing the word and it is correct, press OK to confirm or 0 (space) to move on.
- If the word is not correct use the * key to toggle between different available words and press OK to confirm.
- If your word is not available then enter it manually using abc mode as above.

Unicode Characters and SMS Message Length



The underlined characters in the above chart are Unicode Characters. This means that they are not part of the standard SMS character set and they require 2 SMS characters to transmit them. Normal SMS message length is 160 characters. If you exceed this the message will be sent by 2 SMS Messages. If you use any of the underlined characters in your message the message length is limited to 70 characters. If you exceed 70 characters then the message will be sent using 2 SMS messages.

1.13 Personalise your Phone

There are many ways to change the look and feel of your handset such as changing the background screen (wallpaper), choosing your own ring tone and changing the shortcut keys. Advanced options such as downloading your own music and picture files are dealt with in the Advanced section of the manual and generally require a PC. Advanced users will be able to explore the menus and set their preferred options as all the menus are intuitive and self explanatory.

Change the Background Screen (Wallpaper)

- From the Idle Screen press the **OK Key** for the Main Menu.
- Press the Down Arrow then the **Left Arrow** for Settings, press the **OK Key**.
- Press **OK Key** to select Wallpaper. This opens the **File Manager** area of the phone.
- Press **OK Key** to open the Photos folder, scroll down and OK to open the Wallpapers folder.
- Choose a background screen from the available list and press Set to confirm.
- Once you have your own pictures saved on the phone you can select these from the My Pictures folder, see the Advanced Section for more details.

Change your Ringtone

- From the Idle Screen press the **OK Key** for the Main Menu.
- Press the **Down Arrow** then the Left Arrow for **Settings**, press **OK**.
- Press the **Right Arrow key** twice to get to **Profiles**.
- Press the **Right Select Key** to Edit your current profile.
- Press the **OK Key** to modify the Ringtone.
- Browse to Audios, Ring to see the available built in tones.
- In the advanced section you can download and choose your own music files as the ringtone.

Switch on Vibrate Mode - Long press the # Key to enable Silent Mode

- From the Idle Screen press the **OK Key** for the Main Menu.
- Press the **Down Arrow** then the **Left Arrow** for **Settings**, press the **OK Key**.
- Press the **Right Arrow key** twice to get to **Profiles**.
- Press the **Right Select Key** to **Edit** the profile.
- Go to 3) **Ring Mode** and press the **OK Key** to modify.
- Select the required mode and press the **OK Key** to confirm.

Switch the Key Tones off

- From the Idle Screen press the OK Key for the Main Menu.
- Press the **Down Arrow** then the **Left Arrow** for **Settings**, press **OK**.
- Press the Right Arrow key twice to get to Profiles.
- Press the Right Select Key to Edit the profile.
- Go to 5) and switch them off if you prefer to have silent keys.

Change the Screen Brightness

- From the Idle Screen press the OK Key for the Main Menu.
- Press the **Down Arrow** then the **Left Arrow** for **Settings**, press **OK**.
- Go to 3) for Brightness.
- Use the Up and Down arrows to set your desired level.

Mute the Handset with a Single Key Press

- You can mute your handset and switch it to vibrate mode by pressing and holding the # key.
- Press and hold the # key to engage and disengage Mute.

Change the Backlight Duration

Reducing the backlight duration to 10 seconds can improve battery life.

- From the Idle Screen press the OK Key for the Main Menu.
- Press the **Down Arrow** then the **Left Arrow** for **Settings**, press **OK**.
- Go to 2) for Backlight Duration.
- Set the desired time out for the backlight.

Set the Owner name

The owner name is displayed on the Idle Screen.

- From the Idle Screen press the OK Key for the Main Menu.
- Press the **Down Arrow** then the **Left Arrow** for **Settings**, press **OK**.
- Go to 4) for Owner Name.
- Type your name and press the OK Key to save.

Disable or change the PIN Number

- From the idle screen press the **OK key** for the main menu.
- Press the **Down Arrow** then the **Left Arrow** for **Settings**, Press the **OK Key**.
- Press the Right Arrow key Three times for Security.
- Press OK to Select Activate Security Codes.
- Press OK to Select PIN code.
- Switch ON or OFF and enter the PIN number to confirm.
- To change the PIN Number select Change Security Codes.
- Press OK to Select PIN code.

Notes on PIN Codes

- PIN Code 1 is provided by Telstra.
- PIN2 Code is an additional PIN associated with your USIM card and is not normally used.
- Handset Lock is an additional PIN code used when you switch on the phone.
- If you forget your Handset Lock code your handset will need to be repaired and you will lose your content. It cannot be reset after it is locked.

Customise the Shortcut Keys

From the Idle Screen you can press the Arrow Keys to access various menus. It is possible to change the shortcut keys to your own preference. The default options are shown below.



To change the shortcut keys

- From the Idle Screen press the **OK Key** for the Main Menu.
- Press the **Down Arrow** then the **Left Arrow key** for Settings, press the **OK Key**.
- Press the **Right key** for Handset Settings.
- Go to 5) for Shortcut Keys and make your preferred choices from the available list.

 
This is just a small section of what can be customized. We encourage users to play with the phone to explore all the available menu choices. See the Menu Listing in the Advanced Section for the complete menu structure.



1.14 Using File Manager

All user files and downloaded content are stored in the File Manager section of the handset. This contains Pictures,, Wallpapers (background screens), Audio Files, Ringtones, Videos, Voice and Video recordings and Others containing all your downloaded internet files. You can also access and register any external memory (T Flash) via the **File Manager** application. To allow third party applications to access the external memory, please access it first with File Manager.

- From the Idle Screen press the **OK key** for the Main Menu then press 1 or go to Tools and press the **OK Key**.
- Press the **OK Key** to open the File Manager menu.
- The File Manager folder structure is:
- Photos
 - My Pictures
 - Wallpapers
- Audios
 - Ring
 - My Audios
- Videos
 - My Videos
- Others
 - Downloaded Content and Games

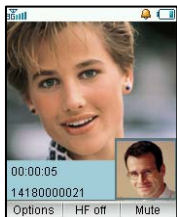1.15 Make a Video Call



- You need good quality 3G coverage to make and receive video calls.
- Enter the phone number using the keypad or from your Contacts list.
- Press  to make a video call.
- Press  to end the call.
- If the call is not successful you will be asked if you want to try a voice call instead.

Press the **Left Select Key** for the following options during a video call:

- **Hold:** Sends a still picture instead of your own image and the voice is muted.
- **Start recording video:** Records video reception from the other party (i.e. received video stream).
- **Block my picture:** Send a still picture instead of your own image.
- **Brightness:** Adjust the brightness.
- **Zoom:** Change the magnification of your own image.
- **Own picture off:** Hide your picture.
- **New text message:** Send SMS during a video call.
- **Contacts:** Switch to Contacts interface.

1.16 Receive a Video Call



 
You will only be able to receive a video call when you have good 3G coverage with at least 3 signal bars. If you are browsing or playing video or audio files then the browser or media player will be suspended in the background while you answer the video call. When the call has terminated you can resume your previous operation.

When you receive an incoming Video call

- You will receive an incoming video call notification.
- Press the Video call key to receive the video call.
- Press End key to end the video call.

1.17 Set Alarms and Appointments

Set Alarms

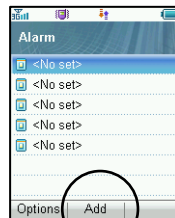


From the main menu select **Tools** then press the **Right Arrow Key** for the **Alarm** menu. Press **Add** to create a new alarm

- In the Alarm Setup screen configure your alarm as required
- Daily Alarm goes off every day.
- Workday alarm goes off Mon – Fri only.
- Weekly alarm will go off at the same time each week.
- Once Alarm will only go off once.
- Set your desired Ring Tone by choosing the Edit button.
- Workdays are Mon – Fri and can be changed by pressing the Options button in the Alarm screen above.
- If the Alarm time has passed you will not be able to save it.

Set Appointments through the Calendar

 
If you use the Calendar function frequently we advise you to configure your short cut keys to enable quick access to the Calendar. See the Section 1.13 to change your shortcut keys. Otherwise you need to access the Calendar through the Tools, Time menu. If the Alarm time has passed or is before the event time you will not be able to save the appointment.

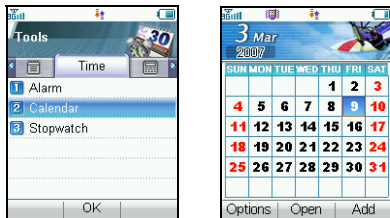

- From the **Idle Screen** press **OK** for the main menu.
- Go to **Tools** then press the **Right Arrow Key** for the **Time** menu.
- Go to **Calendar** and Press **OK** to open it.
- Press the **Right Select Key** to Add.
- You can add a Meeting, Memo or Anniversary.
- The Memo function does not allow you to set an alarm.
- Follow the prompts on screen to configure your appointment reminder.

1.18 Send an E-mail

 - From the **Idle Screen** press the **Left Arrow Key** to get to the E-Mail menu.
- Press **Select** to create a new E-mail.
- Enter the sender address e.g. username@domain.com
- Press the **down arrow** to access the Copy To Field.
- Press the **down arrow** to access the Title Field.
- Press the **down arrow** to enter the Text field.
- Press the **OK Key** to Insert attachments.
- When you are finished press the **Right Select Key** to **Send**.

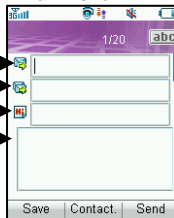

Email Settings

- Under Settings you should configure your own Email parameters. See the Advanced Section on how to do this.
- The default Email client is connected through BigPond.
- You can configure other Mailboxes (e.g. Gmail, Yahoo etc) to receive Emails from external addresses.
- See your E-mail provider for the POP Server details etc and see the Advanced Section for more information.

1.19 Take Pictures and Videos

Your phone has a camera which can take still and video pictures. The camera is in the hinge just below the screen.

Take Still Pictures

- Press and hold the camera button on the right hand side of the phone to activate the camera
- The camera can be rotated to face yourself during video calls or to face out to take pictures.
- Use the Up and Down arrows to control the zoom* →
- Press the Options button to:
 - Change the Photo Size* and orientation
 - Change the Quality
 - Change the Brightness
 - Change the Contrast
 - Apply an effect (black and white or sepia)
 - Change the camera shutter sound
 - Go to the Video Camera



* The default photo size is small to enable easy sending by MMS and Email. If you wish to view your pictures on a PC then change the picture size 1280 x 960 by going into Camera, Options, Photo Size. Zoom is not available on 1280 x 960 as the screen is already at maximum resolution.

Make Videos

 
 
 


From the Main Menu go down to Multimedia and press **OK** to select.

- Go down to option 2) for Video Camera. Press **OK** to Record your video.
- Press **Options** to change any of the following settings:
 - The default length of the video is only 15 seconds. Change this if required.
 - Video Quality
 - Brightness
 - Contrast
 - Effect (normal, black and white or sepia)
 - Video sound
 - Video format, MP4 or 3GP
 - Switch to Camera

1.20 Send a Multimedia Message (MMS)

When you send a Multimedia Message you can attach a picture, music or video file.

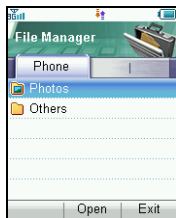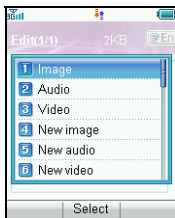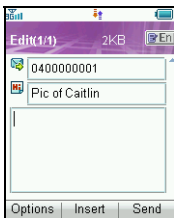


- From the Idle Screen press the **Right Arrow Key** to access the messages menu.
- Press OK to create a new message.
- Press the down arrow to access Multimedia message and press **OK** to Select.
- Enter the phone number or use Contacts to select a number.
- Enter text in the title field if required.
- Press the down arrow to enter the text field.
- When you are in the text field you can press the **OK Key** to Insert an Image, Audio or Video file.
- Browse to your Photos folder and select the file.

1.21 Browse the Internet using Telstra My Place

The internet enables you to search and find useful and fun information and to enhance your phone by downloading ringtones, pictures, movie clips, videos and games.


 
Press the Telstra Key or press the OK key twice to access the My Place menu. See your Telstra Next G Guide and the advanced section for more details.

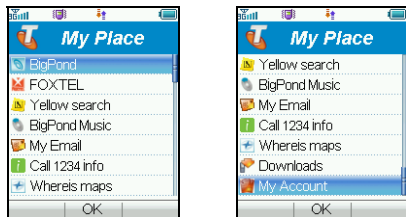

Telstra My Place Menu Listing

1.22 Download Music, Pictures, Ringtones and Games

  There are various ways to enhance your phone by downloading content from the internet. The BigPond Downloads section is free to look at so you can easily see what is on offer. The downloads are regularly updated by Telstra.

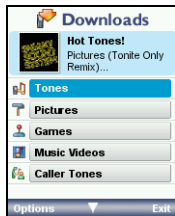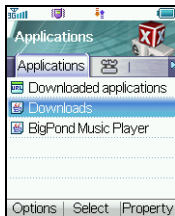


- Press the **OK Key** to access the **Main Menu**, select **Games & Apps**.
- Go to Downloads and press the **OK Key** to Select.
- After updating you can see the choices available to download content to your phone.
- You can choose Tones, Pictures, Games, Music Videos etc.
- Use the BigPond Music Player application in the same menu to play music and to see your available tunes.
- See the advanced section for more details and for alternatives ways to import music (using a PC).

1.23 Use your Phone as a Music Player (MP3 Player)

Once you have downloaded music or imported it from your PC (see 2.4) you can play your own music on your phone.

 Method 1, Using the BigPond Music Player

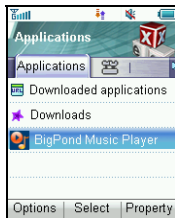



- From the **Main Menu** go to **Games & Apps**
- Select the **BigPond Music Player**
- Press the **down arrow** to look at My music, press **Options, Scan for New Files**
- All your downloaded and imported music will be displayed in the list and you can create a playlist under Options

Method 2, Use File Manager

- From the Main Menu select Tools
- Press the **OK Key** for **File Manager**
- Go to the Audios directory, My Audios and open the desired music file

Method 3, Create a new Playlist and use the Side keys to operate your Music Player

  When you have some music files stored on your phone you can create a playlist to play your songs in the preferred order, this also enables you to use the side keys to access your music files.

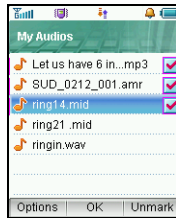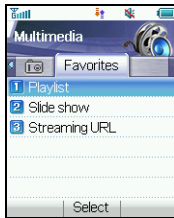

- Go to the **Main Menu** and choose **Multimedia**.
- Use the **Right Arrow key** to go to Favorites and select **Playlist**.
- Choose **Add** to create a new Playlist.
- Browse through the File Manager directory structure to get to your chosen files.
- Use the **Mark** button to select multiple tracks to create your playlist.
- Make sure you **Save** the playlist.
- Close the phone and long press the **Play** key on the side panel to access your playlist.
- Long press the Volume keys to step through your chosen tracks, or use Pause and then the volume key to skip.

2 Advanced Operation

2.1 Use Join Me to Connect your Phone to your PC

Join Me is a PC application that enables you to connect your phone to your PC. Once you have installed it you can connect your PC to the internet , copy music and picture files from your personal collection, send and receive faxes through your phone and use your PC to enter and back up your contacts.

Compatibility

- The software is only compatible with Windows XP Service Pack 2 and Windows 2000 SP 4.
- It is **not** compatible with Microsoft Vista, ME, 98 or 95 or with any MAC OS.

Installation

- Please follow the installation steps carefully.
- If the installation fails please see the ReadMe file on the CD or consult our web site for more help. www.zte.com.au

2.2 Installing Join Me

 
Please install Join Me from the CD before connecting your phone to your PC.

- Insert the CD provided into your PC.
- The CD should auto-start after a few seconds.
- The installation shield will launch and guide you through the install set up.
- Please follow the prompts to install the software.
- When the installation is complete plug your handset into your PC using the USB lead supplied.
- The USB lead is unique and should not be used for other devices (It is not the same as digital camera leads).
- When you plug in the handset the PC will automatically install the drivers. If this fails consult our website for more help or access Windows Device Manager to update the drivers. See www.zte.com.au for instructions.
- If you have plugged your phone into your PC before installing the CD then the drivers will not be installed correctly.
- Unplug your phone, un-install then re-install Join Me.
- Plug your phone back in and see if the drivers install. See www.zte.com.au for full instructions.

2.3 Use Join Me to Copy your Pictures to your PC

If you have taken some photos on your phone you can transfer them onto your PC using Join Me:

- Make sure your phone is switched on and connected to your PC, and Join Me has been installed.
- Double click the Join Me icon on the desktop.
- Select the phone type and press Connect.
- Press OK to download your Contacts and Messages (you can switch this off under Tools, Settings) .
- Go to the Media tab as shown in the picture on the next page.
- Double click on My Phone in the bottom left hand corner.
- Double click on Photos to expand the folder structure.
- Double click on My Pictures to see your picture files on the right hand side.
- Drag* the required file from the file list and Drop* it into the required destination folder on the PC.
- The file will be copied to your destination folder (Desktop in the example below).
- You can only drop files into Folders.
- The default picture size is very small when viewed on the PC. See section 1.19 to change the image size.
- * Drag and Drop is a method of copying files. Click on the file, hold down the left mouse button, move the mouse pointer to your required destination and release the left mouse button to Drop the file to that location.

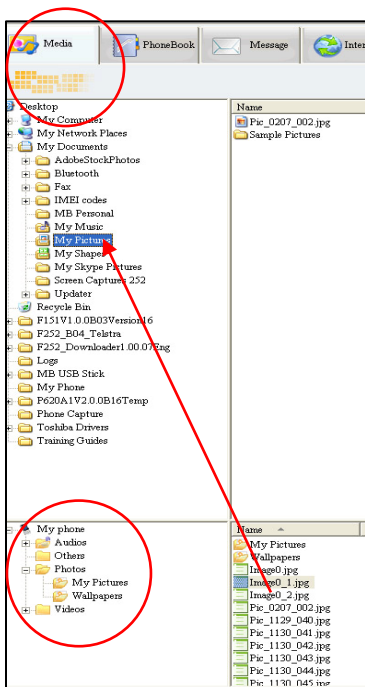


1. Open the Media Tab.
2. Open the My Pictures folder on My Phone .
3. Drag the picture from My Phone up to a folder on your PC.

2.4 Use Join Me to Copy Music Files from your PC to your Phone

If you have MP3 files on your PC you can transfer them onto your phone using Join Me.

 
- Make sure your phone is switched on and connected to your PC, and Join Me has been installed.
- Double click the Join Me icon on the desktop.
- Select the phone type and press Connect.
- Choose **OK** to download your Contacts and Messages (you can switch this off under Tools, Settings) .
- Go to the Media tab as shown in the picture on the next page.
- Double click on My Phone in the bottom left hand corner.
- Double click on Audios to open up the Audio folders.
- Find the MP3 files on your PC by browsing through the Windows file structure in Join Me.
- Drag the required file from the top half (on your PC) and drop it into My Audios on the phone.
- The file will be copied to your destination folder (as shown below). You can only Drop files into Folders.
- You can also Right Click on the file to choose Copy, then go to your destination folder and Paste.
- MP3, WAV and MIDI Files are supported but MP3 is preferable due to smaller file size.
- Long file names are NOT supported. If the music file has more than 16 characters it will need to be renamed.
- You can use a program such as Free RIP (available free on the internet) to convert your CD's into MP3 files.

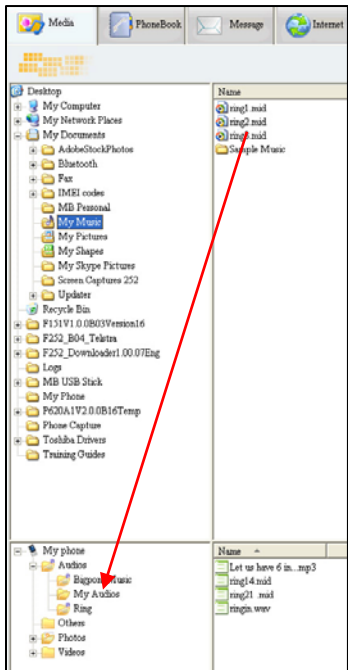

Copy your selected MP3 File from your PC to the My Audios folder on your handset.

2.5 Enter your Contacts using Join Me

 You can use Join Me to enter new contacts into your phone.

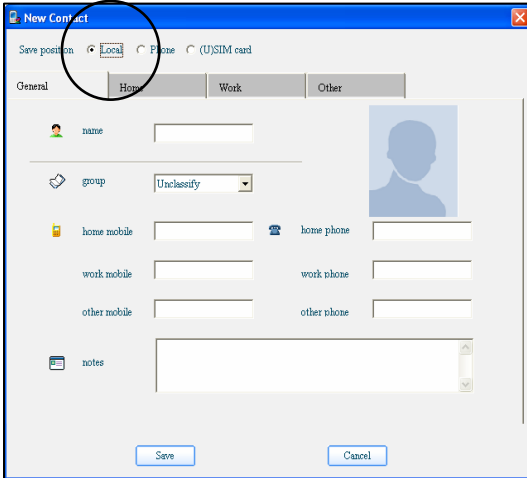

The screenshot shows a 'New Contact' dialog box with a blue header and a close button in the top right. Below the header, there are three radio buttons for 'Save position': 'Local' (which is selected and circled in red), 'Phone', and '(U)SIM card'. Below this are three tabs: 'General', 'Home', and 'Work'. The 'General' tab is active and contains the following fields: a 'name' field with a person icon, a 'group' dropdown menu set to 'Unclassify', a 'home mobile' field with a mobile phone icon, a 'home phone' field with a telephone icon, a 'work mobile' field, a 'work phone' field, an 'other mobile' field, an 'other phone' field, and a 'notes' field with a notepad icon. At the bottom of the dialog are two buttons: 'Save' and 'Cancel'.

On the Phonebook tab press New Contact.

Enter the contact details then save them directly to your phone or save a local copy on your PC and copy them over later.

Specify the Contact Group If required.

Media PhoneBook Message Int

Folder

- Local(0/1500)
 - Unclassify(0)
 - Family(0)
 - Friends(0)
 - Colleague(0)
 - Mates(0)
 - Society(0)
 - VIP(0)
 - Phone(162/400)
 - Mates(0)
 - Family(0)
 - Friends(0)
 - Work(0)
 - VIP(0)
 - Unclassify(160)
 - (U)SIM card(146/150)

Name	Phone	
<input type="checkbox"/> Alan Suther...	04...	
<input type="checkbox"/> alex	02...	Unclassify
<input type="checkbox"/> alex def' mo...	04...	Unclassify
<input type="checkbox"/> alex defraitis	03...	Unclassify
<input type="checkbox"/> Alison home	03...	Unclassify
<input type="checkbox"/> Alison oz	+6...	Unclassify
<input type="checkbox"/> Amal	04...	Unclassify
<input type="checkbox"/> andrew hage	+6...	Unclassify
<input type="checkbox"/> Anna Home	96...	Unclassify
<input type="checkbox"/> Anna Mobile	04...	Unclassify
<input type="checkbox"/> Anne&Hint...	97...	Unclassify
<input type="checkbox"/> Annette	04...	Unclassify
<input type="checkbox"/> arthur	+6...	Unclassify
<input type="checkbox"/> Ashley	04...	Unclassify
<input type="checkbox"/> Audi Garage	94...	Unclassify
<input type="checkbox"/> Bank	14...	Unclassify
<input type="checkbox"/> Beth Young...	04...	Unclassify
<input type="checkbox"/> BigBlog	12...	Unclassify
<input type="checkbox"/> BigBlog	12...	Unclassify
<input type="checkbox"/> BigBlog	12...	Unclassify

Select All by checking this box.

Drag and drop the complete list to Local

2.6 Import your Contacts from Microsoft Outlook

- Launch Outlook and have Join Me running and connected your handset
- Note At the end of the import process Outlook can shut down. Please save any information beforehand
- On the Phonebook tab in Join Me right click and select Import From Microsoft Outlook
- The following fields are imported from Outlook to Join Me as below:

Outlook

Full Name
Mobile Telephone Number
Home Telephone Number
Business Telephone Number
Company Main Telephone Number
Other Telephone Number
Company Name
Profession
Email Address
Web Page

 
JoinMe

Name
Home mobile
Home phone
Work mobile
Work phone
Other mobile
Company
Notes
Email
Web


2.7 Use Join Me to Connect your PC to the Internet

You can use your mobile phone as a dial up modem to connect your PC to the internet. The latest HSDPA wireless network technology achieves broadband speeds. Please see Telstra for a list of applicable data charges.

- Install and run the Join Me program as above and connect your phone
- In Join Me go to Tools, Settings on the top menu bar
- Select the Network Connection tab as shown below
- Enter the dial number *99# and press **OK** to save (this may be set already)
- The user name and password fields should be blank

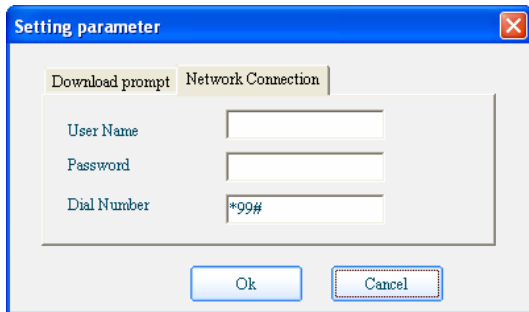

 - On your mobile phone go to Settings, Handset, Modem Settings
- In the box marked APN add Telstra.internet* as in the picture below.
- Leave the user name and password fields blank
- Now go back to Join Me, press the Connect button at the top of the screen to re-connect your phone
- You can now access the internet by going to the Internet tab and pressing Connect.

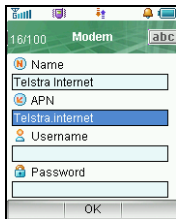

- Once you are connected launch Internet Explorer to browse the internet in the usual way.
- Note data charges can be quite high. Consult Telstra and connect to a plan if you require regular access.
- *Telstra.Internet is the default setting that will always work. If you subscribe to a data plan then change this to Telstra.pcpack or Telstra.datapack as instructed by Telstra.

2.8 Send a Fax from your PC

You can use your PC and your mobile phone to send and receive faxes using the Microsoft Fax Console:

- Make sure your phone is switched on and plugged into your PC, and Join Me has been installed.
- On your PC go to the Start Menu and select the Control Panel.
- Choose Add or Remove Programs.
- Choose Add/Remove Windows Components.
- Click in the check box "Fax Services" and click Next (you may need your Windows CD to complete this).
- Launch the Windows Fax Wizard (Start, All Programs, Accessories, Communications, Fax, Fax Console).
- Step through the wizard adding your details and preferences.
- In the drop down box "Please Select the Fax Device" choose "ZTE T1 USB Modem" .
- Complete the wizard settings as per your own preferences.
- To send a fax from Word choose the Print option and select Fax.
- Follow the steps in the wizard to complete the operation.
- Consult Microsoft Help (F1) for help or more information on the fax console.

2.9 Connect to a Bluetooth Device

 
 
 
Your mobile includes Bluetooth which can be used to connect your handset to wireless headsets and hands free car kits. You can also transfer files between your phone and other Bluetooth devices such as another phone or a laptop. Not all applications or devices can be supported as Bluetooth is an open forum and different manufacturers adopt different standards and implementation. As a guide we support Bluetooth 1.1 with Handsfree and Headset Profiles. We also support FTP for file transfer to a PC or to another device.

All manufacturers use different methods of implementation so it is best to consult your device manufacturer for compatibility and connection issues.

Please follow the process carefully as it can seem tricky to connect to a Bluetooth device first time around.

Once you have paired up and connected to a device the process becomes more automatic.

Connect to a Bluetooth Mobile or Laptop Device

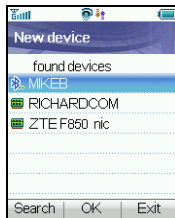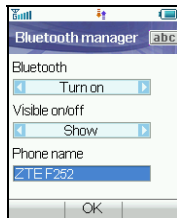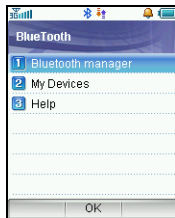

- From the Main Menu select Multimedia, press **OK**, go to Bluetooth and press the **OK Key**
- Press **OK** for the Bluetooth Manager then press the **Left or Right Arrow Key** to switch Bluetooth on
- Go down then press the **Left or Right Arrow Key** to Show. Press **OK** to confirm.
- Go down to **My Devices** and press **OK**. Press Search to look for Bluetooth devices.
- Your chosen device must be switched on and in pairing mode.
- You should see the required device listed in the Device List, Press **OK** to Connect.
- You will be asked to submit a password. Usually 0000 or 1234, consult your device for more information.
- If you are connecting to a PC or another mobile enter the same password when requested by that device.
- Once the password has been shared and accepted by both devices they are paired and connected.

Use Bluetooth to Transfer Files to a PC or another mobile device

- From the main menu go to **Tools-- File Manager**
- Browse through the folders to your chosen file
- Press the **Left Select Key** for Options.
- Choose Send then Select Bluetooth and press the **OK Key**
- If no devices are shown press Search
- Select the device you wish to send your file to
- Enter a pass code (if requested) and use the same pass code on the other device (eg 0000)

Receiving Files from another device



- If another paired device tries to send a file to your phone this dialogue will appear.
- Press **Yes** to accept the incoming file transfer.

Connecting to a Bluetooth Car Kit or Personal Headset

Please follow the manufacturers instructions carefully regarding getting your Bluetooth device into Pairing Mode.

You cannot connect your phone to the far end device unless Pairing Mode is enabled. Usually the device will flash rapidly to indicate pairing mode. After finding the device you need to share a password and press Connect.

- Make sure Bluetooth is on and in Show mode and the other device in is Pairing Mode.
- From your handset go to the Bluetooth menu and press the OK Key to open My Devices.
- Press the Right Select Key to Search.
- From the list of available devices move the cursor to the required device and press OK to Connect.
- Enter the pass code specified in the user guide of your far end device (Usually 0000 or 1234).
- The far end device will acknowledge the connection and your handset will report the Device has been added.
- In My Devices go to your new device and press the OK Key to Connect.
- The devices are now paired.
- When you get an incoming call this will be sent to your Bluetooth device automatically, press the call button to answer.
- Use the Call button to bring up Last Number redial. The phone will automatically dial out the last number.

2.10 Other Facilities

Stopwatch

 
The phone has a built in stopwatch accessible through the Tools menu.



- Press **OK Key** to start timing.
- Press **OK Key** to stop timing. The screen will show the event time.
- Press **OK Key** to continue timing.
- Press **Right Select Key** to reset.

Calculator

The phone provides a simple calculator accessible through the Tools menu

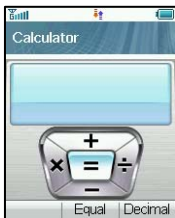

- Press 0~9 key to enter numbers, Decimal to enter the decimal point..
- Press Up/Down/Left/Right key to choose +, -, x, ÷.
- Press the **Clear key** to clear last digit and results.
- Press **OK Key** to Calculate. Press **End key** or **Back** to exit the calculator.

World Time

 
World Time is accessible on the Other tab under the Tools menu



- The world time function provides time information on major cities worldwide.
- You can scroll to the desired city by using the **Left/Right key**.
- Press **Setting**, select your city and then press the **OK Key** to save the selected city as your home time zone.
- Note changing time zones changes the current time setting.

Pocket News

Pocket News is accessible on the Other tab under the Tools menu

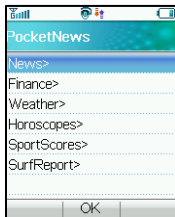

- This service is provided by Telstra and incurs charges for use.
- Please contact Telstra for more information.
- Up to date news, finance, weather information etc are sent to you via SMS when activated.

Java Games



 
- You can download games from your service provider or other specialist portals.
- Your handset supports Java Midlet 2.0
- You can also download files onto your PC and use Join Me to copy them over
- Copy Games into the **Other** directory then select **Open** to install the game
- Games are installed in the **Games & Apps** location on the handset


Browser



- You can access a generic browser through the main menu
- The home page is Telstra BigPond
- You can enter your own URL using the Go To option
- You can view your internet History and connection records
- You can create a new connection profile under Options, Connect Setting, Options
- You can erase and set Cookies and other options under Options

WAP Push Messages

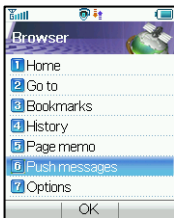


- WAP Push Messages are indicated by the  icon on the main display
- Use the Browser to view your Push Messages
- Push Messages are usually advertising or spam.
- They cost money in data charges to retrieve the messages
- You can set Refuse to Receive under Browser, Options, Push Settings

Voice Recorder



- Access the Voice Recorder function from the Multimedia directory.
- Press **OK Key** to Start recording your voice memo.
- Press **OK Key** to Stop recording.
- You can save by pressing the **OK Key**. The file will be saved to My Audio folder.
- Press **Right Select Key** to Discard the voice memo.
- Press **Left Select Key** to Send the memo via MMS or E-mail or Bluetooth.

 Slide Show

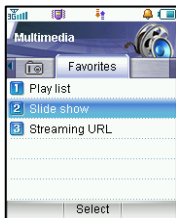

- Access the Slide Show function from Multimedia, Favorites
- Add pictures by pressing Add
- Browse to My Pictures and Mark the pictures you want.
- Press **OK** to finish and then press Save.
- Use **Options** to Create new slide, Rename, Delete, Delete all, and View the image info

Streaming URL

Streaming URL are links to audio or video streaming content available through the browser. The streaming content is only available while you are connected to the server and depends on your network provider.

- Press New to add a new streaming URL. Enter title and URL address etc. Press Options for the submenu:
 - New Bookmark: Create a new bookmark.
 - Send: Send the URL address as a message or E-mail.
 - Delete: Delete the address etc.
 - Delete all: Delete all URL addresses.
 - Info: View title and URL address.

2.11 Advanced Message Settings

You can configure your mailbox, MMS and Email Settings.

From the Main Menu go to Messages, Settings.

Multimedia Message Settings

- Retrieval Settings: Manual, Automatic or Manual when roaming
- Delivery mode: You can set immediate delivery or defer it for a specified period of time.
- Time per page: Set MMS time per page.
- Delivery reports: You receive a confirmation from the network when the message is delivered to the recipient.
- Validity: Messages are saved on the network for this period or until the message is delivered.
- Anonymous msg: You can choose to accept or refuse anonymous messages.
- APN: Access Point Name. Preset by your network provider.*
- Server Address: Set the server address for MMS.*
- Proxy server Address: Set the proxy server address. Preset by your network provider.*
- Proxy server port: Set the proxy server port. Preset by your network provider.*
- *Changing these settings will affect your browsing and client software.

Text Message Settings

- SMS centre number: The default is +61418706700
- Expired Time: Select the period over which the message centre will attempt to deliver the message.
- Status report: The network informs you when your message has been delivered
- Cell Name Display, On or Off.

E-mail

- From the Main Menu go to Messages then press the Right Arrow key to go to the Email tab.
- Go to 7) for Settings, press the OK Key
- Press OK key again for Mailbox Settings
- Press the Right Select key to Edit the BigPond settings
- Add your username, password, full Email address, Display Name etc. for your Bigpond Account
- To create your own mail box settings use Add from the Mailbox Settings Menu
- See the table on the next page for some common examples
- Consult your Email service provider for more details

Example Alternative Email Provider Settings

	Google	Netspace
Mailbox Name	Gmail	Netspace
Username	username@gmail.com	username@netspace.net.au
Password	Xxxxxx	Xxxxxx
My E-mail address	username@gmail.com	username@netspace.net.au
Display name	Google	Netspace
Outgoing server	smtp.gmail.com	mail.netspace.net.au
Outgoing port	465	25
Sending options	Foreground	Foreground
SMTP Authentication	OFF	OFF
Automatic signature	Optional	Optional
Signature	Add if required	Add if required
Incoming Server	pop.gmail.com	pop.netspace.net.au
Incoming Port	995	110
Mail to retrieve	500K	500K
Save to server	Save	Save
APN	Telstra Internet	Telstra Internet

2.12 Advanced Handset Settings

From the Main Menu go to Settings then press the Right Arrow Key for Handset Settings.

Network

- Preferred mode: You can lock your handset to GSM.or UMTS (3G) Networks
- Preferred Band: You can lock the handset to certain bands, U = UMTS, G = GSM
- Preferred selection*: You can specify which network to register with from a list of available networks. Preferred Selection will override the Preferred Mode setting.

* If you make a Manual Network Selection this will override the automatic settings in Preferred Mode and the handset will stay on your chosen network and related band. ie If you choose Telstra GSM the Preferred Mode will switch to GSM and remain in GSM-only mode, select 3G network, Preferred Mode will be 3G Only. Further searches performed under the Preferred Selection>Manual mode will only detect networks from respective band (GSM or 3G only depending on selected network). To return back to normal mode set Preferred Mode and Preferred band to Automatic.

Restore default settings

- If your handset is not working as normal you can restore the handset to its default factory settings. The Handset Lock Code is 0000. User content will not be erased.

Network time

- The Time and Date automatically updates from the Network. Switch this off if not required or if your time zone is not updated correctly (eg Interstate border areas).

2.13 Advanced Call Settings

From the Main Menu go to Settings then press the Right Arrow Key 4 times for Call Settings

VideoPhone Setting

- The following fields are preset by Telstra
- The VIG Number is +61418707888
- The UUS Type is Email
- The UUS String is blank
- Contact Telstra for more details

Voice Mail

- Your Voice mail number is preset to +61101. You can access your Voicemail by using the Speed dial 1 key.
- From the Idle Screen long press the 1 key to access your Voice mail


Video Mail

- Your Video mail number is preset to +61101. You can access your Video mail by using the Speed dial 3 key.

Call Divert

This service enables you to divert incoming calls to other numbers. Use the menus to choose which diverts you want activated and to check the status of your diverts.

Call Waiting

This service lets you know if you receive another incoming call while you are on the phone. When active (default) and you are on the phone you will hear some pips when you get another incoming call. Press the  button to switch between calls.

Call Barring

To activate call barring you need the barring password from Telstra. This is usually provided with your USIM card documentation and is often 1234 but this needs to be enabled on your account. Contact Telstra for more information.

- Bar all outgoing calls: Calls cannot be made.
- Bar outgoing calls (international): International calls cannot be made.
- Dial barring (International No. not to home ph)except home number: When abroad, calls can only be made to numbers within the current country.
- Bar all incoming calls: Calls cannot be received.
- Bar incoming calls when international roaming: Calls cannot be received when you are overseas
- Cancel all call barring: Cancel all the previous call barring settings.
- Change password: Change the barring password. It is needed when you activate or erase call barring.
- Select Activate/Deactivate to enable/disable the function
- Select Check status to query the current status of the function.

Send my number

This function allows you to send or hide your number when making calls. You can choose to switch it on or off.

Open Flip to Answer

When enabled incoming calls will be answered by opening the handset flip.

Any Key to Answer

When enabled you can answer an incoming call by pressing any key except the End key, Back key, Left/Right Select Keys , Volume key, Play/Pause key and Camera key.

3 Technical Information and Help

3.1 Troubleshooting and FAQ's

Please check the manual thoroughly before contacting your service provider and read the issues below:

Symptom	Resolution
Enter PIN	Input the correct PIN number as supplied by Telstra. See section 1.3
Insert USIM	Check you have inserted a valid USIM card. See Installing the USIM Card
Enter password or Unlock Code	Enter the unlock code. Default is 0000. See Settings, Security
(No) key tone when pressing keys	Check the key tone settings in your current profile. See section 1.13
No incoming ring tone	Check the ring tone and ringing volume settings in the profile. Check the handset is not muted (Long press the # Key)
No alarm tone	Check the profile setting (silent) and the alarm ring setting
A phone number cannot be dialled	Check whether any call restrictions are set. See Advanced Call Settings
Short message cannot be sent	Check the SMS centre setting in the SMS-Settings menu. Restore Defaults

How do I switch off Predictive Text ?	In any text entry mode press the # key to toggle between different modes.
The battery discharges quickly	Your Network coverage is poor. Check your signal bars. With only 1 or 2 bars the network is poor. Battery life of only 1 day is normal under these conditions. Switch off Bluetooth to help save power. Try changing network to GSM (2.12)
How do I enter text in an SMS ?	From the phone number field press the Down arrow twice to move into the text area. Use predictive text to complete words, press the * key to toggle different words, press OK when correct. Use abc mode to manually type words that are not included.
How do I change the Ringtone ?	See Section 1.13 Edit the current profile and select a new tune from the Audios directory.
How do I create a Playlist from the T-Flash card ?	<ol style="list-style-type: none"> 1. Through File Manager check the files stored on the T-Flash memory first. 2. From the BigPond music player application you can scan your files and create a playlist from the available list. T-Flash must be FAT16 Format.
How do I transfer pictures via Bluetooth to a photo printer (eg Kodak) ?	This is not supported. Your handset requires a security password to be enabled and the Kodak printers cannot provide a password. This is due to different Bluetooth profiles. Copy your photos using Join Me or a T-Flash card

3.2 Glossary of Terms

2G or GSM Second Generation wireless communication system.

3G Third Generation wireless communication system. 3G offers video services and high speed packet-data service.

APN Access Point Number. This is the gateway to Internet Services

Avatar is a small bit-map cartoon style picture

Bluetooth is a wireless standard to allow devices to connect and share information without using any cables

HSDPA High Speed Digital Packet Access. Wireless data rates up to 14.4Mbps

MMS Multimedia Message Service. Send videos, pictures, audio files and text to phones and e-mail addresses.

Next G Also called 3.5G. Next G offers enhanced data rates and features using HSDPA technology

Pairing Mode is a Bluetooth facility to connect two devices together

Roaming Use of your phone overseas.

USIM Universal Subscriber Identity Module provided by Telstra. Can be used to copy Contacts between handsets.

UMTS Universal Mobile Telecommunications Standard

Video Call Allows users to communicate by video instead of normal voice calling. Only available on 3G.

Voice/Video Mail An answering service that automatically answers your calls when you are not available.

3.3 Technical Parameters

Handset Standards	WCDMA 850MHz, 2100 MHz with HSDPA data 900MHz GSM, 1800 MHz GSM and 1900 MHz GSM with UMTS
Dimensions WxLxH	Approx 49mm x 99mm x 19mm
Weight	Approx 110g (Including standard battery)
Features	MP4 video, MP3 audio, 1.3MPixel camera, Video Phone, USB connectivity, MIDP 2.0 JAVA 225MHz Processor, 262K Colour Screen, MMS Video and Picture, E-mail, Calendar, Speakerphone, Voice Recorder, Bluetooth, TFlash up to 2 GB. TFlash format is FAT16 only.
Battery	780mA hours, Lithium ion (Li-ion)
Continuous idle time*	140 hours in GSM mode, 120 hours in WCDMA mode.
Continuous talk time*	150 minutes on GSM network, 120 minutes on WCDMA network, Video call 70 minutes
Charge time	Approximately 3 hours
Battery Life	Approximately 400 charge cycles.

*The phone's talk time and idle time are based on ideal working environments. The use of extended backlighting, browser, and network conditions can reduce battery life and talk/idle time.

4 Environmental Statement

Your ZTE handset is made using the latest manufacturing techniques and environmental standards to reduce waste and hazards to the environment. However at the end of life of the equipment the manufacturer recommends that you return the handset and accessories to your nearest re-cycling depot or send it to our recycling agent below. Valuable materials such as gold, silver, and copper can be recovered from the handset. Any toxic materials will be prevented from entering the environment and the waste materials will be recycled.

At the end of life of the equipment please send your handset, batteries and charger to:

MRI (Australia) Pty Ltd

20-24 Dennis St

Cambellfield

VIC 3061

www.mri.com.au

or

MRI Sydney

1 – 4 Bentley Street

Wetherill Park

NSW 2164


 

MRI Australia recycles every part of the equipment and diverts over 90% of the materials from landfill for re-use.

Character Chart

Key	Corresponding Characters
1	1 and some common punctuation characters eg . , ? ! @ ' `
2	ABCabc2
3	DEFdef3
4	GHIghi4
5	JKLjkl5
6	MNOmno6
7	PQRSpqrs7
8	TUVtuv8
9	WXYZwxyz9
0	Space 0
* key	Press * key for character set. Press twice for International Prefix "+"
# key	Toggle different text modes. Long press to activate Silent Mode
Up/Down key	Move the cursor up/down. Move along Tabs
Left/Right key	Move the cursor left/right. Toggle various options
End key	Exit

5 Menu Listing

<p>1) Tools File </p> <p>1. File Manager</p> <p>Time</p> <p>1. Alarm</p> <p>2. Calendar</p> <p>3. Stopwatch</p> <p>Calculator</p> <p>1. Calculator</p> <p>Other</p> <p>1. World Time</p> <p>2. PocketNews</p>	<p>2) Messages </p> <p>1. New Message</p> <p>2. Inbox (0/0)</p> <p>3. Outbox (0)</p> <p>4. Drafts (0)</p> <p>5. Sent (0)</p> <p>6. User Folders</p> <p>7. (U)SIM Inbox</p> <p>8. Settings</p> <p>1 - Mult. Msg. Settings</p> <p>2 - Text Msg. Settings</p> <p>3 - Template Settings</p> <p>9. Memory info.</p>	<p>2) Messages </p> <p>B. Email</p> <p>1. New Email</p> <p>2. Inbox (0/0)</p> <p>3. Outbox (0)</p> <p>4. Drafts (0)</p> <p>5. Sent (0)</p> <p>6. User Folders</p> <p>7. Settings</p> <p>1 - Mailbox settings</p> <p>2 - Template settings</p> <p>3 - Automatic retrieval</p> <p>8. Memory info.</p>	<p>3) Games & apps </p> <p>Applications</p> <p>Downloads</p> <p>Downloaded applications</p> <p>BigPond Music Player</p> <p>Settings</p> <p>1. Bookmarks</p> <p>2. Proxy Settings</p>
<p>4) Contacts </p> <p>All Records</p> <p>USIM,</p> <p>Mates</p> <p>Family</p> <p>Friends, Work, VIP</p> <p>Unclassified</p>	<p>5) My Place </p> <p>BigPond, FOXTEL</p> <p>Yellow search, BigPond music</p> <p>My Email, Call 1234</p> <p>BigBlogs&Photos</p> <p>Whereis Maps</p> <p>Downloads, My Account</p>	<p>6) Calls </p> <p>A. Call log</p> <p>1. All calls</p> <p>2. Missed calls</p> <p>3. Received calls</p> <p>4. Dialed calls</p> <p>B. Calls Info.</p> <p>1. Call duration</p>	

<p>7) Settings </p> <p>A. Screen</p> <ol style="list-style-type: none"> 1. Wallpaper 2. Backlight duration 3. Brightness 4. Owner name 5. Greeting <p>B. Handset</p> <ol style="list-style-type: none"> 1. Language 2. Time and date 3. Network 4. Own number 5. Shortcut keys 6. Modem 7. Connection 8. Access point 9. Restore defaults 10. Network time 	<p>C. Profiles</p> <ol style="list-style-type: none"> 1. General 2. Meeting 3. Outdoor 4. Silent <p>D. Security</p> <ol style="list-style-type: none"> 1. Activate security codes 2. Change security codes 3. Fixed dial numbers 4. FDN list <p>E. Call</p> <ol style="list-style-type: none"> 1. Videophone setting 2. Voice mail 3. Video mail 4. Call divert 5. Call Waiting 6. Call Barring 7. Send my number 8. Open flip to answer 9. Any key to answer 	<p>8) Multimedia </p> <p>A. Digi.Eq</p> <ol style="list-style-type: none"> 1. Camera 2. Video camera 3. Media Player 4. Voice recorder 5. Bluetooth manager <ol style="list-style-type: none"> 1 - Bluetooth 2 - My Devices 3 - Help <p>B. Favourites</p> <ol style="list-style-type: none"> 1. Play list 2. Slide Show 3. Streaming URL 	<p>9) Browser </p> <ol style="list-style-type: none"> 1. Home 2. Go to 3. Bookmarks 4. History 5. Page Memo 6. Push messages 7. Options <ol style="list-style-type: none"> 1. Connect Setting 2. View 3. Cache 4. Cookies 5. Certificates 6. Push settings 7. Background music 8. Reset 9. About browser
---	---	--	---

Index

Advanced Operation ...	48	Charger	14	MP3 Player	46
Appointments	37	Charging.....	15	Multimedia Message ...	43
Background.....	29	Contacts	18, 19, 20	Music Player	46
Backlight Duration.....	31	Download Music.....	45	Mute	31
Battery	13, 15	E-Mail.....	39	My Place.....	44
Bigpond	45	Emergency Calls	26	Network time.....	73
BigPond Music Player.	46	En	25	Open Flip to Answer ...	76
Bluetooth.....	60, 61, 63	Environmental	81	Owner name	32
Bluetooth Car Kit.....	64	FAQ's	77	PC	49, 50, 52, 57
Browse the Internet.....	44	Games.....	45	PIN Codes	32
Browser	67	Glossary	79	Playlist	78
Calculator.....	65	Groups	20	Predictive Text	27
Calendar	38	Handsfree.....	22, 23, 60	Preferred mode.....	73
Call	22	Idle Screen	16	Preferred selection.....	73
Call Barring	75	Java Games	67	Push Messages	68
Call Divert	75	Join Me.....	48, 49	RF Energy	5
Call Waiting.....	75	Key Tones	31	RF Safety Information ...	5
CD	49	Make Videos.....	42	Ringtone	30
Change Ringtones	20	Menu Listing.....	84	Ringtones	45
Change PIN Numbers.	32	Microsoft Outlook	56	Safety Information.....	6
Character Chart	82	Modem Settings	73	Screen Brightness	31

Select Keys.....	17	Streaming URL.....	69	Voice Mail	74
Send a Fax.....	59	Take Pictures.....	41	Voice Recorder	68
Set Alarms.....	37	Technical Parameters .	80	Wallpaper.....	29
Shortcut Keys.....	33	Troubleshooting.....	77	WAP.....	68
Silent Mode.....	11, 30, 82	USIM card	12	Warranty	8
SMS.....	25	Vibrate Mode	30	Workdays.....	37
Speed Dial	21	Video Call	35	World Time.....	66
Stopwatch	65	Video Mail.....	74		