

TRAVEL IN TIME
BROADWAY
- MARKET -

Turntable with Cassette Deck




*Record not included

INSTRUCTION MANUAL

Turntable with Cassette Deck

Model Number: ASET-1116

AFTER SALES SUPPORT

  1300 886 649

 www.tempo.org

Model: ASET-1116 Product Code: 44062 11/2016



N13275

Contents

Welcome	3
Warranty Details	4
General Safety Instructions	5
Parts List	8
Getting Started	9
Instructions	10
Features	15
FAQs	16
Other Useful Information	17
Repair and Refurbished Goods or Parts Notice	18



Welcome

Congratulations on choosing to buy a BAUHN® product. All products brought to you by BAUHN® are manufactured to the highest standards of performance and safety and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 1 Year Warranty.

We hope you will enjoy using your purchase for many years to come.



Turntable with Cassette Deck

Warranty Details

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and to compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AFTER SALES SUPPORT

 (AUS) 1300 886 649

 www.tempa.org

Model: ASET-1116 Product Code: 44062 11/2016



General Safety Instructions

Read this manual thoroughly before first use and keep it in a safe place for future reference, along with the completed warranty card, purchase receipt and carton. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to.

Follow all instructions and take notice of all warnings to reduce the risk of fire or electric shock.



DANGER! CAUTION!

This symbol alerts you that there is dangerous voltage inside. To prevent electric shock, do not open the enclosure.



IMPORTANT!

This symbol alerts you to read and observe important warnings and instructions on the unit or in this manual.

Electrical Safety and Cord Handling

- To prevent contact with high voltage components inside, do not attempt to open the equipment.
- Before installing this equipment, make sure your outlet voltage corresponds to the voltage stated on the appliance rating label.
- When connecting the equipment, align the plug properly and insert it fully to prevent electric shock.
- Only use this equipment with the cord and plug supplied, and do not overload the power outlet.
- If the power cord is damaged, do not use the equipment. The cord must be replaced by the manufacturer or similarly qualified personnel in order to avoid a hazard. Contact the after sales support line for advice.



CAUTION: To reduce the risk of fire or electric shock, do not expose this equipment, the cord or the plug to rain or moisture; do not use it anywhere near water or where water splashes or drips; do not touch the plug with wet hands. In the event that water or other liquids enter the device, unplug it immediately and clean and dry it as best as possible. Then have it checked for damage by a qualified technician, or contact the after sales support line.

- Do not repair the unit yourself. Only have it serviced by qualified personnel. Contact the after sales support line for advice.
- Unplug the unit from the power outlet after use to avoid possible damage during electrical storms, or when the equipment will be unattended or unused for a long period of time.

General Safety Instructions (Cont.)

- Do not let the cord hang over the edge of a table or counter, or touch any hot surface. Do not allow anything to rest on or roll over the power cord, and run any cords so that no one steps on or trips over them.
- Do not run the cord near heat-producing appliances such as radiators, stoves or irons. Excessive heat could melt insulation and expose live wires.
- Always grasp the plug, not the cord, when disconnecting the unit. Pulling the cord can damage the internal wires and may cause a fire.
- Do not install the unit in an inclined position. It is designed to be operated in a horizontal position only.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

Installation

- When installing the unit, make sure to place it:
 - Away from heat sources, radiators or other products that produce heat.
 - Away from areas with high temperatures, high humidity or direct sunlight.
 - Away from excess dirt and dust.
 - Away from open windows and any place where water may get into the unit and damage it.
- Make sure there is free circulation of air around the unit. Do not place it on a thick carpet, bed or any place where ventilation holes are obstructed. Leave at least 10cm clearance around the unit.
- Make sure the mains power socket is readily accessible at all times.

Usage Conditions and Restrictions

- Openings on the cabinet are provided for ventilation and to protect the unit from overheating. To ensure proper operation, do not cover them with things such as newspapers, tablecloths, curtains etc.
- Do not place heavy objects on top of the equipment or step on it.
- Do not place objects filled with water (such as vases) or any naked flame sources (such as lit candles, incense sticks or cigarettes) on top of the unit.
- The equipment is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the equipment by a person responsible for their safety.
- Young children should be supervised to ensure they do not play with the

General Safety Instructions (Cont.)

equipment. Close supervision is always necessary when an appliance is used by or near children.


- Unplug the unit from the power outlet before cleaning. Clean the unit only with a dry, clean cloth. Do not use liquid or aerosol cleaners.
- We assume no liability for any damage caused by noncompliance with these instructions or any other improper use or mishandling of the equipment.

Condensation

The unit may suffer from condensation in the following situations:

- When you take the unit directly from a cold to a warm place, and vice versa.
- When you use the unit in a room where you just turned on a heater, or where cold air from an air conditioner is directed on to the unit.
- When you use the unit in hot and humid surroundings just after having moved it from an air conditioned room.
- When the room is steamy or damp.
- If condensation exists, the unit will not operate properly. Remove the media, plug the power cord into the wall socket, turn on the unit and leave it for two to three hours. After that time, the unit will have warmed up and any moisture will have evaporated. Keeping the unit connected to the wall socket will keep moisture condensation problems to a minimum.

Parts List

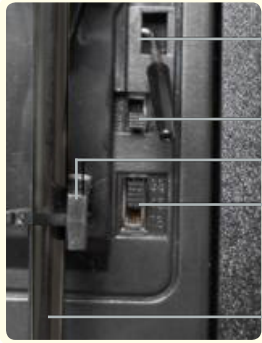

- | | | | |
|----|---------------------------|----|---------------------------------|
| 1 | Lift lever | 14 | AUX IN |
| 2 | Auto stop switch | 15 | USB port |
| 3 | Tone arm lock | 16 | SD/MMC Card slot |
| 4 | Speed switch | 17 | Cassette PLAY/EJECT/FFWD button |
| 5 | Tone arm | 18 | Cassette slot |
| 6 | Transparent dust cover | 19 | NEXT button |
| 7 | 45 RPM adapter | 20 | STOP button |
| 8 | Cartridge with stylus | 21 | PREV button |
| 9 | Dynamic stereo speakers | 22 | PLAY/PAUSE button |
| 10 | Turntable platter | 23 | EQ button |
| 11 | POWER/VOLUME control knob | 24 | FOLDER+ button |
| 12 | FUNCTION switch | 25 | REC button |
| 13 | 3.5mm headphone socket | 26 | DELETE button |

Getting Started

Before First Use

- Unpack the appliance but keep all packaging materials until you have made sure your new equipment is undamaged and in good working order. Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach.
- Unwind the cord to its full length and inspect it for damage. Do not use the appliance if the appliance or its cord have been damaged or are not working properly. In case of damage, contact our after sales support line for advice on examination or repair or return of the damaged product.
- Read this manual to familiarise yourself with all the parts and operating principles of the equipment. Pay particular attention to the safety instructions on the previous pages.
- Do not connect the unit to the mains power socket before checking the mains voltage and before all other connections have been made.
- Do not cover any vents and make sure that there is a space of several centimeters around the unit for ventilation.

Connections

- Connect the power cord to an AC power outlet.
- Rotate the **POWER/VOLUME** knob to the right to turn on the unit. The backlight on the LCD display screen should light up, indicating the power supply is working properly.
- Your Turntable with Cassette Deck is now ready for use.
- Move the **FUNCTION** switch to your desired input source: **PHONO** (Vinyl record player), **AUX IN**, **TAPE** (Cassettes) and **USB/SD**.
- To connect headphones to this unit, use a connecting cable with a 3.5mm headphone jack and plug it into the headphone socket at the front of the unit.
- To connect an external sound source such as an MP3 or CD player, use the **AUX IN** socket at the front of the unit.
- To connect an external amplifier or speakers, use the headphone socket at the front of the unit.

Instructions

IMPORTANT: To avoid damaging the stylus, ensure that the included stylus guard is in place whenever the turntable is being installed, moved or cleaned.



Playing a Record

- Connect the AC power cord to an electrical outlet and raise the dust cover.
- Turn ON (with the **POWER/VOLUME KNOB**) and adjust the volume to an appropriate level.
- Slide the **FUNCTION** switch to the **PHONO** position.
- Place a record on the turntable platter and select the correct playing speed: 33 1/3, 45, 78 RPM (according to the vinyl being played).
- Set the auto/manual stop control. Set the **AUTO STOP** switch to ON if you are playing a 33 RPM record and you want the turntable to stop turning when it has reached the end of the record. If the switch is set to OFF, the turntable will continue turning at the end of the record.
- Remove the stylus guard and unlock the tone arm lock. Push the lift lever upward to raise the tone arm and then gently move the tone arm to the desired position over the record. The platter will begin to spin when the tone arm is moved toward the record.
- Push the lift lever forward to lower the tone arm slowly onto the desired position on the record and begin playing the record.
- If the **AUTO STOP** switch is set to ON, the record will stop automatically. If it is set to OFF, the record will not stop automatically.
- When you have finished playing the record, push the lift lever backward to raise the tone arm and gently move it back to its rest.
- When you have finished playing records, engage the tone arm lock to protect it from accidental movement. Turn the **POWER KNOB** to switch the unit OFF. Unplug it from the power supply if you are not going to use it for a while.
- **NOTE:** If your record stops before the last track finishes, set the AUTO STOP switch to OFF. Your record will now play to the end, but you will have to stop the turntable rotation manually.
- **NOTE:** Depending on the record length, AUTO STOP may be enabled before the end of the recording. Do not rely on AUTO STOP alone to turn off playback.

Instructions (Cont.)

Playing a Cassette

- Connect the AC power cord to an electrical outlet.
- Turn ON (with the **POWER/VOLUME KNOB**) and adjust the volume to an appropriate level.
- Set the **FUNCTION** switch to **TAPE**.
- Insert a pre-recorded tape into the cassette slot with the tape side to the right. By pushing slightly, the cassette will slide into the tape mechanism and will start playing automatically.
NOTE: One end of the tape will remain visible.
- To fast forward the cassette tape, press the **PLAY/EJECT/FFWD** button halfway down while the cassette is playing.
- To resume normal playback, release the **PLAY/EJECT/FFWD** button.
- To stop playback, press the **PLAY/EJECT/FFWD** button completely. Playback will be stopped and the cassette tape will be ejected.

Playing Music from an Auxiliary Input

- Connect the AC power cord to an electrical outlet.
- Using a 3.5mm Stereo cable, connect the external audio device to the **AUX IN** socket at the front of the unit.
- Turn ON (with the **POWER/VOLUME KNOB**) and adjust the volume to an appropriate level.
- Set the **FUNCTION** switch to **AUX IN**.
- Use the **POWER/VOLUME KNOB** to control the volume level or use the controls on the external audio device to control the Playback/Volume functions.

Playing Music from a USB Device/SD/MMC Card

- Connect the AC power cord to an electrical outlet.
- Turn ON (with the **POWER/VOLUME KNOB**) and adjust the volume to an appropriate level.
- Insert a USB device face up into the USB port, making sure it is fully inserted. Alternatively, insert a memory card in the direction of the arrow (as shown on the label next to the memory card slot), making sure to insert it straight without bending it.

Instructions (Cont.)

IMPORTANT:

- Connecting the USB device upside down or backwards could damage the audio system or the storage media (USB drive, SD or MMC card). Check to ensure the direction is correct before connection.
 - Always back up important information to avoid accidental loss of data. We are not responsible for any damage and/or data loss due to lack of back-up.
 - Set the **FUNCTION** switch to **USB/SD**. The LCD display screen will display the number of tracks and the total time of the storage medium.
 - The system will then start audio playback from the media storage device (USB or SD card) automatically.
 - To pause playback, press the **PLAY/PAUSE** button once to halt playing. Press it again to continue playback.
 - To play the previous track, press **PREV** once or hold it down continuously to rapidly progress through previous tracks.
 - To play the next track, press **NEXT** once or hold it down continuously to rapidly advance through tracks.
 - To choose different sound effects, press the **EQ Function** button.
 - a. E1 – NORMAL SOUND
 - b. E2 – POP
 - c. E3 – ROCK
 - d. E4 – JAZZ
 - e. E5 – CLASSIC
- NOTE:** The EQ function is only available during USB/SD playback.
- To delete a file on your media storage device, press the **DELETE** button for about 2 seconds.
- WARNING:** Files cannot be recovered once they are deleted from your media storage device. Please make sure that you regularly back-up your data.
- To switch between different folders (if there are more than one), press the **FOLDER+** button. This will switch the stored music files (the music which you have stored in memory devices) and the recorded music files (the music which is recorded from the turntable, cassette, and auxiliary).
 - To stop playback of the music track, press **STOP**.

Instructions (Cont.)

Connecting to External Amplifiers, Speakers or Headphones

To connect to an external amplifier or speakers, or to listen to the content via headphones, plug your external device or headphones into the 3.5mm Headphone Jack at the front of the unit.

Encoding and Recording onto a USB Device/SD Card

This equipment has the capacity to encode your traditional music media (vinyl records, cassette tapes or CDs via AUX IN) into a digital format and record it onto a USB device or SD/MMC card as an MP3 file(s).

- Set the **FUNCTION** switch to the appropriate function: **PHONO**, **TAPE** or **AUX IN**.
- Insert a storage device (USB stick/SD/MMC card) into the relevant slot.
- Get your traditional music media ready for playback: either start playing a record on the turntable, insert a cassette tape into the cassette slot, or insert a CD into a CD player connected to the **AUX IN** socket.
- Press the **REC** button to start recording: the music track(s) will be recorded automatically onto the storage medium as MP3 file(s).
- Press the **STOP** button to stop recording: the music track(s) will be saved directly onto the storage device (USB device or SD card) inserted.
- The default media is USB; press the **USB/SD** switch button to change to an SD card.

NOTE:

- The recording speed is 1:1. Recording will take as long as playing the record, cassette tape or CD.
- The recording format is preset at MP3 bit rate 96 kbps.

Instructions (Cont.)


Tips for Better Performance

- When opening or closing the turntable cover, handle it gently, moving it either at the center or equally from both sides.
- Do not touch the stylus tip with your fingers; avoid bumping the stylus on the turntable mat or on the edge of the record.
- Clean the stylus tip frequently, using a soft brush with a back-to-front motion only.
- If you use a stylus cleaning fluid, use it very sparingly.
- Wipe the dust cover and turntable housing gently with a soft cloth. Clean the unit only with a dry, clean cloth. Do not use liquid or aerosol cleaners.
- Never apply harsh chemicals or solvents to any part of the turntable system.
- Prior to moving the turntable, always unplug it from the AC power outlet and fasten the tone arm on the tone arm rest with the vinyl twist-tie.

How to Replace the Needle

Removing the needle from the cartridge:

- Place a Flat-head screwdriver at the tip of the needle head shell and push downwards in the direction shown in sketch “A”.
- Remove the needle head shell by pulling it forwards and pushing downwards.

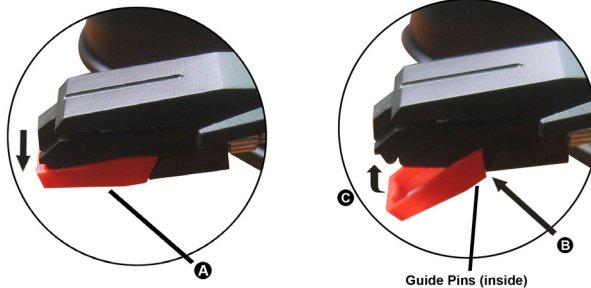

Inserting the needle into the cartridge:

- Insert the needle by pushing it upwards and pushing it backwards.
- Insert the needle head shell upwards as shown in sketch “B”.

Features

- 3-speed turntable fit for 33 1/3, 45, 78 RPM with a ceramic cartridge.
- Automatic/manual stop turntable.
- 45 RPM adapter.
- Slot-in cassette player.
- USB/SD playback.
- Direct USB/SD encoding into MP3 format without computer for turntable cassette and auxiliary input.
- Auxiliary input for connection with other devices (e.g. MP3 or CD player).
- 3.5mm headphone socket for headphones or an external amplifier.
- Built-in stereo speakers with 2 x 3W output.
- LCD display screen with blue a backlight.
- Rotary power/volume control with blue a backlight.
- Transparent dust cover.

CAUTION:

Use of controls and adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. This unit should not be adjusted or repaired by anyone except qualified service personnel.

FAQs

If you experience problems with your Turntable with Cassette Deck unit, check in the table below for solutions to common problems. If the problem persists after checking the suggested solutions, please contact our after sales support line for advice. Do not attempt to repair the product yourself.

Problem	Solution
The unit will not power ON	Make sure the unit's power cord is connected to an appropriate electrical outlet and the wall socket is switched ON.
There is no sound	Rotate the POWER/VOLUME knob clockwise to increase the volume.
The cassette tape will not play	Make sure the FUNCTION switch is set to the TAPE function.
	Make sure the cassette is properly inserted.
The vinyl record will not play	Make sure the FUNCTION switch is set to the PHONO position.
	Make sure you have selected the correct speed (33 1/3, 45 or 78 RPM).
Nothing will play via the AUX IN connection	Make sure the cable is firmly connected and check that your external device is clean and undamaged.
	Check the FUNCTION Switch is in the AUX IN position.
Nothing will play via the USB device or SD Card	Make sure the memory device is properly inserted in the USB port (or SD Card slot) and that the correct function is selected.

NOTE: If the unit still does not work after troubleshooting, please call our after sales support line for a technician or customer service.

IMPORTANT NOTES

The system can detect and read files in MP3 format only via the USB port or SD card slot. You can connect an MP3 player to the system via the USB socket, however, some MP3 players may not be able to play via the USB socket. This is due to variances in the MP3 encoding format, it is not a malfunction of the system.

There are numerous USB and SD device producers and their products vary in solution and format. We therefore cannot guarantee that this unit will support all USB and SD devices from every brand.

Other Useful Information

Technical Specifications

Power	Input	230V~50Hz 5W
Dimensions	Stand unit	335mm x 290mm x 128mm (w x d x h) 32cm turntable clearance height
Headphones	Front	1 x 3.5mm
Vinyl Records	Speed	Supports playback speed 33.33 / 45 / 78
	Record size support	7" = 17.7cm 10" = 25.5cm SP 12" = 30cm LP
USB	USB interface	5V $\overline{\text{DC}}$, 100mA
File System Format	Does not support NTFS	FAT32 only
SD/MMC Card		1 x slot
Speaker		2 x 4 ohms 3 Watt max.
Input	AUX IN	1 x 3.5mm
Output	Headphones	1 x 3.5mm

This product complies with Australian Safety Standard AS/NZS 60065:2012.

Version number 1.0

Issue date 09/2016

Responsible Disposal

At the end of its working life, do not throw this product out with your house-hold rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.



Turntable with Cassette Deck

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost. **We recommend you save this data elsewhere prior to sending the product for repair.**

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 886 649 or write to us at:

Tempo (Aust) Pty Ltd ABN 70 106 100 252
PO BOX 6056 Frenchs Forest, Sydney, Australia NSW 2086
Tempo Help Desk: 1300 886 649 (Aust)
(Operating Hours: Mon-Fri 08:30AM to 06:00PM EST)
Email: info@tempo.org

AFTER SALES SUPPORT

(AUS) 1300 886 649

www.tempo.org

Model: ASET-1116 Product Code: 44062 11/2016



This page has been left blank intentionally.



Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, make sure to contact our After Sales Support Centre on 1300 886 649 before returning it to the store for a refund.