

## IMPORTANT SAFEGUARDS

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handles when moving this heater. Keep combustible material such as drapery and other furnishings, at least 1 metre from the heater. When in use keep the mains cord of the heater away from touching the heater body. Do not drape the cord over the heater while hot. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating unattended.
3. Always unplug heater when not in use.
4. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to suitably qualified facility for examination, electrical or mechanical adjustment or repair.
5. Do not use outdoors, the product is designed only for household use.
6. Never locate heater where it may fall into a bathtub or other water container.
7. Do not run cord under carpeting. Do not cover cord with throw rugs runners, or the like. Keep cord away from traffic areas to avoid tripping over.
8. To disconnect heater, turn controls to off, then remove plug from outlet.
9. Connect to properly earthed socket-outlet of the appropriate voltage.
10. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
11. To prevent a possible fire, do not block the grilles in any manner.
12. Do not use in areas where petrol, paint, or flammable liquids are used or stored.
13. Use the heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury.
14. Do not connect via double adapters or power boards. Avoid the use of an extension cord because the extension cord may overheat and cause risk of fire. However, if this heater is used with an extension cord, use as short a cord as practical.
15. Do not use this appliance with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the appliance is covered or positioned incorrectly.
16. In order to avoid overheating, do not cover the heater.
17. To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this heater along with all packaging material and promotional labels.
18. Fully unwind the cord before first time use
19. There are no user serviceable parts in this heater; any maintenance other than cleaning should be performed by an authorised service representative.
20. The installation of a residual current device (safety switch) is recommended to provide additional safety protection using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying power to the appliance. See your electrician for professional advice.
21. Keep these instructions handy for future reference.

## TECHNICAL SPECIFICATIONS

Model	CEH206
Max Heating Power	2000W max
Rated Frequency	50Hz
Rated Voltage	220-240V ~

## WARRANTY

Arlec guarantees this product in accordance with the Australian Consumer Law.

Arlec also warrants to the original first purchaser of this product ("you") from a retailer that this product will be free of defects in materials and workmanship for a period of 12 months from the date of purchase; provided the product is not used other than for the purpose, or in a manner not within the scope of the recommendations and limitations, specified by Arlec, is new and not damaged at the time of purchase, has not been subjected to abuse, misuse, neglect or damage, has not been modified or repaired without the approval of Arlec and has not been used for commercial purposes ("Warranty").

If you wish to claim on the Warranty, you must, at your own expense, return the product, and provide proof of original purchase and your name, address and telephone number, to Arlec at the address below or the retailer from whom you originally purchased the product within 12 months from the date of purchase.

Arlec will (or authorise the retailer to) assess any claim you may make on the Warranty in the above manner and if, in Arlec's reasonable opinion, the Warranty applies, Arlec will at its own option and expense (or authorise the retailer to) replace the product with the same or similar product or repair the product and return it to you or refund the price you paid for the product. Arlec will bear its own expenses of doing those things, and you must bear any other expenses of claiming on the Warranty.

The Warranty is in addition to other rights and remedies you may have under a law in relation to the product to which the Warranty relates.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

# ARLEC

For all Sales & Warranty enquiries

Arlec Australia Pty. Ltd. ACN 009 322 105  
("Arlec") gives the Warranty.

Building 3, 31 – 41 Joseph Street, Blackburn North, Victoria, 3130  
Blackburn North LPO, P.O. Box 1065, Blackburn North, 3130

Customer Service: (03) 9982 5111  
New Zealand Toll Free: 0800 003 329  
Email: [custservice@arlec.com.au](mailto:custservice@arlec.com.au)

CPIN002296/3

# ARLEC

## USER MANUAL

FOR PERSONAL INDOOR USE ONLY

### 2000W CONVECTION HEATER WITH TIMER AND TURBO FAN



CH206

*Luxor*

### WARNING!

**TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK,  
OR PERSONAL INJURY, READ, UNDERSTAND  
AND FOLLOW INSTRUCTIONS BEFORE  
USING THIS HEATER**

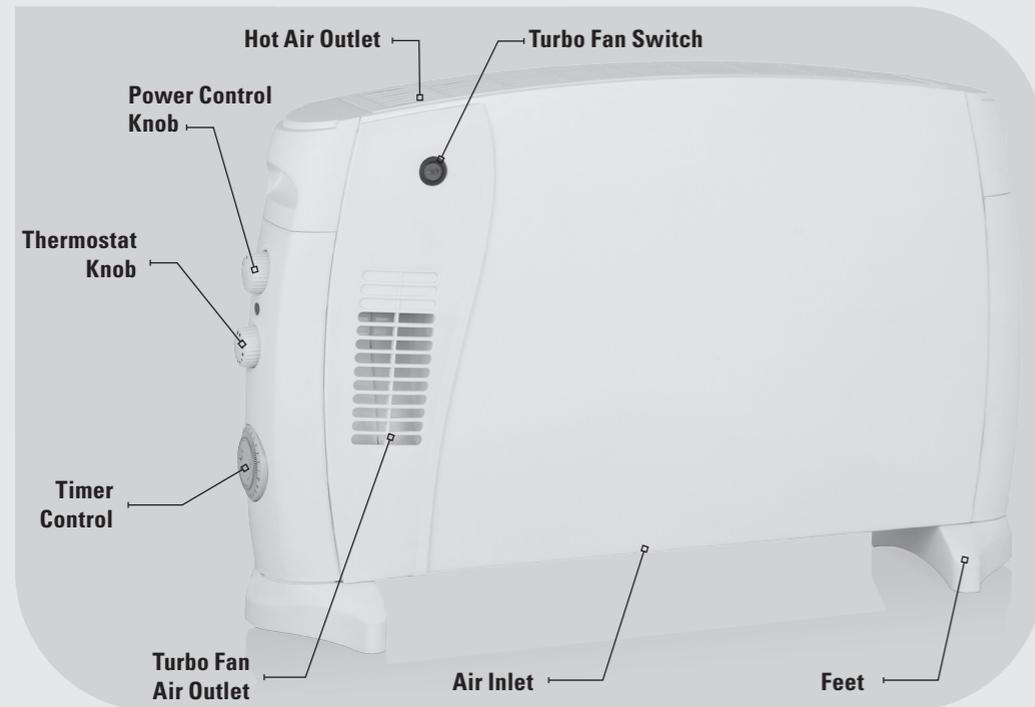
KEEP THIS MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE

## USER MANUAL

**ARLEC**

# 2000W CONVECTION HEATER

WITH TIMER AND TURBO FAN

*>Luxor<*


CH206 Convection Heater with Turbo Fan is equipped with three heat settings and a thermostat to ensure your precise heating needs are met. In addition the heater has a fan turbo option which assists with circulating warm air through your room

### 1 ASSEMBLY

The heater must always be used with feet assembled and in upright position. Attach the feet to the heater body in the order given below:

- Place the convector heater on a flat desk or carton.
- Locate the feet in position, make sure the mounting holes on the leg mounts align with the fixing holes on the heater body. Make sure the leg mount with the cord entry slot is attached at the mains cord end.
- Using 4 screws for each feet attachment secured the feet to the heater body.



### 2 IDENTIFICATION

#### i. POWER CONTROL KNOB

With the power control knob to position "o" the heating element is off. When the rotary knob is set to • the heater power is 750W (low range). When the knob is set to •• the heater power is 1250 (mid range). When the knob is set to ••• the heater power is 2000 (high range)

#### ii. TURBO FAN SWITCH

The heater is equipped with a Fan which helps to distribute heat in the room. The fan draws some of the convection heat from inside of the unit and blows it from the front turbo fan outlet grille. The heater can be used with or without the fan which is selected by the switch on the front of the heater body.

#### iii. THERMOSTAT SWITCH

The rotary knob is to regulate the heat in order to maintain a desired temperature. When the room temperature is lower than the temperature setting on the knob, the heater will function and heat up the room until the desired temperature is attained. When the ambient temperature reaches the set temperature, heat setting will be turned off automatically. Turn the knob more clockwise for higher heat settings.

#### iv. TIMER CONTROL

The heater will be always On when the slide switch is in "On" position (I). The heater will be always off when the slide switch is in "Off" position (O). The heater will be controlled by the times set on the timer when the slide switch is in TIMER position ☹. To set the timer, rotate the clock dial clockwise, until the current time is aligned with the indicator arrow at the centre. When you wish the heater to switch ON, push the corresponding time segment outwards from the centre. Each segment represents around 15 minutes. For example, if you want the heater continuously ON for 2 hours, push 8 segments outwards the centre face.

### 3 OPERATION

**CAUTION:** There may be some odour coming from the heater for the very first time you use this heater. This is normal during the break-in period or after long term storage. Make sure the heater is in well ventilated area and continue running it until the smell goes away.

#### Before First Use

Remove all the packaging material along with any promotional material. Unwind the cord to its full length and place the heater on a firm level surface in a stable, upright position. Visually inspect the air inlets and outlets to ensure that there are no blockages.

- Set the power control knobs to off position.
- Plug the heater into a 10 amp wall socket
- Ensure the heater is on a flat surface
- Set the power to desired position Low, Medium or High range. Check the time setting and adjust it to the desired time setting. Turn the thermostat knob until the heater turns on. The power on led above the knob will glow. Slowly turn the thermostat knob anti clockwise until the heater shuts off. The heater will automatically maintain this temperature. For a lower temperature rotate the knob further anti clockwise. For higher temperature, rotate the knob clockwise.

### OPERATION

- Select the fan as desired.

**NOTE:** If operated at the Low heat setting, the heater will not provide as much heat output as in the High heat setting, however the low setting will not require as much electrical power to operate. To avoid overloading a circuit, do not plug the heater into a circuit that already has other appliances working. When the heater is not in use switch off and unplug.

### 4 MAINTENANCE & CLEANING

- Before cleaning, turn off the heater, unplug the power cord and allow the heater to cool.
- Do not immerse cord, plug or heater into water or other liquid or pour water or other liquid over the heater.
- Use a vacuum cleaner to remove dust and dirt from air openings.
- Clean exterior surfaces using a solution of water and mild detergent with wrung out damp sponge. Use and wring out the damp sponge and wipe the exterior surface again. Finally wipe with a dry cloth. Allow sufficient time to dry before plugging electrical cord into outlet.
- Any other servicing should be performed by an authorized service representative. Do not use the heater if it has malfunctioned or become damaged in any way.

### 5 IMPORTANT SAFEGUARDS

#### CAUTION

- This heater is to be operated only in upright position.
- When the heater is not in use, store in a cool dry location.
- Do not store until the heater cools down.

#### WARNING

- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
- Young Children should be supervised to ensure that they do not play with the appliance.
- The heater must not be located in front of a socket outlet.
- Do not use this heater in the immediate surroundings of a bath, shower or swimming pool.

#### HELPFUL ADVISE BEFORE USE

- Please retain all packaging until you have checked and counted all the parts and the contents of the fixing pack against the parts list.
- The fixing pack contains small items which should be kept away from young children.
- We suggest that you open the fixing pack and place all the contents into a container, therefore reducing the risk of losing any small pieces.