

omega
altise

**O14B
35cm Turbo Tilt
Box Fan**



**Instruction
Manual**

Important Safety Instructions

1. Read all instructions.
2. Disconnect the power plug before dismantling, assembling or before cleaning.
3. Avoid touching mobile parts of the fan.
4. Make sure the fan is on a dry and even surface.
5. Never insert fingers, pencils or any other objects through the guards whenever the power plug is connected, especially while running.
6. The appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
7. Young children or infirm persons should be supervised to ensure that they do not play with the appliance.
8. Do not use the appliance for any other purpose than its intended use.
9. The fan must not be used if the guards are not fastened according to instructions.
10. When the power cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
11. Do not use your appliance with an extension cord unless it has been checked and tested by a qualified electrician or electrical supplier.

Read all instructions before using this unit. Keep them for future reference.


Specifications

Model	O14B – Turbo Tilt
Rated Voltage	220-240V / 50Hz
Watts	70
Dimensions (h x w x d) mm	520 x 450 x 200
Weight (carton) kg	5.1

Settings	3 speed, louvre control
Fan blade size cm	35
Tilt action	Tilting fan body
Oscillation	Rotating grille
Warranty	2 year replacement

Parts List

1. Push control switch
2. Rear Guard
3. Cord
4. Plug
5. Foot
6. Fan blade
7. Front cover
8. Grille hub
9. Grille
10. Fan body

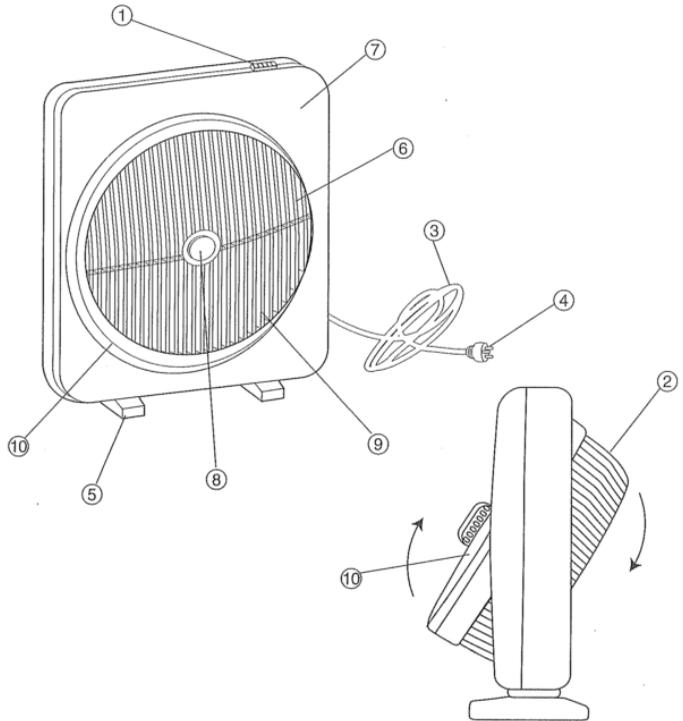

Operating Instructions

1. Use in a dry place, free of excessive humidity and water.
2. To set the fan in motion push the switches to obtain desired fan speed:
0 = OFF 1 = LOW 2 = MEDIUM 3 = HIGH
The fifth button operates the rotating louvre
3. The direction of the airflow is vertically adjustable by tilting the fan body as shown above.
4. To stop the fan and rotating louvre push the 0 button.

Care and Maintenance

1. Always disconnect the cord from the electrical outlet when cleaning your fan.
2. Light accumulated dust may be removed from the fan with a soft cloth or vacuum cleaner using the dusting brush attachment.
3. Wipe the exterior surfaces of the fan occasionally with a cloth moistened (not dripping wet) with a mild soap solution. Dry the case thoroughly with a soft dry cloth before operating the fan.
4. Avoid the use of gasoline, benzine, thinner etc as they may result in damage to the fan.
5. To clean the fan blades use a screwdriver to remove the rear guard (3 screws), unscrew the blade fixing screw to take the blade off. Clean the blade with a soft cloth moistened with a mild soap solution. Replace by tightly securing the blade with the blade fixing screw. Place the rear guard back into position and fix with the screws.
6. Store the fan in a clean dry place when not in use.



CAUTION! Do not immerse the fan in water or allow water to drip into the interior of the fan housing as this could create a fire or electric shock hazard.



WARNING! Do not attempt to repair the fan yourself. Doing so could void the warranty and cause damage or personal injury.

Omega Altise products are distributed in Australia by MEA,
(A Division of Hagemeyer Brands Australia Pty Ltd)

ABN 28 001 375 686

Locked Bag 4013, Kingsgrove NSW 2208

Phone: 1300 739 033

Fax: 1800 838 899

Email: customerservice@meappliances.com.au

Web: meappliances.com.au