

Safety **1st**®

VERSO NEST 4 WHEEL STROLLER

Suitable for newborn to 17kg (approximately 4 years)



Illustration and designs may vary.

CONTENTS

Warnings	3
Components list	4

ASSEMBLING THE STROLLER

Opening stroller	5
Wheels assembly	6
Fitting seat	7
Bumper bar	7
Canopy	8

USING THE STROLLER

Operating brakes	9
Front swivel wheels	9
Stroller seat positions	10
Adjusting footrest	11
Adjusting backrest	11
Adjusting seat recline	11
Using as bassinette	12
Harness adjustment buckle	13
Adjusting harness height	14
Tether strap	14
Folding stroller	15
Unfolding stroller	16
Carrying stroller	16
Fitting raincover	17

CARE AND MAINTENANCE

Care and Maintenance	19
----------------------------	----

CONTACTS

Customer Service	20
------------------------	----

These instructions detail the safe use, assembly and maintenance of your product. Please read these instructions carefully and ensure that they are followed at all times. Failure to do so could result in serious injury or death.



WARNING TO AVOID INJURY OR DEATH:

ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

FOLLOW THE MANUFACTURER'S INSTRUCTIONS.

DO NOT LEAVE CHILDREN UNATTENDED.

SECURE THE CHILD IN THE HARNESS AT ALL TIMES AND ENSURE THAT THE SAFETY HARNESS IS ADJUSTED FIRMLY BUT COMFORTABLY TO THE CHILD'S BODY.

DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.

MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER, OTHERWISE THEY MAY BE INJURED.

TO AVOID INJURY ENSURE THAT YOUR CHILD IS KEPT AWAY WHEN FOLDING AND UNFOLDING THE STROLLER.

ENSURE THAT ALL LOCKING DEVICES ARE ENGAGED BEFORE USE.

Never leave safety harness connected when not fitted to a child in the stroller, as this may create loops that cause a strangulation hazard.

Never leave a child in the pram/stroller when ascending or descending stairs or escalators, or when travelling on others forms of transport.

Use the tether strap to prevent the stroller rolling away.

Do not allow children to stand on the seat or footrest.

Do not attempt to lift the stroller by the bumper bar.

Engage front wheel swivel locks when travelling on rough or uneven surfaces.

Regularly inspect all parts and locking devices, promptly replace worn out or broken parts.

Use only those accessories which are supplied by Dorel Australia and approved for use with this stroller.

To prevent the risk of the stroller catching fire, do not park it near an open fire, heater or barbecue.

Fingers or parts of the body could be injured when the stroller is being folded or unfolded. Please use caution when folding or unfolding the stroller.

This stroller has been designed for use on flat or gently sloped surfaces. Using this stroller on uneven or higher sloped surface may cause the stroller to become unstable and tip over.

Do not run or jog with this stroller.

The Verso Nest 4 Wheel Stroller has been approved in accordance with AS/NZS 2088:2013.

The weight of the child using this stroller should not be more than **17kg** (approximately 4 years of age).

Shopping basket capacity should not be more than **3kg**.

Components List



- A** Canopy
- B** Shoulder height slots
- C** Bumper bar
- D** Buckle
- E** Reversible seat pad
- F** Adjustable footrest

- G** Swivel locks (both sides)
- H** Front swivel wheels (both sides)
- I** Folding locks
- J** Handle
- K** Recline lever

- L** Harness pads
- M** Storage latch
- N** Storage latch strike
- O** Shopping basket
- P** Rear brake lever
- Q** Rear wheels (both sides)

Assembling Stroller

STEP 1: OPENING STROLLER

- If the stroller has a security tie, please remove it.
- Release the storage latch (Figure 1a).
- Simultaneously lift handle while pulling on the frame until the locking mechanism engages (Figure 1b).
- Push down on the handle to check that locks have fully engaged.




The seat is not attached to the frame. Move it to a safe location for later installation.

Note:

- Folding strollers and accessories will always have the potential to trap fingers or parts of the body between moving parts, causing injuries. Care should be taken while folding or unfolding.
- This vehicle is designed for use on flat or gently sloping surfaces and may be unstable on higher sloping and uneven surfaces. You should always be aware of the possibility of the stroller tipping on uneven or higher sloping surfaces.

Assembling Stroller

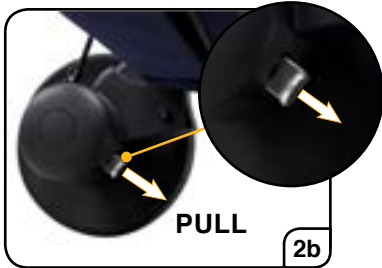

STEP 2: REAR WHEEL ASSEMBLY

- Slide rear wheels onto the frame of the stroller (Figure 2a).
- Push the wheels in until you hear them lock into place. Listen for 'click'.
- To remove the rear wheel assembly, pull and hold the metal tab while removing rear wheel from the axle (Figure 2b). Repeat on the other side.



STEP 3: FRONT WHEEL ASSEMBLY

- Align the shaft on the wheel with the hole in the front leg and push in (Figure 3a). Listen for a 'click'.
- Repeat on the other side.
- To remove the front wheel assembly, locate the metal pin on the inside the front tube and press it inwards while pulling the wheel off (Figure 3b).

Assembling Stroller

STEP 4: FITTING SEAT

- Align the seat with the frame and push, listening for a 'click' to lock in place (Figure 4a).



REMOVING SEAT


- Pull the seat release levers up on both sides (Figure 4b), and whilst holding both levers up, lift the seat.



Note: Refer to **page 10** for changing between forward and rearward seat positions.


STEP 5: ATTACH BUMPER BAR

- Align bumper bar shaft with the hole in the frame and push in (Figure 5a).
- Listen for the 'click', then repeat on the other side.

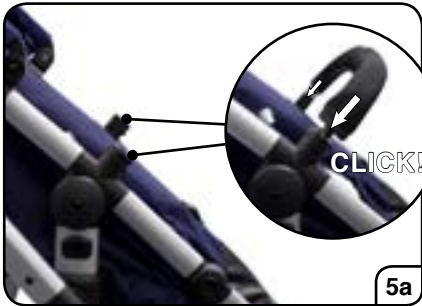


REMOVING BUMPER BAR

- To remove bumper bar, press both grey buttons under the bumper bar (Figure 5b), and remove.

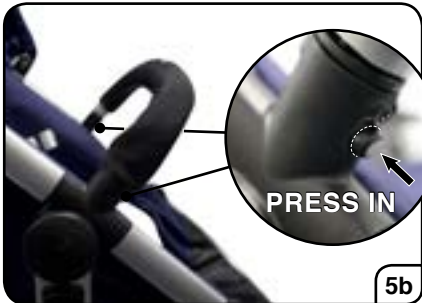

Assembling Stroller

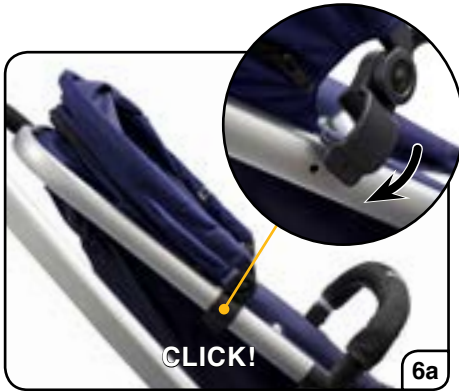

STEP 6: ATTACHING CANOPY


- Ensure canopy is correctly fixed to the stroller by attaching the plastic clip to the frame, in line with the hole in the frame.
- Repeat for both sides.

USING CANOPY

- To use the canopy, pull the front edge forward to open (Figure 6b, 6c).
- To extend canopy, flip the visor down into position (Figure 6d).
- To further extend canopy, unzip and pull the front edge forward to reveal the breathable mesh extension (Figure 6d).
- When not using, ensure the extension is zipped, and then simply push the canopy back until it is fully collapsed.



Using Stroller

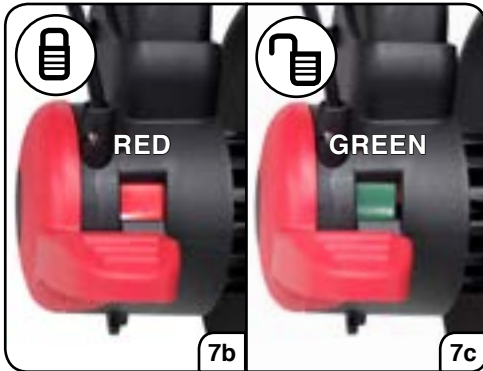

OPERATING BRAKES

- To apply the brake, press down firmly on the brake lever (Figure 7a).
- To release the brake, press the brake lever again.
- The brake indicator will display **RED** when locked (Figure 7b).
- The brake indicator will display **GREEN** when released (Figure 7c).



OPERATING FRONT SWIVEL LOCKS

- To apply the front swivel locks, push the button downwards on both wheels (Figure 8).
- To release the lock, push the same button again.

Using Stroller

STROLLER SEAT POSITIONS

- Press the seat release buttons on both sides, and whilst holding both buttons in, lift the seat (Figure 9a).
- Turn the stroller seat around and align with the frame and gently push down (Figure 9b).
- Listen for 'click' to lock in place.



**FORWARD-FACING
POSITION**



**REARWARD-FACING
POSITION**

Using Stroller



ADJUSTING FOOTREST

- Press both adjustment buttons simultaneously and rotate to the desired position (Figure 10).
- Listen for 'click' to lock in place.



ADJUSTING THE BACKREST

- To lower the backrest, pull the clip on the seat back downwards (Figure 11a).
- To raise the backrest, pull both drawstrings outwards (Figure 11b).

SEAT RECLINE

- To recline the seat fully, lift the lever (Figure 12a) and rotate the seat into the desired position (Figure 12b).




CAUTION

Ensure child's limbs are inside the seating area before adjusting the backrest.

TIP:

The backrest can be adjusted into 3 different positions.

Using as Bassinette

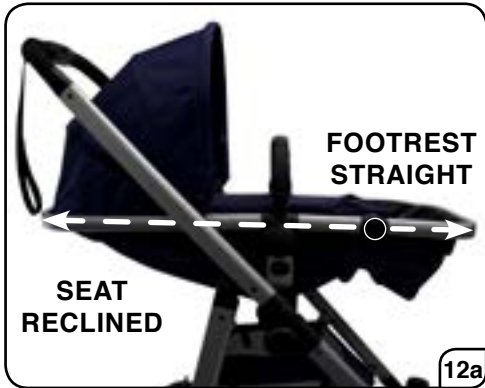

TO USE AS BASSINETTE

- Adjust backrest to lowest position, and adjust the footrest so it runs in a straight angle along the seat frame (Figure 12a).
- Press the seat release buttons on both sides to remove seat (see page 7).
- Unfasten the support strap clip below the seat (Figure 12b).
- With the support strap released, the seat interior is free to fold out into the bassinette position.
- Align the bassinette with the frame and gently push down (Figure 12c). Listen for 'click' to lock in place.
- The bassinette can be used in both rearward and forward facing positions (Figure 12d).




Using Stroller

SECURING YOUR CHILD





5 points of the harness can be adjusted by moving each straps' slider (**figure A1**).

To tighten or loosen the waist and/or shoulder straps, hold and lift the plastic adjuster. Adjust straps to desired position. The waist strap needs to fit firmly around the child.

1. Slip one shoulder strap (A) over each shoulder and position crotch strap between legs (B)

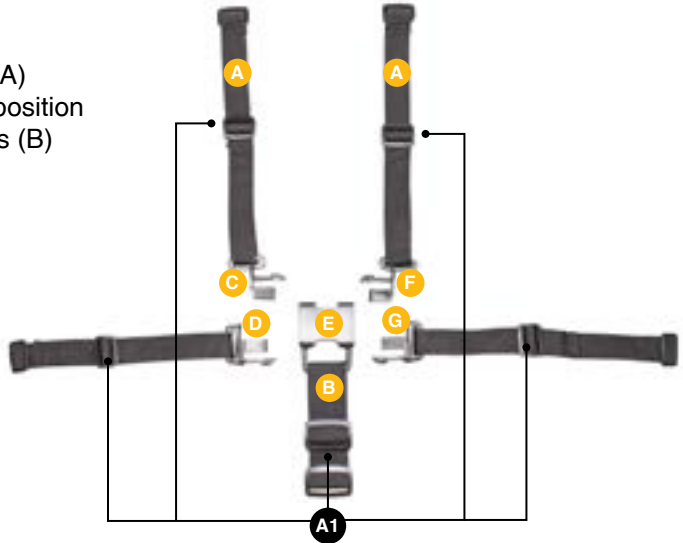


2. Place buckle prong (D) on top of buckle prong (C)
3. Insert the prongs into the buckle housing (E) until it clicks into position. Repeat the above steps for the opposite side (F and G). Pull straps to ensure they are locked into the buckle assembly.
4. The harness should resemble this image.
5. The buckle is released by squeezing the top and bottom prongs together until harness disengages. (Figure 5).

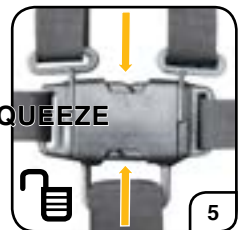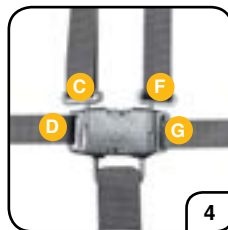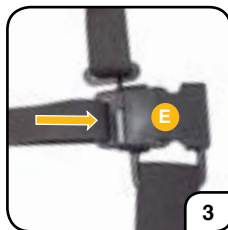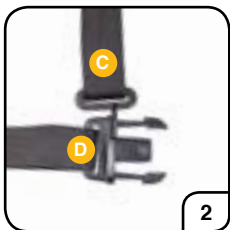

Using Stroller

ADJUSTING HARNESS HEIGHT

- The harness can be set at two heights, as displayed in Figure 14a and Figure 14b.
- To use the first height, feed the harness anchors through the seat-back in lower slots (Figure 14c) before feeding through the seat pad and securing harness.
- To use the second height, feed the harness anchors through the seat back in upper slots (Figure 14d), before feeding through the seat pad and securing the harness.

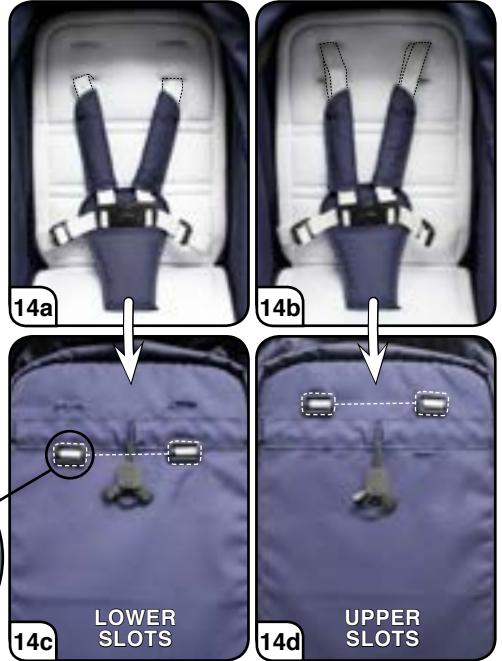

TETHER STRAP

- Whenever a child is in the stroller and brakes are NOT engaged, the large loop should be around your wrist (Figure 15).



WARNING

Use this strap to stop the stroller rolling away.



Using Stroller

FOLDING STROLLER WITH SEAT


- Before beginning: fold the canopy back, adjust the seat backrest to upright position, unlock the swivel wheels, and apply the rear brakes.
- Press and hold button (Figure 16a) on the underside of the handle while twisting handle inwards (Figure 16b).
- Press down on the handle to fold the stroller while keeping the folding locks held.
- The storage latch will automatically engage when fully folded (Figure 16c).



Using Stroller

UNFOLDING STROLLER

- Release the storage latch (Figure 17a).
- Lift handle until stroller is fully open and locking mechanism engages (Figure 17b).
- Push down on the handle to check that the locks have been fully engaged.

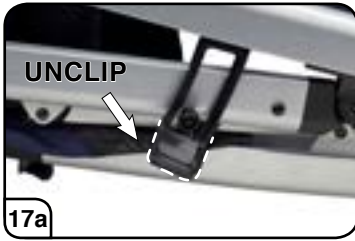

STORAGE LATCH



WARNING

To avoid injury ensure that your child is kept away when folding and unfolding the stroller.

CARRYING STROLLER

- Fold the stroller, and ensure that storage latch is applied before continuing.
- Carry stroller by holding frame between the rear wheel and the storage latch (Figure 18).



CAUTION

Avoid holding the stroller in other locations to avoid injury from moving parts.





TO FIT THE RAINCOVER

- Spread the raincover over the stroller and pull over the seat (Figure 19).
- Attach velcro tabs to secure raincover.

Notes

Care and Maintenance

CARE AND MAINTENANCE

- Always store in a clean and dry place.
- Clean the frame by wiping with a damp cloth.
- Do not use abrasives, bleach or strong detergents.
- Spot clean fabrics with warm water and mild soap.
- Ensure fabric is dry before storing.
- Occasionally clean and lubricate wheels with a light lubricating oil.
- Regularly check for loose parts and tighten when required.
- Damaged or broken parts should be immediately replaced.

safety1st.com.au

DOREL AUSTRALIA PTY LTD
655-685 Somerville Road
Sunshine West Victoria 3020
Email: customerservice@dorel.com.au
Phone: 1300 809 526
Hours: 8:30 am - 5:00 pm
Monday to Friday

IGC DOREL NEW ZEALAND LTD
14 Sir William Avenue
East Tamaki Auckland 2013
Email: customerservice@igc.co.nz
Phone: 0800 628 000 (toll free)
Hours: 8:00 am - 5:00 pm
Monday to Friday



Specifications are subject to change without notice.
Copy or reproduction without permission is prohibited.
© 2016 Dorel Australia Pty Ltd. All Rights Reserved.

www.dorel.com.au