



**FOR MEN**



# **METRO CORDLESS HAIRCUT**

Model VS704A

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

**DANGER:** When the unit is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the unit is switched off.



**WARNING:** Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water.

- Do not immerse in water or other liquids. .
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the moving blades of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance

**IMPORTANT:** Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat sensitive surface and always allow to cool before storing away.


- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- Do not use the appliance with damaged or broken attachment combs or with any teeth missing from the blades, as injury may occur.
- Use this appliance only for its intended use as described in this instruction booklet.
- This appliance is not intended for commercial use.
- Do not place appliance on any surface while it is operating.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Never drop or insert any object into any opening
- Do not use the appliance if it is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device(RCD) with a rated operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

## METRO CORDLESS HAIRCUT

The VS For Men Metro Cordless Haircut is a rechargeable cordless hair clipper with a high performance motor and sharp blades. With 10 comb cutting lengths from 3mm to 25mm including left and right ear guides and a range of grooming accessories, the Metro Cordless Haircut clipper is the most convenient way to keep you looking good.

### Features:

1. 8 cutting guides for hair  
+ 2 ear contours guides  
(left/ right)
2. Blades: large 39mm blades
3. OFF/ON/Turbo switch
4. Charging indicator light
5. Turbo function
6. Oil
7. Cleaning brush
8. Comb
9. Scissors
10. Storage pouch

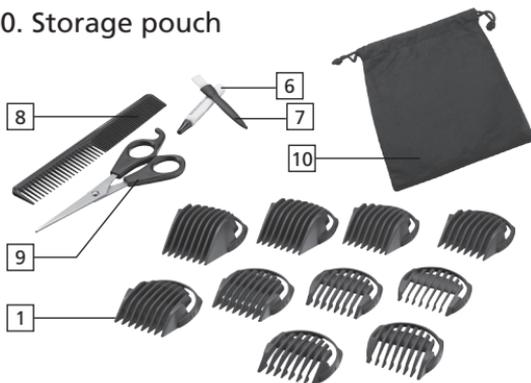

## INSTRUCTIONS FOR USE

**CAUTION, THIS APPLIANCE DOES NOT OPERATE WHILE ON THE MAINS AND SHOULD BE CHARGED BEFORE USE.**

To guarantee battery autonomy and life, charge the batteries for 16 hours before using for the first time and then approximately every three months.

Before any use, recharge the appliance for 16 hours, ensuring the power switch is in the 'OFF' position and that the charging indicator light is lit.

A full charge will allow a minimum of 30 minutes of use of the clippers.

Never charge the unit for periods longer than 24 consecutive hours and only use the charger provided.

### **Before Use:**

Always inspect the appliance to ensure the clipper head is free from hair, etc. and is running smoothly. Failure to do this can result in injury.

## COMB GUIDE ATTACHMENTS

The appliance is supplied with 10 comb cutting lengths from 3mm to 25mm including left and right ear guides. The comb guides are marked with the following grade number:

Grade 1 = 3mm

Grade 2 = 6mm

Grade 3 = 9.5mm

Grade 4 = 13mm

Grade 5 = 16mm

Grade 6 = 19mm

Grade 7 = 22mm

Grade 8 = 25mm

Left Ear Guide = LEFT

Right Ear Guide = RIGHT

## USING THE CUTTING GUIDES

To attach a comb guide and to remove it, ensure the appliance is switched off.

- To attach it, position the comb guide over the front of the clipper blade and slide over the head. Push and click the rear of the comb guide into position (Fig. 1).
- To remove it, push the tab on the rear of the comb guide away from the head and lift off (Fig. 2).

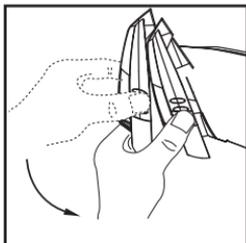


Fig. 1

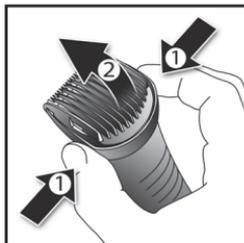


Fig. 2

## **BEST CUTTING PERFORMANCE**

1. Ensure the clipper head is free from hair and other debris.
2. Use on clean, dry hair that has been combed until tangle-free.
3. The person whose hair is to be trimmed or cut should be seated so that the top of their head is at your eye level.
4. Attach the appropriate comb guide attachment as required. If using more than one grade, start with the longer first.
5. Switch the clipper on.
6. Hold the clipper against the hair, with the teeth of the clipper pointing upwards, yet flat against the head.
7. Move the clipper upwards and outwards through the hair, a little at a time clipping against the direction of the hair growth.
8. The clipper will work most efficiently when cutting through the hair at its own speed. Never force the clipper.
9. Never switch the clipper off whilst in the hair.

## **SUGGESTED HAIR CUTS**

### **FOR LONGER HAIR ON TOP OF THE HEAD**

Use the barber comb to lift the hair on top of the head and use the Clipper to cut across the top of the comb. Alternatively, hold the hair between the fingers and cut to desired length, always working from the front, to the back of the head. Gradually cut the hair shorter by reducing the space between the comb or fingers and the head (Fig. 3). Comb often to check for uneven strands and to get rid of trimmed hair.



**Fig. 3**

## OUTLINING THE HAIR

Outlining requires no attachments. Comb hair into the desired style. Position the Clipper between the sideburns and ear, making sure the corner edge of the blade is against the hairline. With the outline of the hair as your guide, slowly move the Clipper over, around and behind the ears (Fig. 4). For the back of the neck and the sideburns, hold the Clipper upside down, holding it against the skin at the length desired, move the Clipper downwards (Fig. 5).



Fig. 4



Fig. 5

## CREW CUT

Always cut from the back of the neck to the crown, using the longest comb setting. Hold the comb attachment flat against the head and slowly move the Clipper up through the hair (Fig. 6). Use the same technique for the sides, cutting from the bottom to the upper side of the head. For the front crown, cut the hair against the direction in which it grows. Then even it up with the sides.



Fig. 6

## FLAT TOP

Use the barber comb and simply cut the hair on top of the head by running the Clipper over the barber comb (Fig. 7). To taper the hair down to the neckline, use the 3mm attachment comb. Comb the hair to remove any loose cut hair and check for uneven spots. Then outline the sideburns and the neck area (see 'Outlining').



Fig. 7

## CLEANING AND MAINTENANCE

To ensure long lasting performance of your clipper, clean the blades and unit regularly.

After each use, clean the clipper as follows:

1. Remove the comb guide after use. Rinse under running water and dry thoroughly before storage or use.
2. To make cleaning easier, the clipper blades can be removed. Make sure the clipper is turned off. Hold the clipper with the blades pointing up and remove them by pressing the top of the blade. (Fig. 8)

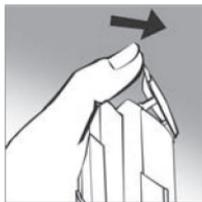


Fig. 8

3. Using the cleaning brush, brush and blow away any remaining hair.
4. After cleaning, switch the appliance on, and oil the blades by adding a few drops of the oil supplied over the blades. Only use the lubricating oil supplied with this appliance as this is specifically formulated for high speed clippers and does not evaporate or slow the blades.
5. To clean the clipper unit, wipe with a damp cloth and dry immediately.
6. Do not use any liquid cleaners or harsh corrosives on the clipper unit.

**IMPORTANT** – Never place the blades under running water, as this can ruin the cutting performance of the blades. Always use the cleaning brush to clean the clipper head and blades.

## BATTERY DISPOSAL

The appliance contains Nickel Metal-Hydrate batteries. To protect the environment, the appliance must be disposed of safely at the end of its useful life. Please take the appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.



Ni-MH

For more information about the recycling of electrical and battery operated appliances, please contact your local council office or your household waste disposal service.

## **LIMITED TWO YEAR WARRANTY**

This product is subject to the express warranty given on the warranty card included with the product, as may be amended by reference to and in accordance with the terms of the warranty cards displayed on VS For Men website [www.vsformen.com.au](http://www.vsformen.com.au)

Please retain a copy of your purchase receipt as proof of purchase within the warranty period.

Vidal Sassoon and related logos are trademarks of  
The Procter & Gamble Company used under licence by Conair

**CONAIR®**

©2013 Conair Corporation USA

Conair Australia Pty Ltd, Suites 20 & 21,  
7 Narabang Way, Belrose NSW 2085.

Australia Customer Service Hotline (Australia): 1800 650 263

Customer Service e-mail: [aus\\_info@conair.com](mailto:aus_info@conair.com)

Conair New Zealand Limited, PO BOX 251159, Pakuranga, Auckland  
1706 New Zealand

Customer Service Hotline (New Zealand): 0800 266 247