

! Attention: Please read the operating manual prior to operating the machine for the first time.



- 1 On/Off button
- 2 LED progress indicator lights
- 3 Start/Cancel button
- 4 Combi Tablet button
- 5 Programme selection Knob
- 6 Rinse aid level indicator light
- 7 On/Off indicator light

How to use your dishwasher:


- Open the water tap.
- Plug to the mains.
- Open the door and load the dishwasher. Check if both upper and lower spray arms move freely.
- Fill enough detergent into the detergent dispenser and close the door.
- Use the on / off button to turn the machine on.
- Check rinse aid level indicator light. If necessary, refill rinse aid.
- Use the program selection Knob to choose your washing program.
- Start the program with the Start/Cancel button:

Attention

Avoid opening the door during the washing process. This interrupts the washing process, and hot steam will escape. When the door is closed, the programme will continue.

- Use the On / Off button to turn the machine off again. When the progress indicator light "programme end" lights up, the programme is complete.
- Close the water tap. Pull out the plug.
- Allow your dishes to cool for 15 minutes, with the door open. Unload the dishes. Begin with the lower basket.

Programme Table
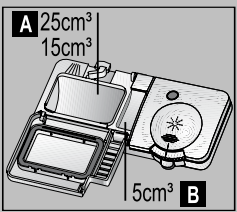
| Programme number | 1 | 2 | 3 Reference* | 4 | 5 |
|--|---|---|---|--|--|
| Programme name | Pre-wash | 30 Min | Eco | Quick | Intensive |
| Cleaning temperature | - | 35°C | 45°C | 60°C | 70°C |
| Degree of Soiling | Suitable for removing the remnants on the soiled dishes that will be kept waiting in the machine for a few days, and thus, for preventing the bad odor buildup. | Suitable for lightly soiled daily dishes that are scraped or pre-cleaned. | Most economical washing program for the normally soiled daily dishes that are kept waiting. | Daily washing program at which heavily soiled dishes are cleaned in the fastest way. | Suitable for heavily soiled dishes, pots and pans. |
|  | - | A | A+B | A+B | A+B |
| Detergents A=25 cm ³ /15 cm ³ B=5 cm ³ | - | A | A+B | A+B | A+B |
| Programme sequence (without options) | Pre-wash ▼ End | Wash ▼ Cold rinse ▼ Hot Rinse ▼ End | Pre-wash ▼ Wash ▼ Cold rinse ▼ Hot Rinse ▼ Dry ▼ End | Wash ▼ Cold rinse ▼ Hot Rinse ▼ Dry ▼ End | Pre-wash ▼ Wash ▼ Cold rinse ▼ Hot Rinse ▼ Dry ▼ End |
| Duration (min) | 14 | 30 | 124 | 58 | 115 |
| Water (l) | 4,2 | 11,8 | 15,4 | 11,8 | 17,5 |
| Energy (kWh) | - | 0,79 | 0,88 | 1,32 | 1,67 |

The consumption values shown in the table were determined under standard conditions. Differences may therefore occur under practical conditions.


* Reference programme for testing institutes according to AS/NZS 2007



- 1 On/Off button
- 2 LED progress indicator lights
- 3 Start/Cancel button
- 4 Combi Tablet button
- 5 Programme selection Knob
- 6 Rinse aid level indicator light
- 7 On/Off indicator light

On/off button

Push in the on/off button and check that the indicator light comes on.

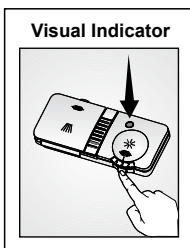

Rinse aid level indicator light

If the indicator light comes on, you have to refill rinse aid (If applicable).

You can also tell whether rinse aid must be refilled by looking at the rinse aid dispenser. When the visual indicator is dark, there is enough rinse aid in the dispenser.

When the colour is light, open the dispenser and refill rinse aid.

Program selection Knob


Use the program selection Knob to choose your washing program.

Combi Tablet Button

Allows to obtain a better drying performance from the multi-purpose detergents called as all in one detergents such as 2in1, 3in1, 4in1, 5in1 and etc., depending on the hardness level of the tap water. The programs in which the Combi Tablet function can be enabled are indicated in the Program Data and Table of Average Consumption Values. Combi Tablet symbol lights up when you select the Combi Tablet function.

Start/Cancel button

You use the button to start the selected program; the light on the button lights up. Stop the program with the Start / Cancel button if you would like to open the door once the dishwasher's washing program is running.

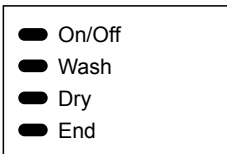

LED progress indicator lights

The program sequence throughout the washing process can be monitored from the progress indicator lights on the control panel.

! Warning

Following the washing stage, in order to drain and remove water from inside the machine completely, the machine will cancel for approximately 35 minutes. Do not worry this is not a fault. The End progress indicator light will come on when finished.

! Warning

Do not switch the machine off before End light comes on.

How to cancel the washing program

To cancel a program while the machine is operating: Press start/stop button for 3 seconds. The machine will drain the water inside the machine for 45 seconds. The program is cancelled when washing light goes off. Then, you can choose and start a new program.

! Important: Depending on the stage of the program you have cancelled, there may be detergent residue or rinse aid inside the machine and on the load. Make sure the items in the dishwasher are not used before washing properly.

Improper Loading Of Dishware

