


# N4EU - E4EU

## Timer operation

### 1. Initial operation:

1.1 Turn on the heater and wait for approx. 5 min for the timer-unit to charge. If the battery back-up is empty, the display may need a charging-time of at least 30 min. before normal operation.

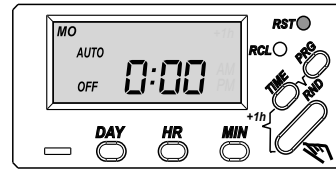

It may also be necessary to start the timer and set the time, if the colon is not flashing, the 'TIME' button must be pressed to start the timer, **none of the functions will work until the colon is flashing.**

1.2 Press the RST-button to reset the unit.

### 2. Time-setting:

#### 2.1 Day:

Press the TIME- and DAY-buttons simultaneously. The day-value increases by one.



#### 2.2 Hour:

Press the TIME- and HR-buttons simultaneously. The hour-value increases by one.




#### Note:

For the summer-/winter-time function to work properly; adjust the hour according to winter-time

#### 2.3 Minute:


Press the TIME- and MIN-buttons simultaneously. The min-value increases by one

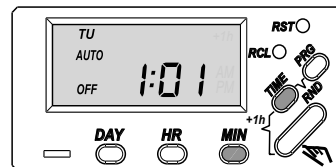

**Note:** For fast increasement of time-values, press the DAY-,HR- and MIN-buttons for more than 1 sec.

### 3. Programming:


3.1: Press the PRG-button to start programming

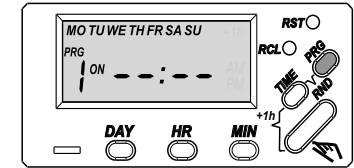


3.2: Press the DAY-button several times to select which day(s) the program is to be executed.



3.3: Press the HR/MIN-buttons to set the ON-time for the program.

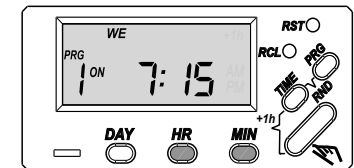


3.4: Press the PRG-button to acknowledge the ON-time setting.

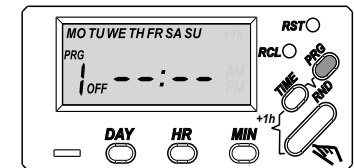

3.5: Repeat step 3.2-3.3 for OFF-time setting.

3.6: Press the PRG-button to acknowledge the OFF-time setting.

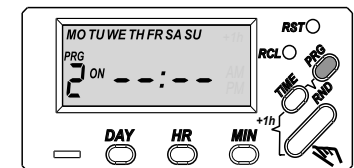

3.7: Repeat step 3.2-3.6 for Program 2-6

3.8: Return to normal operation by pressing the TIME-button

