

**KINGS** A D V E N T U R E  
**USER MANUAL**



**ESCAPE FRIDGES**

# INTRODUCTION

This manual covers the safety information and use instructions for the Adventure Kings Escape Fridges. For any questions or warranty claims please call 1800 883 964.

**PLEASE READ AND UNDERSTAND THIS MANUAL  
COMPLETELY BEFORE USING THIS PRODUCT.**

## SAFETY & PRECAUTIONS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should not play with the appliance.
- Cleaning and user maintenance shall not be performed by children without supervision.
- The use of accessories that are not recommended by 4WD Supacentre can cause injuries and will invalidate any warranty that you may have.
- The appliance shall not be exposed to rain. Place the refrigerator on a dry, protected surface away from sharp edges.
- Do not use the refrigerator in uncovered, outdoor areas exposed to the elements.
- Do not use this appliance near direct heat sources, for example, a cooker, radiator or exposing it to direct sunlight.
- Do not place ice or liquids which are not sealed in containers within the refrigerator.
- Do not place hot products or hot food in the refrigerator.
- Place the products so that they do not knock against each other or break when the appliance is in transit.
- Before carrying out any maintenance operations on the refrigerator, disconnect the power cable from the power input panel.
- If there is accumulated water inside the appliance resulting from defrosting, DO NOT turn the appliance upside down, instead use a cloth to dry the water.
- This appliance is suitable for camping use.
- **WARNING:** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction. Leave a space of at least 15cm across all its sides.
- **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process.
- **WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by 4WD Supacentre.

- **WARNING:** When positioning the appliance ensure the supply cord is not trapped or damaged.
- **WARNING:** Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- **FOR SAFE DISPOSAL:** Dispose of appliance at a suitable resource and recovery centre. Do not use a damaged supply cord. If your supply cord is damaged please contact 4WD Supacentre for a replacement.

## OPERATING THE APPLIANCE

To Turn ON the fridge press the power button. The temperature display will light up and the compressor will start to operate.


To adjust the temperature, press the + or – buttons until the desired temperature is shown. The appliance will begin to cool down to the set temperature.

NOTE: Pre-cooling your fridge over 24hours before placing items inside the fridge is highly recommended for optimum performance.

Press the SET button to toggle between various cooling modes: ECO (energy saving) or MAX (Fast Cooling mode). The default setting is MAX.

To change the battery protection level, with the fridge on, long press (hold for 3 seconds) the set button until the 'H' begins to flash. Short press the set button to toggle through 'H, M, L.' Once the selection is made 'H, M, or L' will flash for 3 seconds then go solid indicating the selection is confirmed.

To change from °C to °F; turn the unit off using the power button then long press (hold for 3 seconds) the set button until E1 appears, from there short press the set button 4 times until E5 appears, then use the + or - button to toggle between °C to °F, once the selection is made press the power button to exit out of this menu, this will also turn the fridge back on.

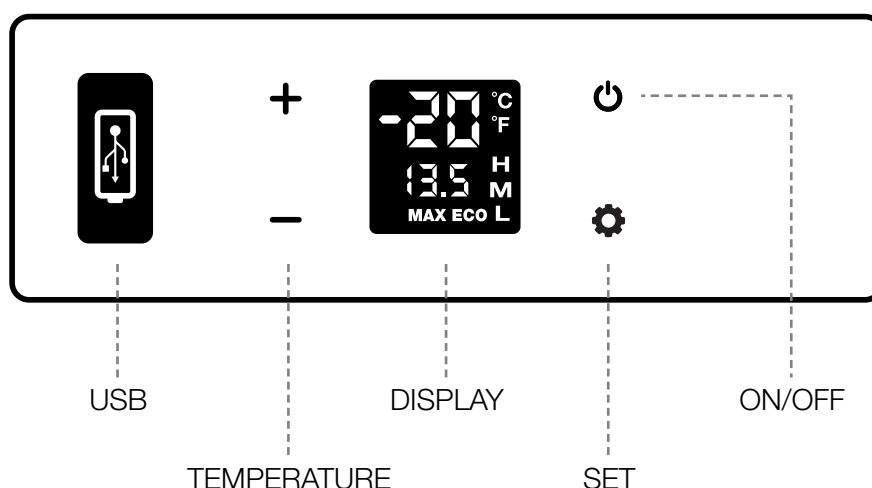

# DISPLAY

- Temperature: shows the actual internal temperature, when pressing the + or – temperature buttons this will change to the desired temperature before reverting back to the actual temperature.
  - °C or °F reflects if the display is in Celsius or Fahrenheit.
  - H / M / L reflects the low voltage battery protection setting.
  - MAX / ECO will display depending on the cooling mode
  - Voltage usage by compressor is displayed below the temperature.
  - Battery gauge reflects the voltage being used by the compressor. It is NOT a reflection of the state of charge of your battery.
- 

# BATTERY PROTECTION

This unit has an in-built automatic low-voltage cut-out system, designed to protect your battery from discharging completely. This will automatically turn off the compressor when the battery discharges to cut-out voltage. The compressor will automatically restart when voltage increases to cut in voltage.

If your fridge cuts out due to the voltage dropping, indicated by 'F1' appearing on the screen this may be due to the battery protection being set too high. Consider lowering the battery protection level from H to M, or from M to L.

---

# CLEANING AND CARE

Always disconnect the product from the power source before cleaning.

Remove the power plug from the product to avoid any damage to it when cleaning.

Use a soft cloth to dry out the inside of the fridge when you have finished using it and intend to put it away for storage. Always allow the fridge to air out for 24hours with the lid door open to ensure that it is completely dry before storage. Failure to do so may encourage mould and bacteria growth.

---

# TROUBLESHOOTING

The various codes may show on the display panel, here is what they mean and what to do:

- F1** Low voltage protection. See LOW VOLTAGE PROTECTION section of this manual, change the setting to M or from M to L.
  - F2** Fan overload protection. Turn off the appliance and restart it after 30 minutes.
  - F3** Compressor frequent start protection. Turn off the appliance and restart it after 30 minutes.
  - F4** Compressor is overloaded or working at a low speed. Turn off the appliance and restart it after 30 minutes.
  - F5** High temperature compressor protection. Please move the product to a ventilated area and turn it off for 30 minutes then restart it.
  - F6** No parameter can be detected by the controller. Please restart the product.
  - F7 or F8** Temperature sensor error protection. Please check the sensor terminal.
-

# WARRANTY

## 24 MONTH LIMITED WARRANTY

### WARRANTY PERIOD:

Full 24 month warranty from date of purchase against all manufacturing defects.

---

### WHAT DOES THE WARRANTY COVER?

Under normal usage conditions, this warranty covers:

- a. Any defect in design or manufacture which results in the product failing to perform substantially as described in authorised advertising or literature.
- b. We will either repair or replace the product at our discretion providing that the fault is found to have been caused by a design or manufacturing defect and not misuse or tampering.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits provided to you as the consumer by this warranty are in addition to other rights and remedies available to you under the law.

---

### THE WARRANTY DOES NOT COVER:

- a. Any damage resulting from improper use
  - b. Faulty installation or modification made during installation
  - c. The cost of removing and reinstalling the product
  - d. Travel and /or other expenses due to customer's remote location
  - e. Transport charges and damage in transit. It is your responsibility to deliver and pick up your product, including any costs associated with the postage of your repair or replacement product. If you do freight your product we recommend that you insure against loss or damage.
  - f. Any loss directly or indirectly associated with the product failing to operate.
  - g. Damage caused by mould, insects, animals, misuse, incorrect operation, adverse weather, accidents and fair wear and tear
- 

TO MAKE A CLAIM, PLEASE ENSURE YOU RETAIN YOUR SALES RECEIPT OF PURCHASE

# 1800 88 39 64



### OUTDOOR SUPACENTRE PTY LTD

Level 1, Building A, 6 Figtree Drive,  
Sydney Olympic Park, NSW 2127, Australia

PHONE: 1800 88 39 64

[www.4wdsupacentre.com.au](http://www.4wdsupacentre.com.au)