


Steelcraft™

AGILE TWIN TRAVEL SYSTEM STROLLER

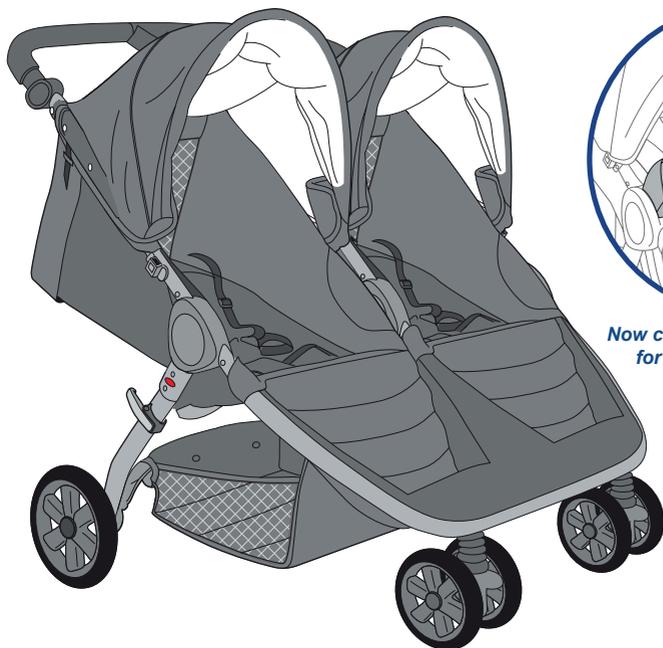

*Now comes with 2 child trays
for snacks and drinks*

Suitable for use with the Steelcraft Infant Carrier
(Infant Carrier sold separately)

IMPORTANT: KEEP THIS BOOKLET IN A SAFE PLACE FOR FUTURE REFERENCE.

www.britax.com.au

Series SH819

CONTENTS

Stroller Important Notes & Warnings.....	4-5
Manual Handling Techniques.....	6
Stroller Parts List.....	7-8
Assembled Stroller Parts List.....	9
STROLLER ASSEMBLY	
1. Opening the stroller frame.....	10-12
2. Attaching the front and rear wheels.....	13
3. Attaching the canopies.....	14-17
4. Attaching the child trays.....	18-19
5. Attaching the head pillow and shoulder pads.....	20
6. Attaching the rain cover.....	21
STROLLER OPERATION	
7. Using the brakes.....	22-23
8. Using the front swivel wheels	24
9. Using the canopies.....	25-28
10. Adjusting the pivotal handle.....	29-30
11. Adjusting the backrest.....	31-33
12. Using the harness.....	34-38
13. Using the tether strap.....	39
14. Using the storage basket.....	40
15. Using the stroller.....	41
16. Folding the stroller.....	42-45
17. Lifting and carrying the stroller.....	46

CONTENTS

18. Removing the front and rear wheels.....	47
19. Removing the canopies.....	48-51
20. Removing the child trays.....	52
Infant Carrier Warnings and Important Notes.....	53-54
20. Attaching the Steelcraft infant carrier.....	55-58
21. Removing the Steelcraft infant carrier.....	59-60
Care and Maintenance.....	61

IMPORTANT NOTES

IMPORTANT NOTES:

ALWAYS FOLLOW THE MANUFACTURERS INSTRUCTIONS.
READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE
OF THIS STROLLER.

THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS
ESSENTIAL.

- USE GREAT CARE WHEN USING THE STROLLER ON STAIRS, ESCALATORS, TRAVELATORS OR OTHER MOVING SURFACES.
- IT IS RECOMMENDED TO REMOVE THE CHILD FROM THE STROLLER BEFORE GOING UP OR DOWN STAIRS OR ESCALATORS.
- DO NOT LIFT THE STROLLER BY THE TRAY (Supplied) OR ARM BAR (Purchased Separately) BECAUSE IT MAY DISENGAGE.
- DO NOT ALLOW CHILDREN TO STAND ON THE SEAT.
- DO NOT HANG BAGS OR GOODS FROM THE HANDLE AS THIS COULD CAUSE THE STROLLER TO TIP OVER.
- DO NOT LEAVE THE STROLLER AND ITS ACCESSORIES NEAR AN OPEN FIRE OR EXPOSED FLAME.
- DO NOT PLACE MORE THAN 6 KG IN THE BASKET, OR 1KG IN THE CANOPY POCKET (IF SUPPLIED).

WARNINGS

WARNINGS: TO AVOID INJURY OR DEATH:

ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

- DO NOT LEAVE CHILDREN UNATTENDED.
- SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.
- MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER.
- DO NOT USE ANY ACCESSORIES OTHER THAN THOSE APPROVED FOR USE WITH THIS STROLLER BY BRITAX.
- IT IS UNSAFE TO USE ACCESSORIES NOT APPROVED FOR USE WITH THIS STROLLER.
- THE MAXIMUM WEIGHT OF THE CHILD IN EACH SEAT IS NOT TO EXCEED 20 KG.

FOR IMPORTANT NOTES AND WARNINGS ON ACCESSORIES - REFER TO THEIR INDIVIDUAL SECTIONS IN THIS BOOK. THE MAXIMUM WEIGHT VARIES FOR EACH ACCESSORY.



CAUTION

This CAUTION Symbol is shown at certain steps in this Instruction Manual to highlight the danger of being injured by moving parts.

MANUAL HANDLING TECHNIQUES

The SMART lifting technique

This technique can be used to pick up small light loads from low levels.

Size up the Load

- Assess the load (size, shape and weight).
- Assess whether the load needs to be moved;
- Where is it going to be placed" Check that there are no obstructions;
- Assess whether mechanical or human assistance is required.

Move the Load as close to the body as possible

- A load is heavier to lift or carry if it is not close to the body.
- The whole hand should be used to ensure a firm grip.

Always bend your knees

- Maintain balance.
- Keep feet apart and in a comfortable position.
- Minimise lower back bending.
- Bend knees preferable at as large an angle as possible but not at a right angle - use a semi squat in preference to a full squat.

Raise the load with your legs


- Achieve the lift smoothly and without jerkiness.
- Maintain the normal curvature of the spine to allow the force of the load to be distributed evenly from the spine to the pelvis.

Turn your feet in the direction that you want to move the load.


- Avoid unnecessary bending, twisting and reaching.
- Change direction by turning your feet and not your back.
- To set the load down, squat down, keep your head up and let your legs do the work.

Remember to 'THINK TALL' chest lifted, shoulders relaxed, chin tucked in and head level.


PARTS LIST

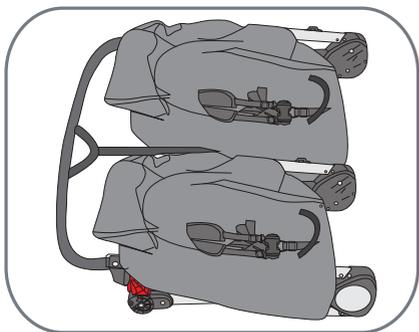


A 1 x Stroller Frame,
Seats & Basket

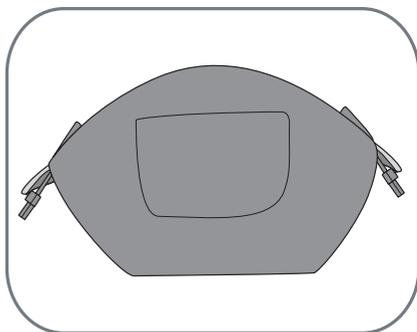


B 2 x Canopies

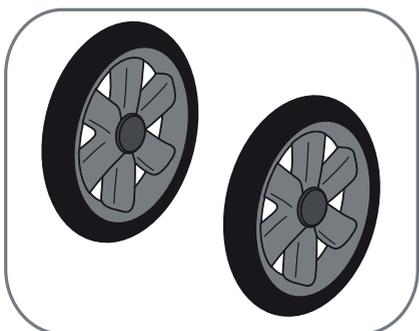


C 2 x Rear Wheels

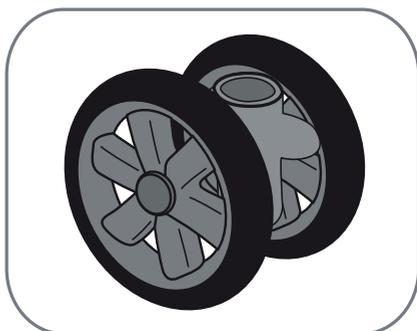

D 2 x Front wheels

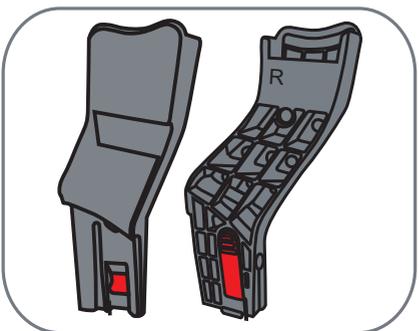


E 2 x Car Seat Receivers
for Steelcraft Infant Carrier

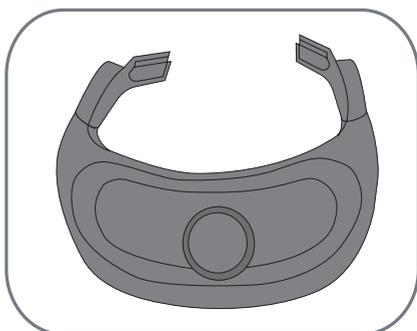

F 2 x Child Trays

PARTS LIST


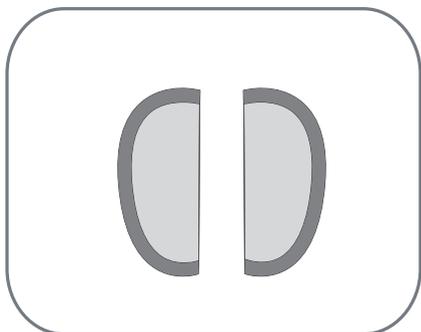


G 2 x sets of Shoulder pads



H 1 x Rain cover

ASSEMBLED STROLLERS PARTS LIST

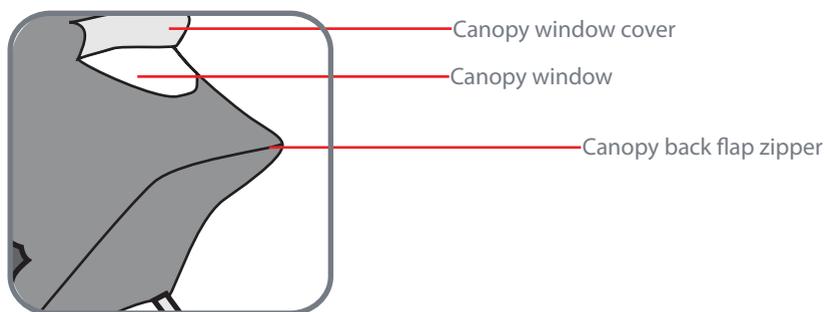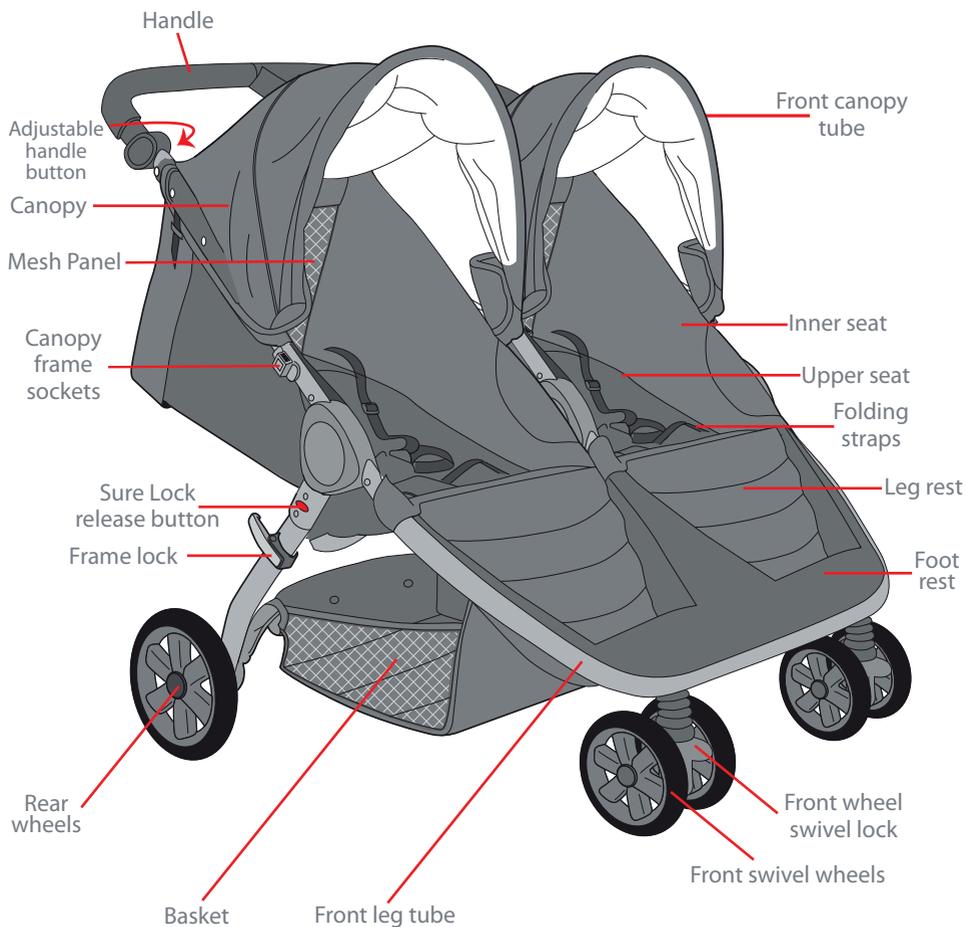

STROLLER ASSEMBLY

1. OPENING THE STROLLER FRAME

IMPORTANT NOTES:


PLEASE REFER TO PAGE 6 FOR SMART LIFTING TECHNIQUES.

- RELEASE THE STORAGE LATCH WITH DUE CARE AND OPEN THE FRAME.
- WHEN OPENING THE STROLLER, BE AWARE OF THE DANGER OF BEING INJURED BY MOVING PARTS AND LOCKING DEVICES DURING THE PROCESS. KEEP ALL HANDS AND LIMBS CLEAR OF THESE PARTS.
- THERE IS POTENTIAL FOR FINGERS OR PARTS OF THE BODY TO BE INJURED WHEN THE STROLLER IS BEING UNFOLDED, DUE CARE SHOULD BE EXERCISED.
- KEEP CHILDREN CLEAR OF THE STROLLER WHEN UNFOLDING THE STROLLER.
- OPEN THE STROLLER SLOWLY AND BE CAREFUL WHERE YOU PLACE YOUR HANDS.

STROLLER ASSEMBLY

1. OPENING THE STROLLER FRAME


A Release the storage latch located on the rear leg.

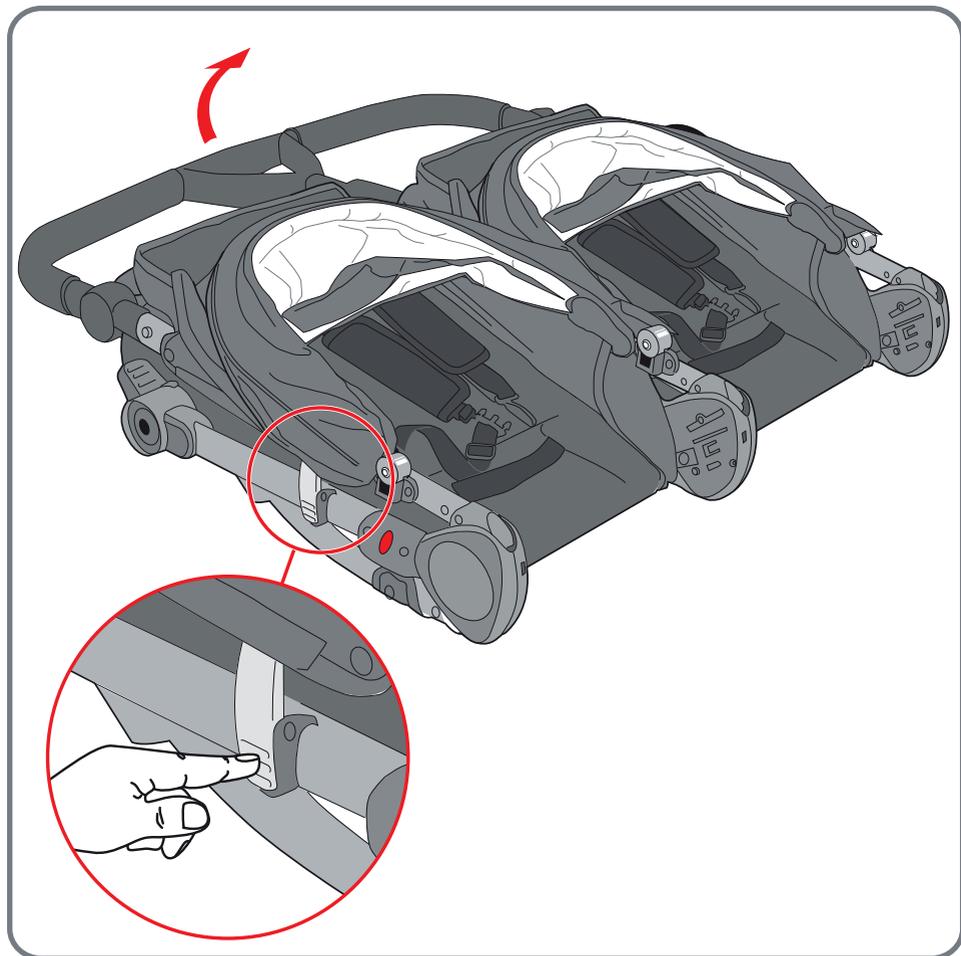

STROLLER ASSEMBLY

1. OPENING THE STROLLER FRAME

- B Open the frame as shown by the arrow until you hear a 'click' which indicates the frame is fully opened and locked.

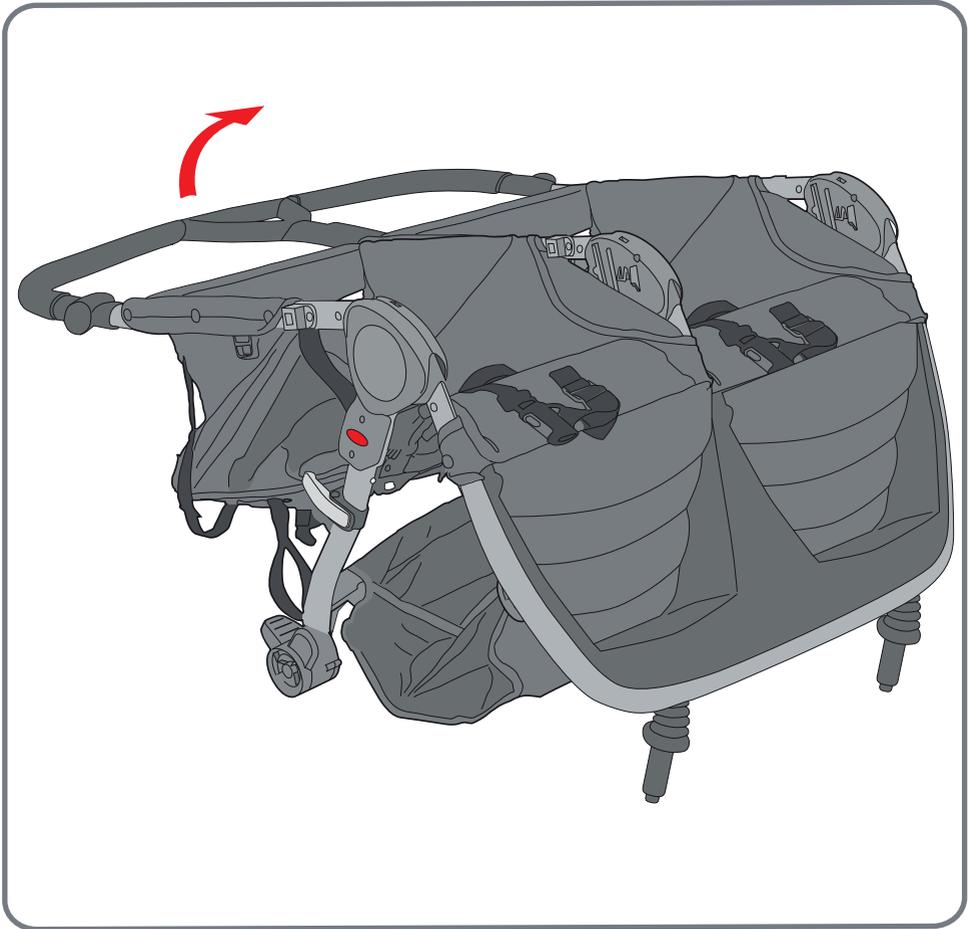

STROLLER ASSEMBLY

2. ATTACHING THE FRONT AND REAR WHEELS

- A To attach the front swivel wheel assembly, insert the swivel wheel assembly and push it into the wheel moulding until you hear a 'click' which indicates the wheel is locked in. Check the wheel assembly is fully locked by pulling against it.
- B To attach the rear wheels, insert each wheel axle into the moulding and push in until locked. You should hear a 'click' which indicates the wheel has locked in. Pull on the wheel to make sure it is engaged. Repeat the process if not locked in.




STROLLER ASSEMBLY

3. ATTACHING THE CANOPIES

IMPORTANT NOTE:

The sun is very strong. **DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN.** The canopy or hood on this product will not give your child total protection from the harmful rays of the sun.


- A1 To attach the canopies, insert the canopy mouldings into the canopy frame sockets until they connect together.
- A2 Locate the straps on the outer sides of each canopy and press the snap fastener on each strap to the snap fastener on the top of each outer handle tube.

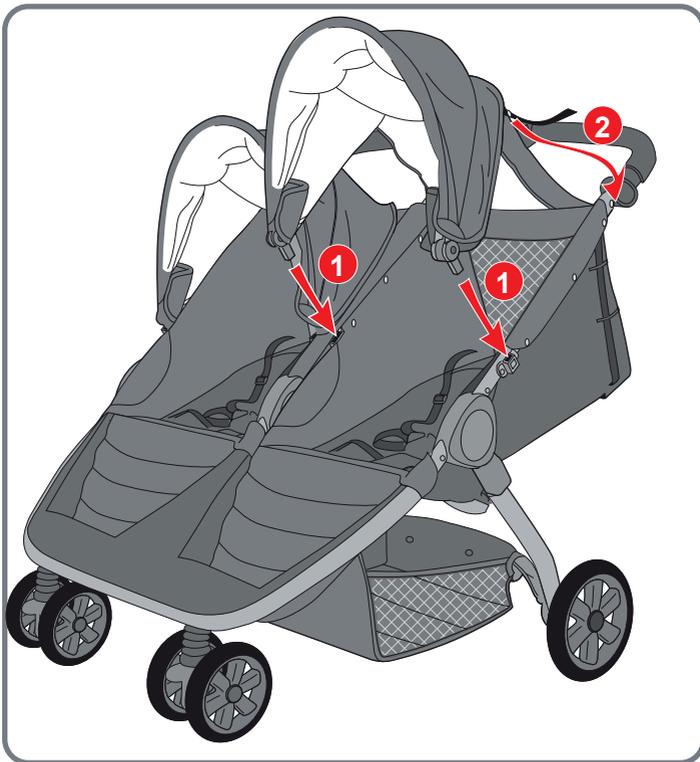

STROLLER ASSEMBLY

3. ATTACHING THE CANOPIES


- B1 Lift the back flap of each canopy over the stroller handle to reveal the hook strips along the back edge of the canopy.
- B2 Fasten the loop strip on the back of the outer side canopy straps to the hook strips along the back edge of the canopy.
- B3 Thread the inner canopy straps through the guide mould located on the middle handle tube and fasten the loop strip on the back of the inner canopy straps to the hook strips along the back edge of the canopy.

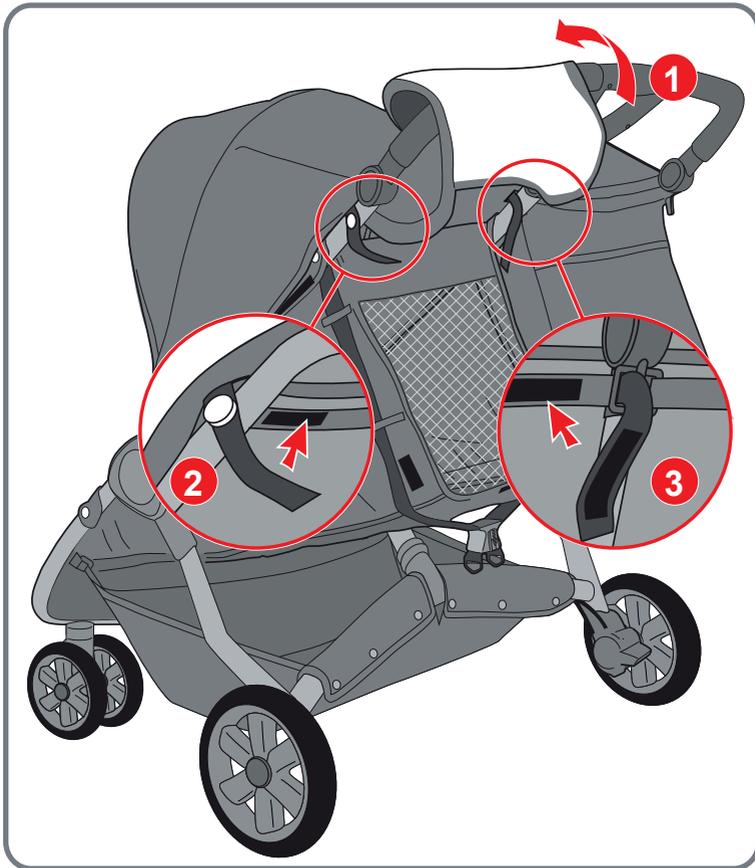

STROLLER ASSEMBLY


3. ATTACHING THE CANOPIES

- C1 Fasten the hook strip on the inside bottom edge of each canopy back flap to the loop strip along the top edge of the back rest.
- C2 Fasten the hook square on the inside of the canopy back flap to the loop strip on the side of the stroller.
- C3 Fasten the hook strip on the inside edge of the canopy to the loop strip on the side of the stroller.

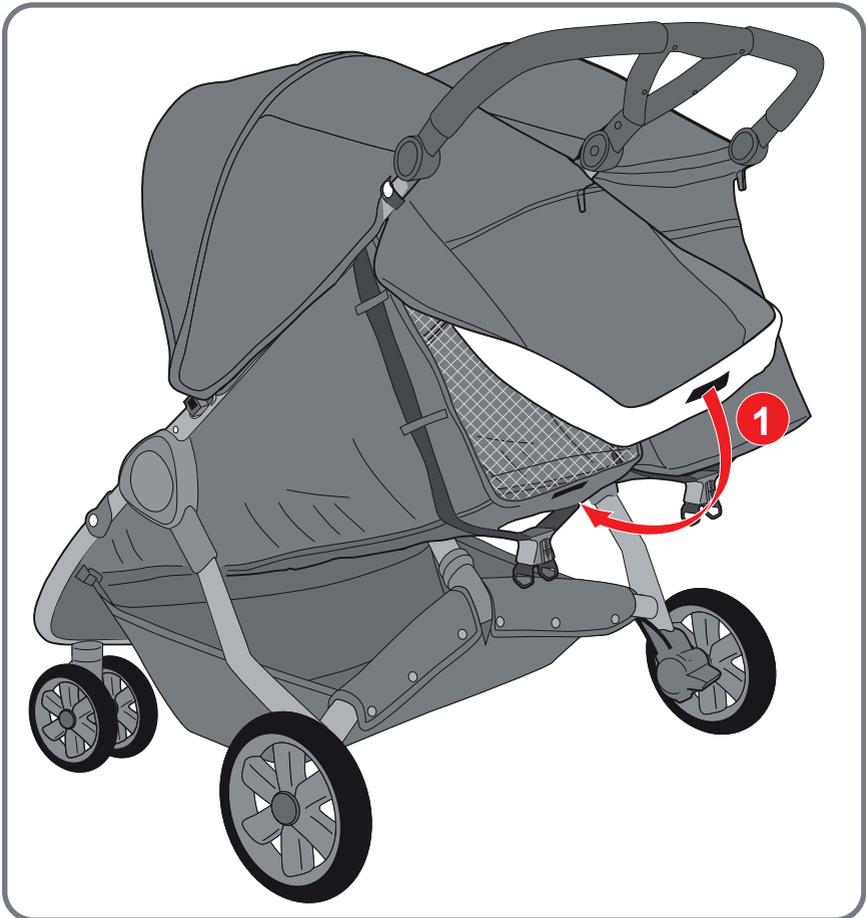

STROLLER ASSEMBLY

3. ATTACHING THE CANOPIES

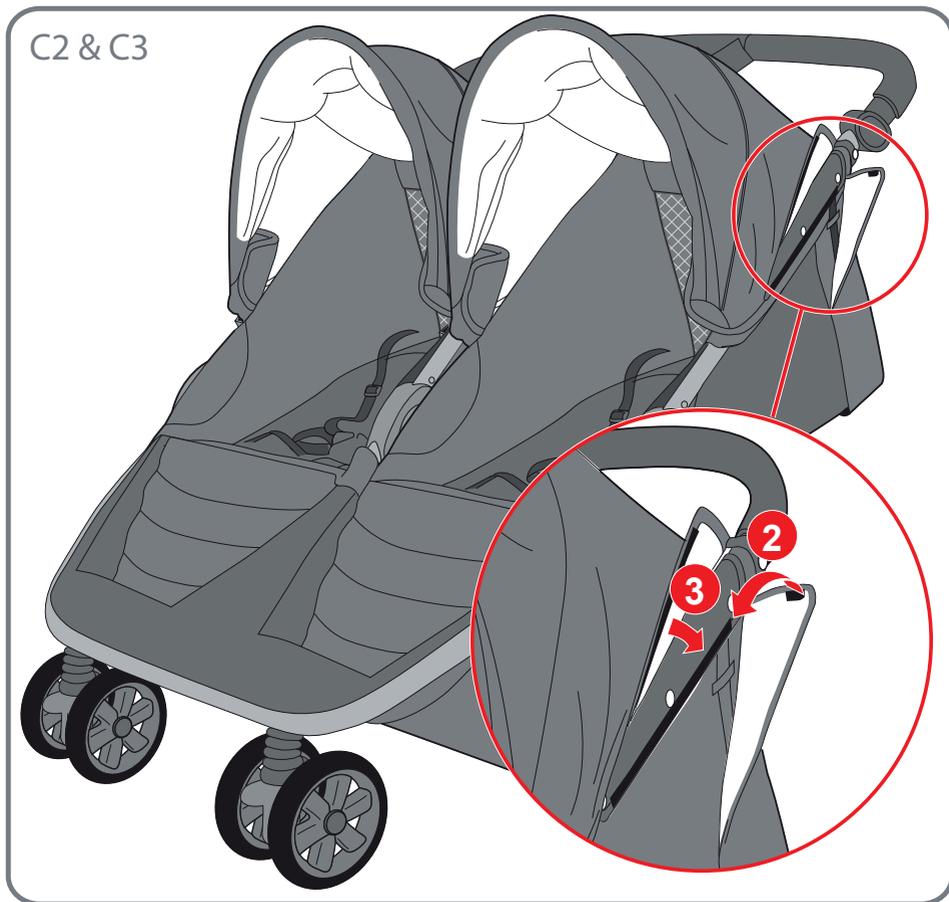


STROLLER ASSEMBLY

4. ATTACHING THE CHILD TRAYS

⚠ WARNING: WHEN A CHILD IS IN THE STROLLER
KEEP THE CHILD TRAY ATTACHED TO THE ADAPTORS AT
ALL TIMES.

PLEASE NOTE: Each child tray adaptor is marked Left & Right for
correct fitting.


A Stand beside the stroller and pull the fabric back from the sides of the
the stroller to expose the stroller hinge. Take one child tray adaptor at
a time and insert the adaptor into the stroller hinges as shown. Push
on the adaptor until you hear a 'click' which indicates the adaptor has
locked in. Pull up on each adaptor to check they have fully locked in.

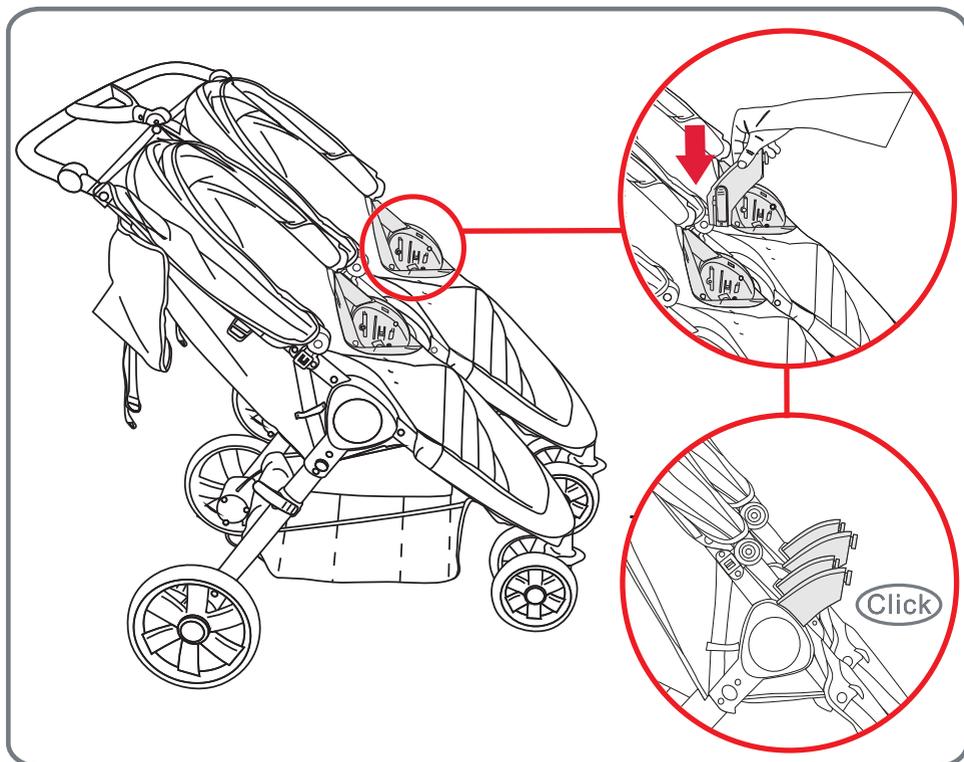

STROLLER ASSEMBLY

4. ATTACHING THE CHILD TRAYS


B Align each child tray onto the adaptors and lower the child tray until you hear a 'click'.

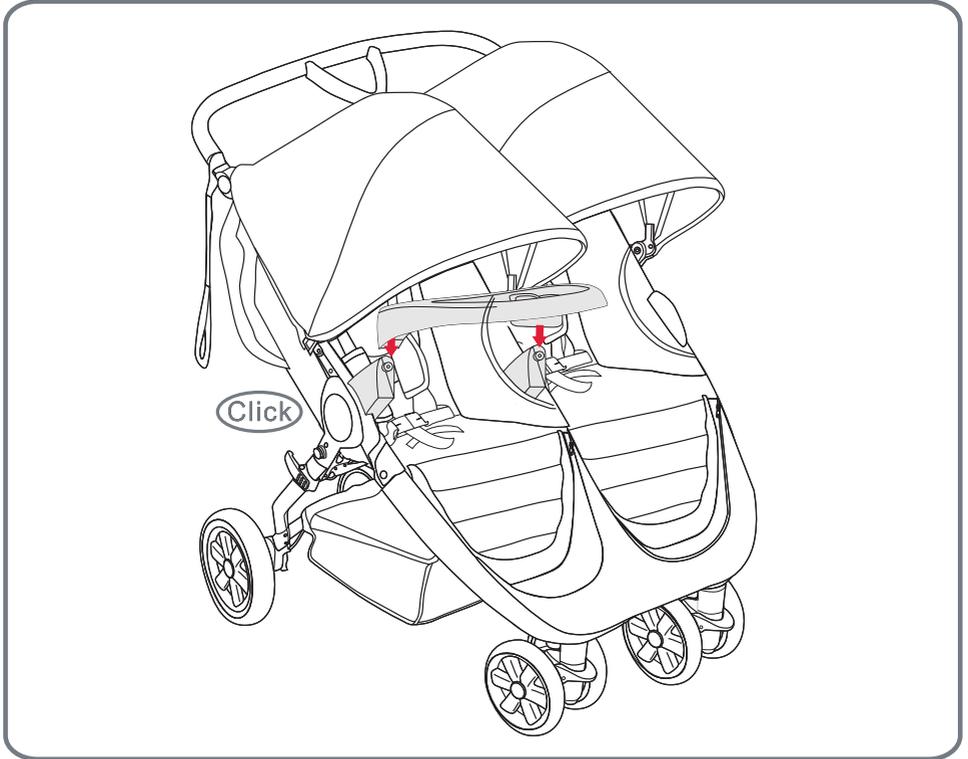

STROLLER ASSEMBLY

5. ATTACHING THE SHOULDER PADS

- A To attach the shoulder pads, release the harness buckles and slide the shoulder pads onto the shoulder harness.

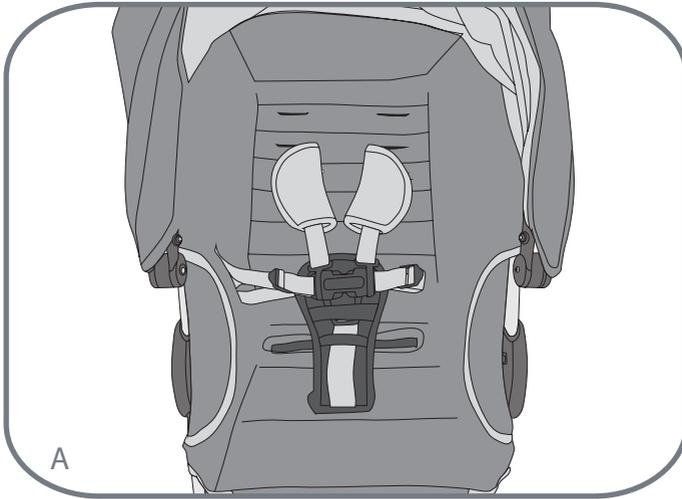

STROLLER ASSEMBLY

6. ATTACHING THE RAIN COVER

IMPORTANT NOTE:

ENSURE THE RAIN COVER IS KEPT AWAY FROM THE CHILD'S FACE.
REFIT THE RAIN COVER IF REQUIRED TO ENSURE YOUR CHILD IS SAFE.

- A1 Pull the rain cover over extended canopy and push the back flap of rain cover through the handle opening.
- A2 Attach the hook and loop strips on the sides of the rain cover and the back flap of the rain cover.
- A3 Attach the hook and loop strips on the front of the rain cover around the wheel moulding above the swivel lock.



STROLLER OPERATION

7. USING THE BRAKES

 **WARNING:** ALWAYS APPLY THE BRAKES WHEN THE STROLLER IS STATIONARY.

A1 The red brake lever is located on the right hand side of the stroller beside the rear wheel.





STROLLER OPERATION

7. USING THE BRAKES

B1 To lock the rear wheels, press the red brake lever down until you hear a 'click'. Push the stroller back and forth to confirm the wheels are locked. If not locked, repeat this step.

B2 To unlock the rear wheels, push the red brake lever up until you hear a 'click'.

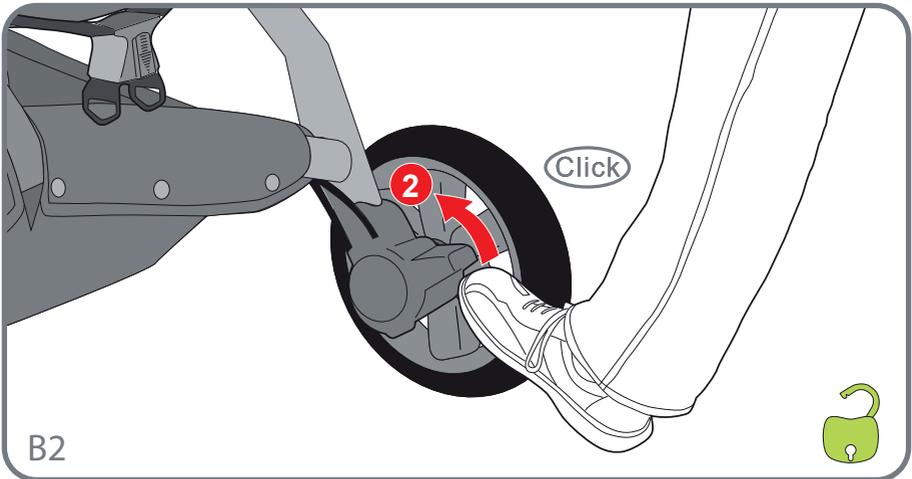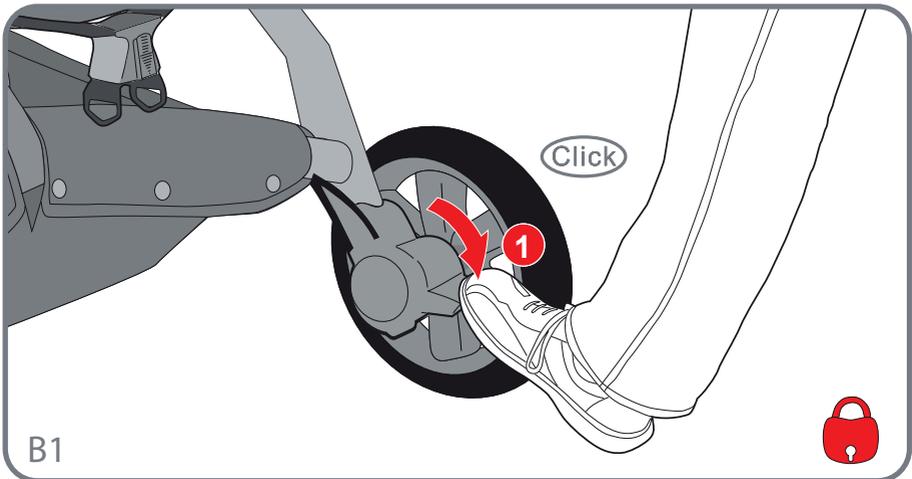


STROLLER OPERATION

8. USING THE SWIVEL WHEELS

PLEASE NOTE: Always lock the swivel wheels when using the stroller on rough surfaces as this will minimise wheel wobble. The swivel wheels should only be locked when the wheels are in the trailing position (wheels under frame).

- A1 To lock the front wheels into the fixed position, press the red swivel lock down until you hear a 'click'.
- A2 To allow the wheels to swivel, push the red swivel wheel lock up until you hear a 'click'.

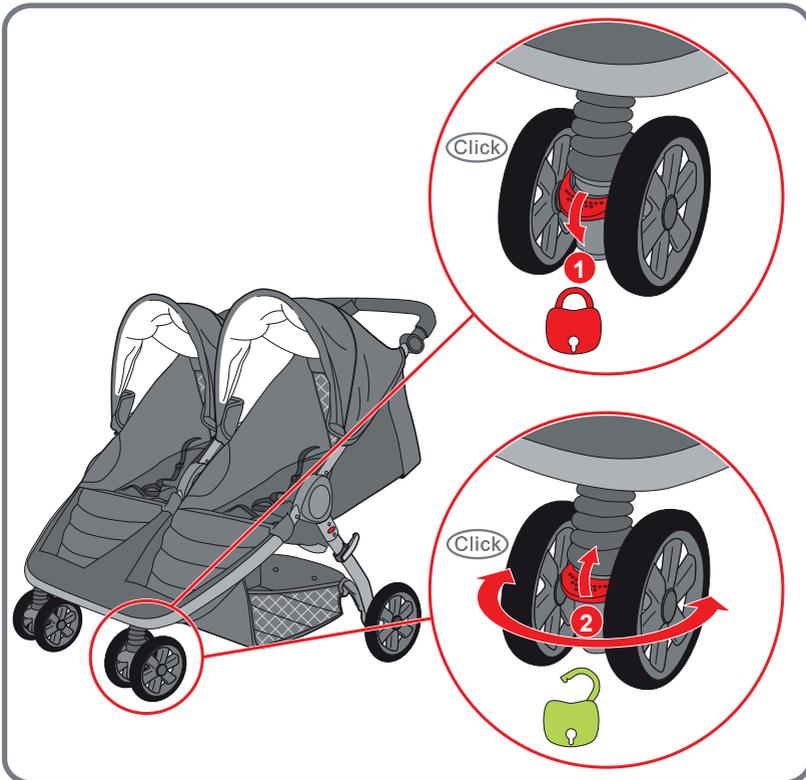

STROLLER OPERATION

9. USING THE CANOPIES


A1 To adjust the canopy, open by pulling canopy forward, or close by pushing the canopy backward.



STROLLER OPERATION

9. USING THE CANOPIES


B1 OPTION 1: For additional air circulation, the canopy back flap can be rolled up and secured to expose the mesh barrier.

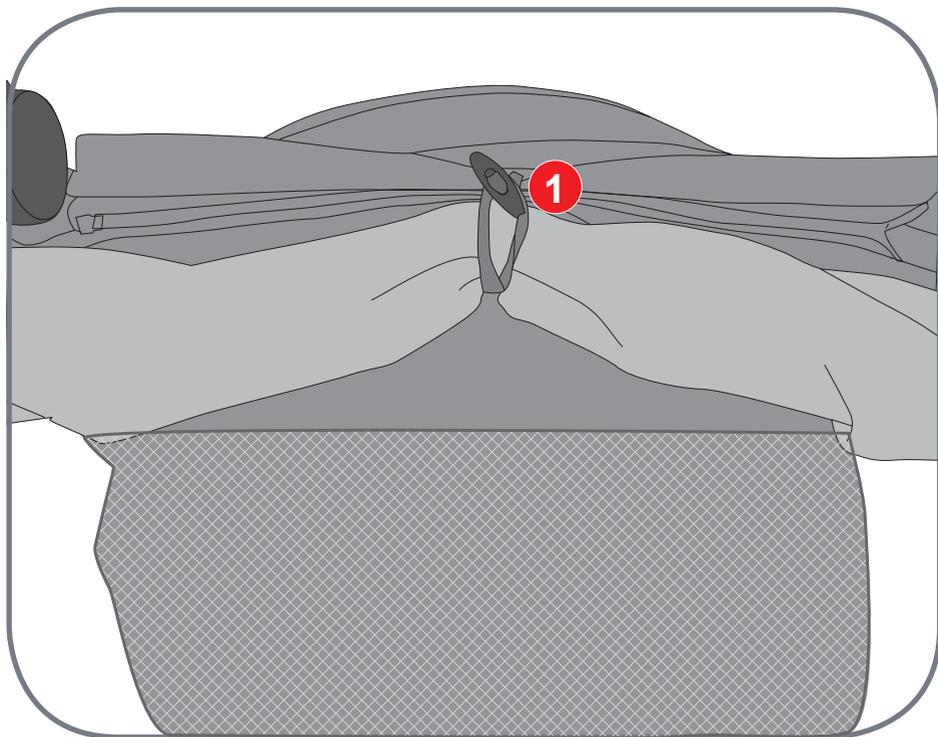

STROLLER OPERATION

9. USING THE CANOPIES


C1 The canopy window cover is kept in place by hidden magnets located on the top two corners of the window cover.

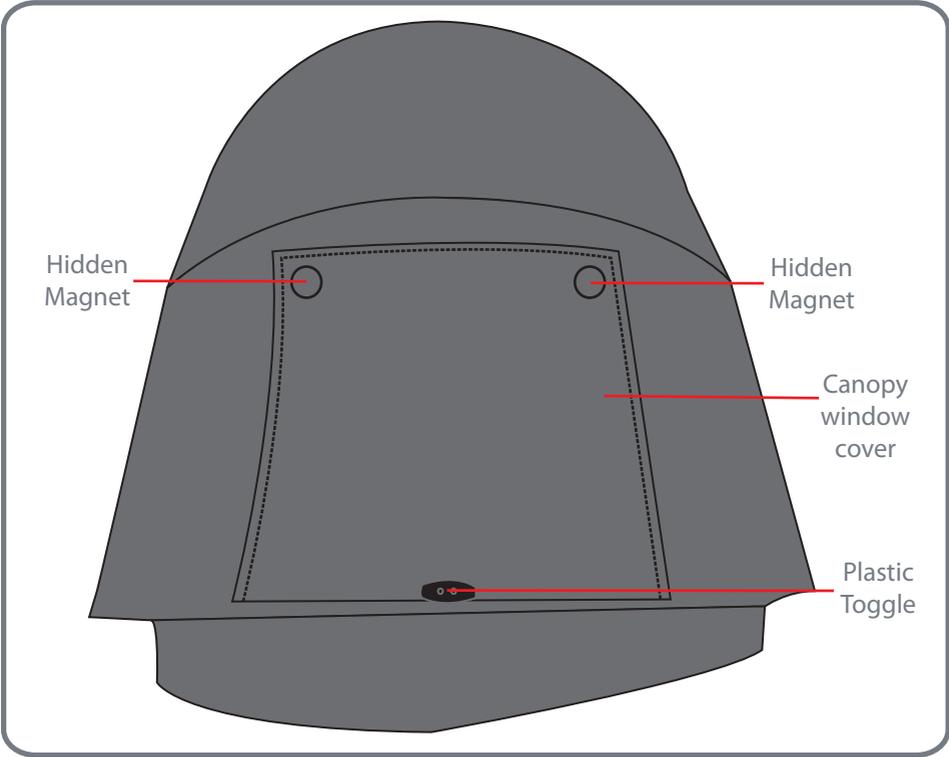

STROLLER OPERATION

9. USING THE CANOPIES

C2 To open the canopy window cover, simply lift the window cover towards the handle. The window cover can be rolled up and secured with the elastic loop and plastic toggle.

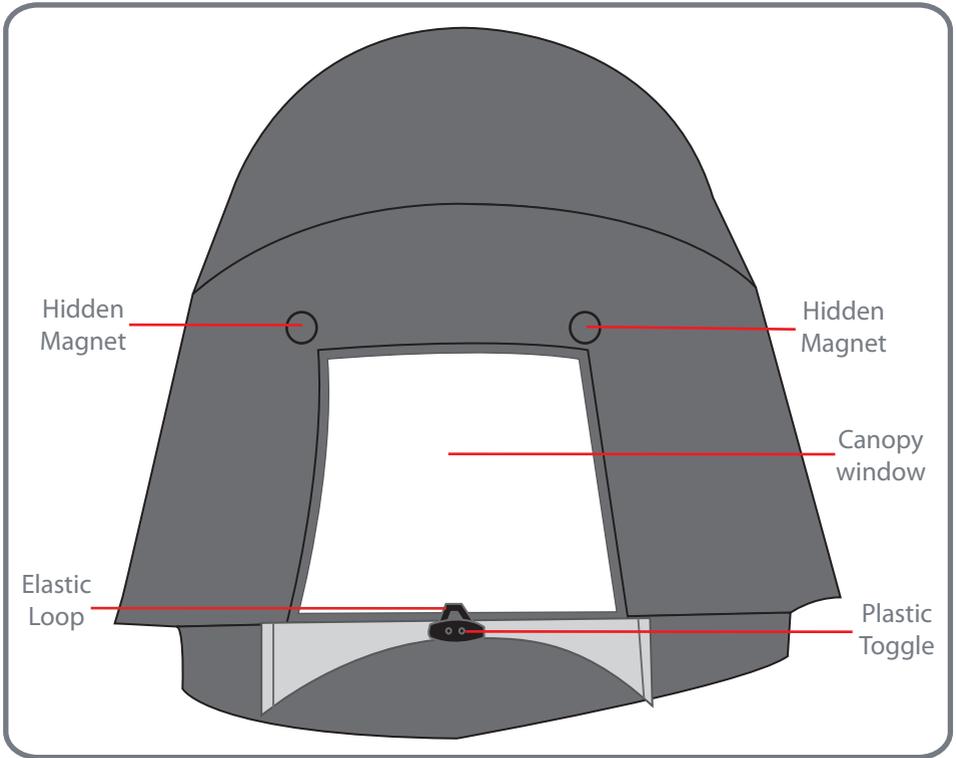


STROLLER OPERATION

10. ADJUSTING THE PIVOTAL HANDLES

A1 Locate the handle adjustment buttons on the inside of each handle moulding.


A2 Press both buttons in and hold. Rotate the handle up or down to the desired position.

A3 When the desired position has been reached, release both buttons.

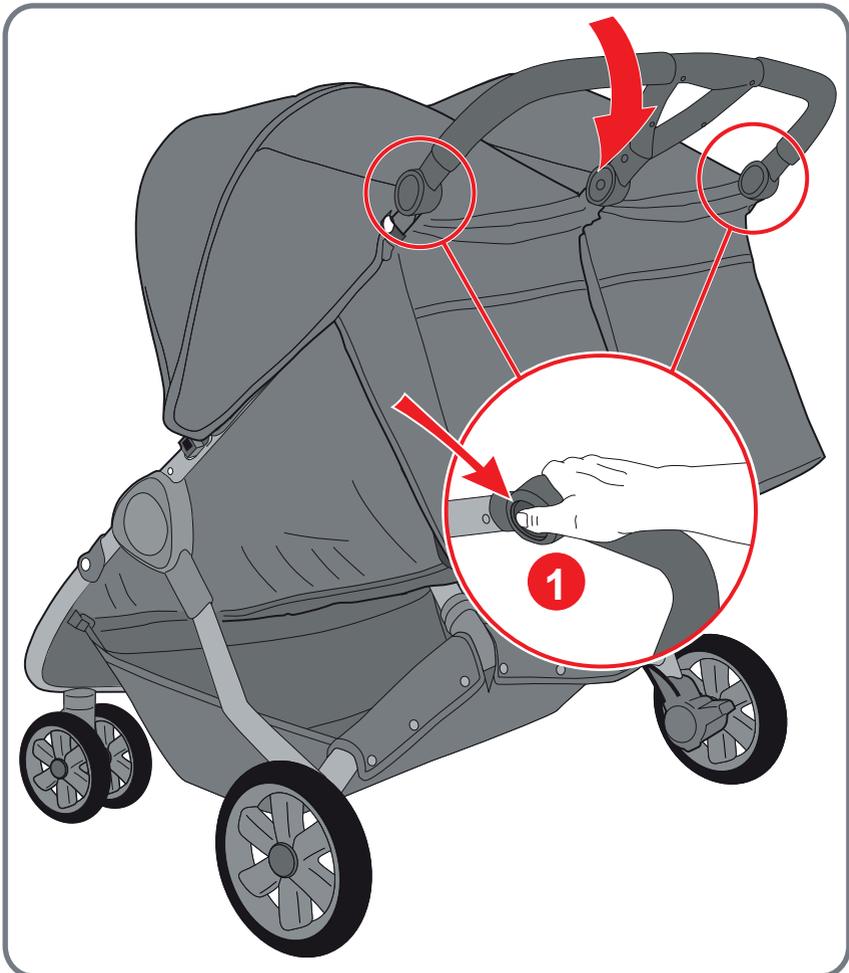

STROLLER OPERATION

10. ADJUSTING THE PIVOTAL HANDLES

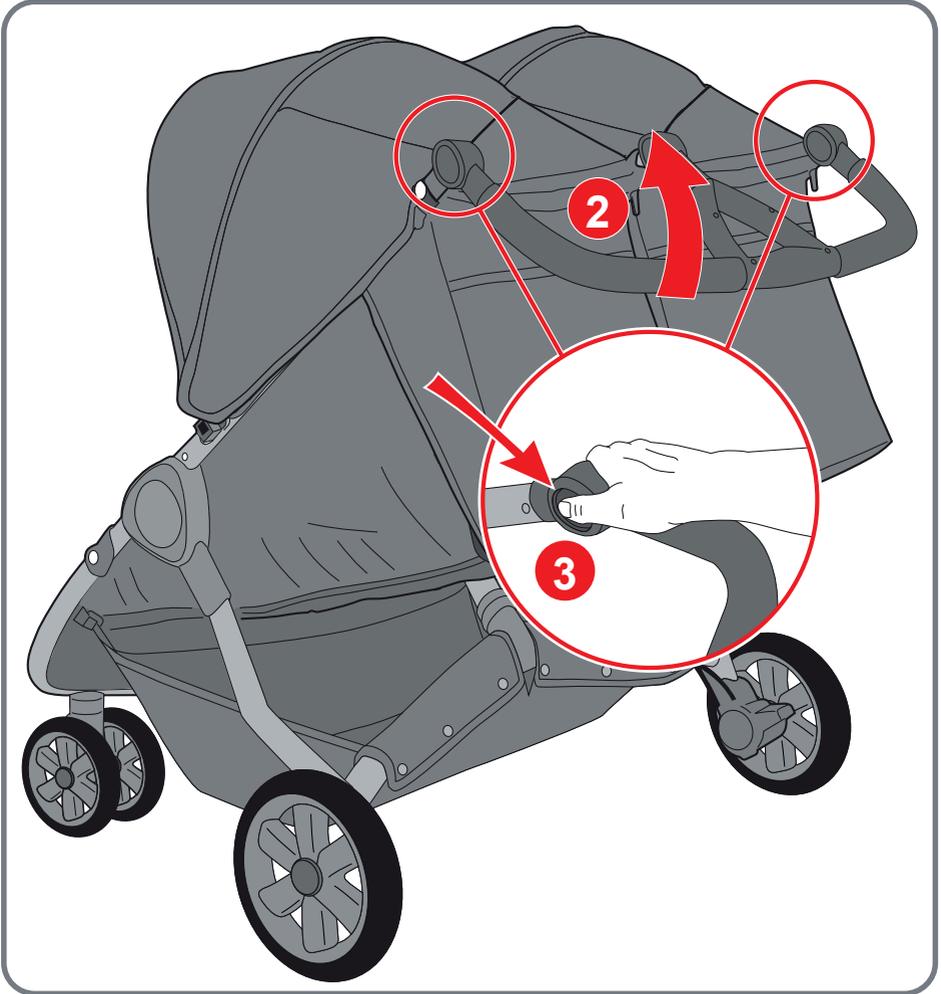

STROLLER OPERATION


11. ADJUSTING THE BACKREST

WARNINGS:

- THE UPRIGHT POSITIONS ARE NOT SUITABLE FOR USE WITH CHILDREN LESS THAN 6 MONTHS OLD.
- THE LOWEST RECLINE POSITION SHOULD BE USED TO TRANSPORT BABIES. THE BACKREST CAN BE ADJUSTED TO A MORE UPRIGHT POSITION AS THE CHILD GROWS OLDER AND IS ABLE TO SUPPORT ITS HEAD WITHOUT ASSISTANCE.

PLEASE NOTE: If the child is sitting in the seat, support the backrest as it reclines. If you have difficulty adjusting the backrest you may need to remove the child from the seat to allow you to raise or lower the backrest with ease.


A1 To adjust the backrest, fold the canopy back flap up over the handle to gain access to the adjuster straps.

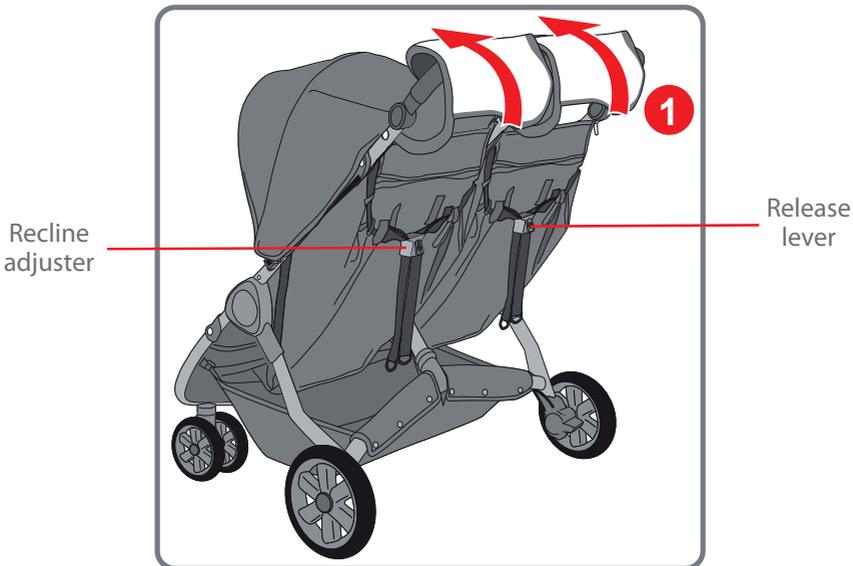

STROLLER OPERATION

11. ADJUSTING THE BACKREST

A2 To raise the backrest, hold the plastic ring at the end of each adjuster strap and pull the straps apart until you reach your desired position.

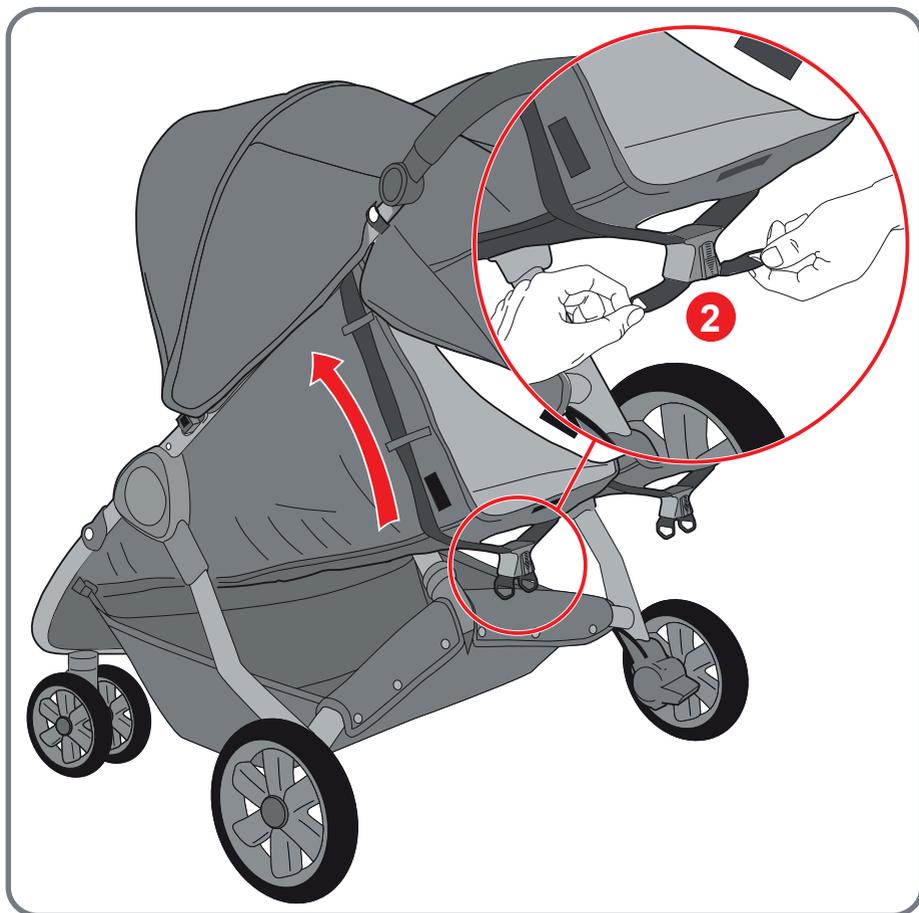


PLEASE NOTE: Each seat reclines independently.

STROLLER OPERATION

11. ADJUSTING THE BACKREST

- A3 To lower the backrest, slide the release lever down on the recline adjuster and pull down on the recline adjuster and lower the backrest to the desired position.

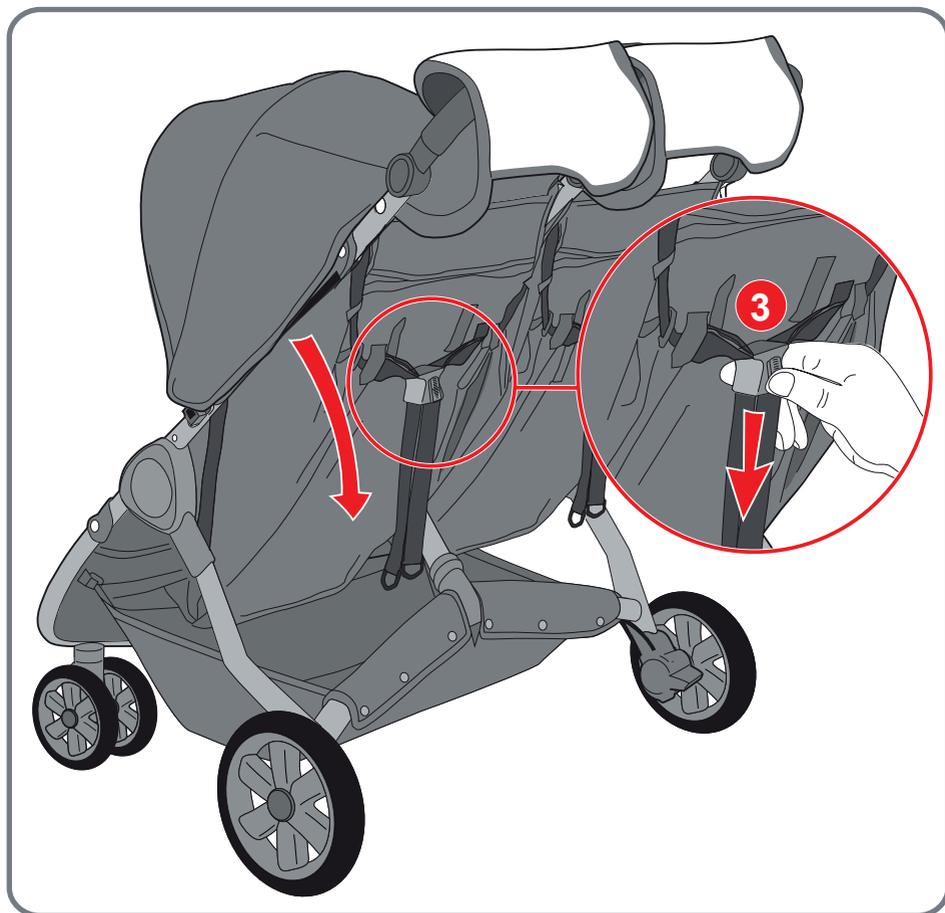


PLEASE NOTE: Each seat reclines independently.

STROLLER OPERATION

12. USING THE HARNESS

! **WARNING:** USE THE HARNESS AT ALL TIMES.

- ENSURE YOUR CHILD IS SECURED WITH A CORRECTLY ADJUSTED HARNESS.
- THE ADJUSTED HARNESS SHOULD CLOSELY FIT THE CHILD.
- NEVER LEAVE THE HARNESS BUCKLED WHEN NOT FITTED TO A CHILD IN THE STROLLER, BECAUSE THE HARNESS CAN FORM LOOPS WHICH MAY POSE A STRANGULATION HAZARD.
- WHEN HARNESS IS NOT IN USE, DISCONNECT SHOULDER STRAPS FROM THE WAIST STRAPS AND BUCKLE TO PREVENT STRANGULATION.
- A five point harness is provided to restrain your child.
- Buckle tongues separate for added safety.
- To reconnect buckle tongues and to secure the child in the harness please follow the steps below carefully.

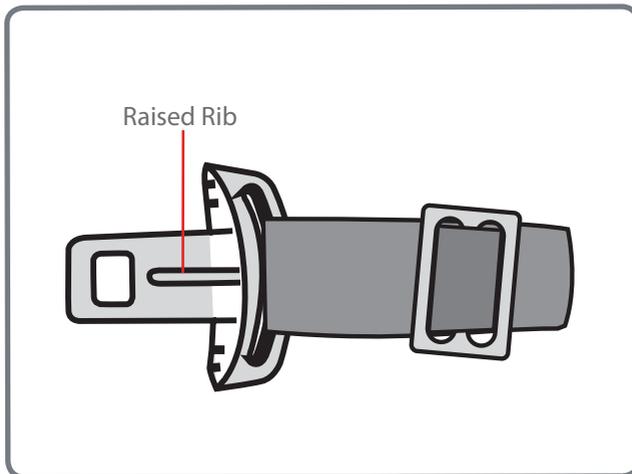


PLEASE NOTE: Each waist buckle tongue has a raised rib on one side and can only be locked into the buckle assembly with the raised rib facing up.

STROLLER OPERATION


12. USING THE HARNESS

- A Always apply the brakes. Place child in seat. Slip one shoulder strap over each shoulder. Position crotch strap between legs. Push the buckle tongues (A) on waist straps through the tongue guides (B) on shoulder straps.

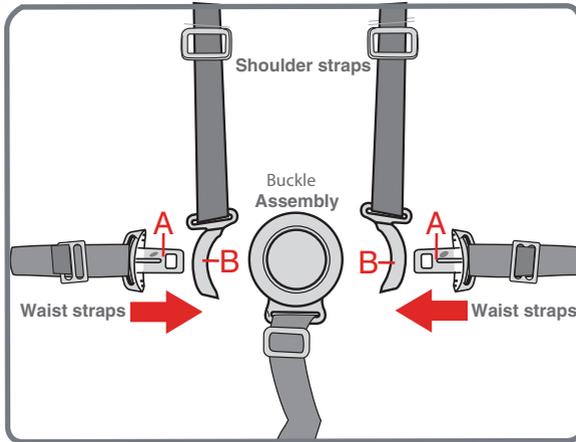

PLEASE NOTE: Ensure the straps are not twisted as they may become uncomfortable for the child.


- B Hold the buckle tongue (A) on the waist strap & tongue guides (B) on shoulder straps together.

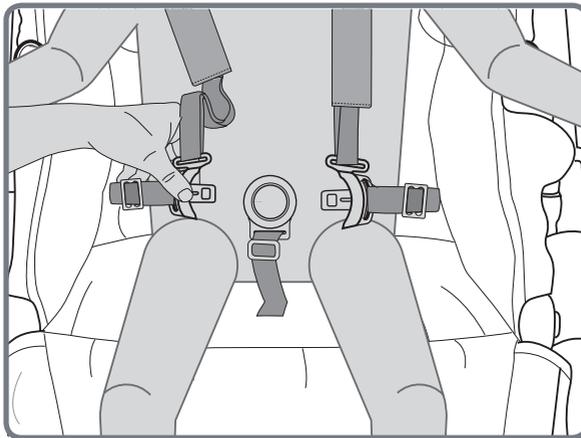

STROLLER OPERATION


12. USING THE HARNESS

- C Press in and hold the centre crotch buckle button and insert the waist buckle tongues into the crotch buckle assembly.

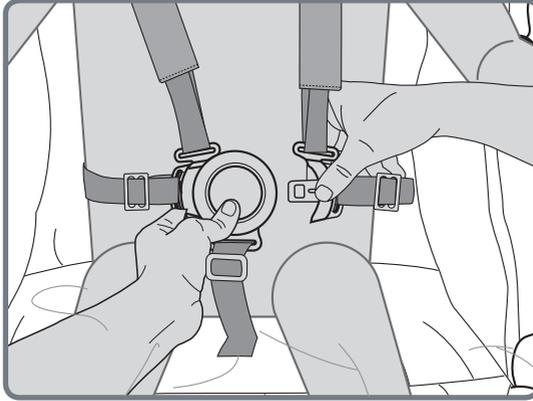

IMPORTANT: Pull on each waist buckle tongue to make sure they are locked into the crotch buckle assembly. If not, repeat above procedure.

- D Tighten or loosen the shoulder straps and crotch strap by sliding the 3 bar harness adjuster up or down. The crotch strap should be adjusted to a snug fit.

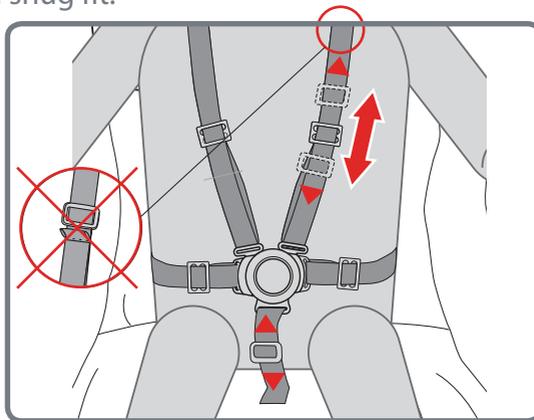


CAUTION: DO NOT SLIDE 3 BAR SLIDER OVER THE SEWN TAB ON SHOULDER HARNESS.


STROLLER OPERATION

12. USING THE HARNESS

- E Tighten or loosen the waist straps, hold and lift the 4 bar harness adjuster and pull the harness strap to adjust to the desired fit. The waist strap needs to fit firmly around the child.

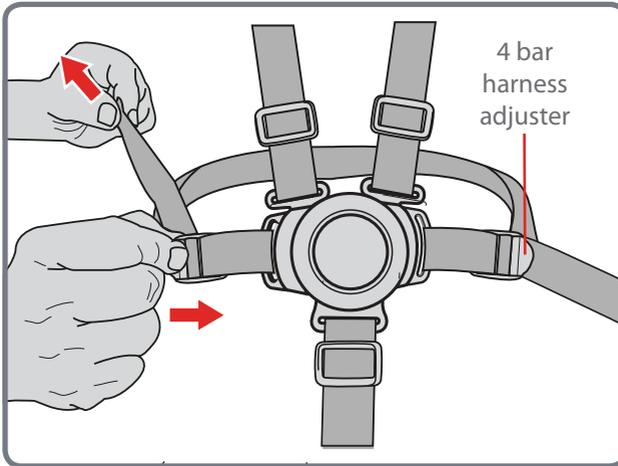



- F Release the harness by depressing the button in the centre of the buckle while pulling the two waist tongues away from the buckle assembly.

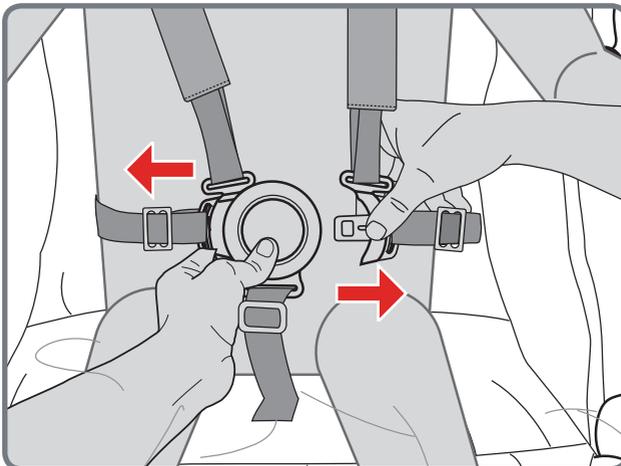

STROLLER OPERATION

12. USING THE HARNESS

- G The stroller seat has 3 sets of harness slots at different heights to accommodate the child. The shoulder straps must be positioned near the child's shoulders. To change the shoulder harness height, push the shoulder harness tongue out of the current harness slot and through the back of the seat and then pull the shoulder harness buckle tongue through the desired slot.

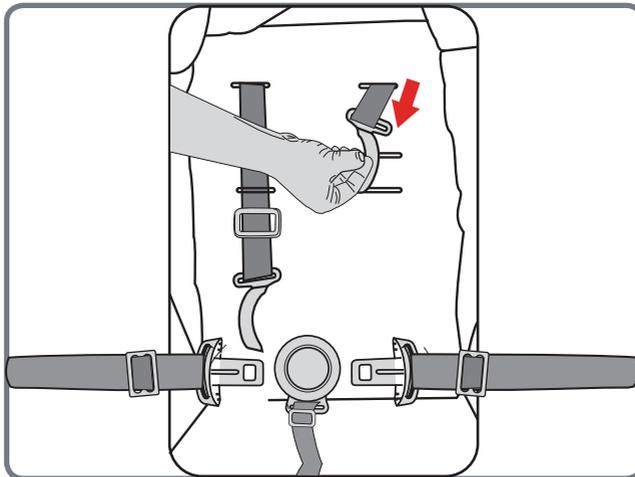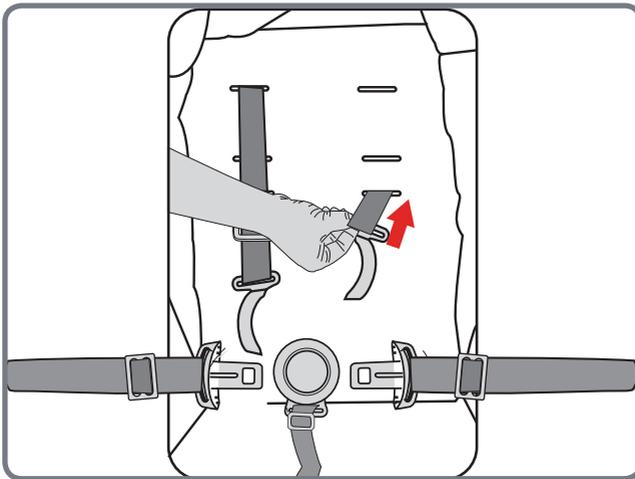


STROLLER OPERATION

13. USING THE TETHER STRAP

! **WARNINGS:** USE THE TETHER STRAP TO STOP THE STROLLER ROLLING AWAY.

- THE STROLLER IS DESIGNED FOR USE ON FLAT OR GENTLY SLOPING SURFACES, AND MAY BE UNSTABLE ON HIGHER SLOPING AND UNEVEN SURFACES AND USERS SHOULD BE AWARE OF THE POSSIBILITY OF THE STROLLER ROLLING AWAY OR TIPPING OVER.
- NEVER LET GO OF THE STROLLER WHEN PARKED ON AN INCLINE OR SLOPING SURFACE BECAUSE IT MAY SLIDE OR TIP OVER. ALWAYS PARK ON A FLAT SURFACE AND APPLY THE BRAKES.
- ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

A A wrist tether strap is provided on the handle grip. Slide your hand through the tether strap loop whenever you use the stroller. Only remove your hand from the tether strap loop when the brakes have been applied to the stroller wheels.

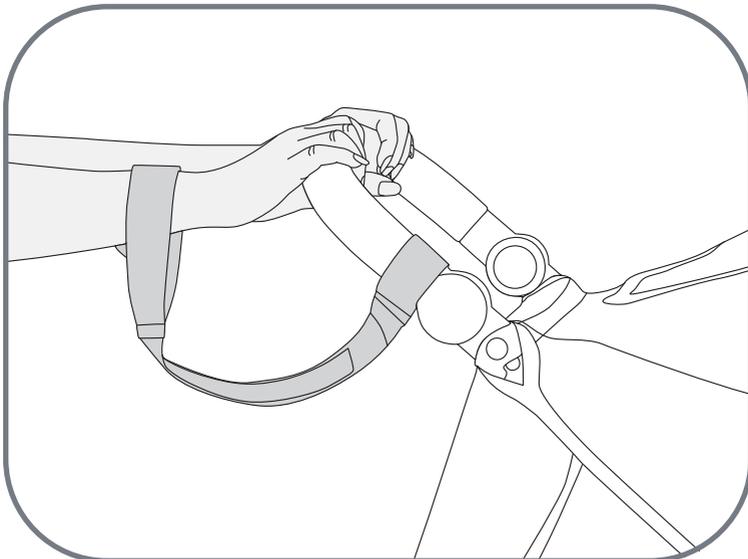

STROLLER OPERATION


14. USING THE STORAGE BASKET

IMPORTANT NOTE:

DO NOT PLACE MORE THAN 6KG IN THE BASKET.

- A When the stroller seats are in the full recline position it may be difficult for you to access the storage baskets from the rear of the stroller. For easier access undo the zippers on the leg rest to access the storage baskets from the front of the stroller.

PLEASE NOTE: Remove all items from the basket before folding.

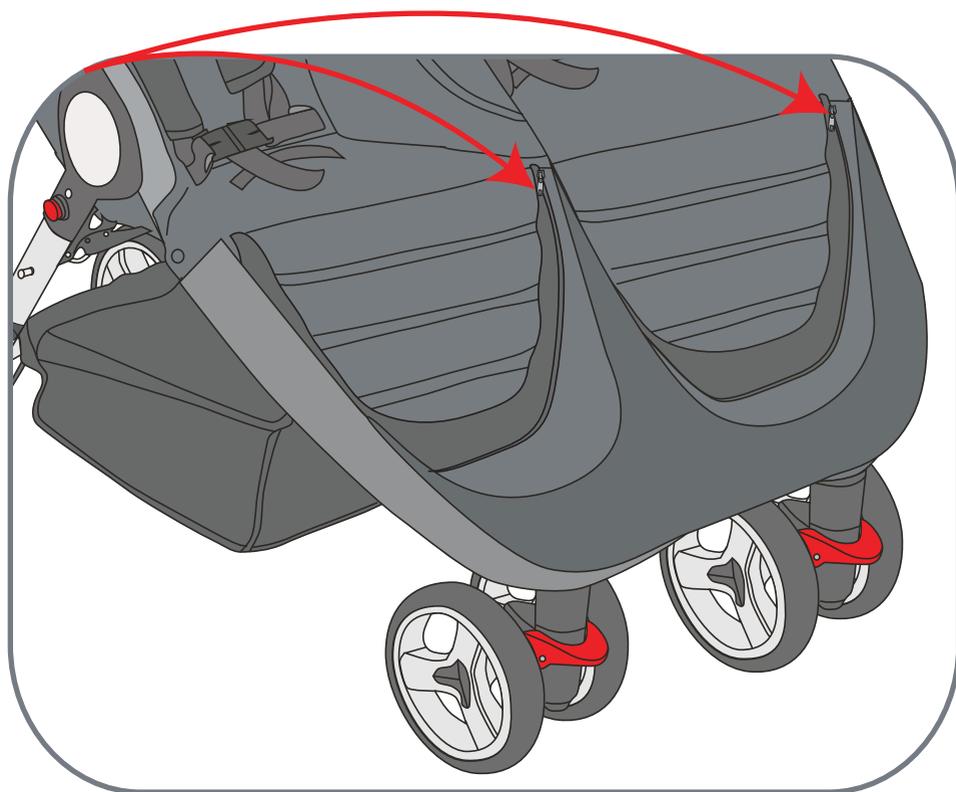

STROLLER OPERATION

15. USING THE STROLLER

PLEASE REFER TO PAGE 6 FOR LIFTING TECHNIQUES.

- Always ensure you bend your knees where appropriate and take due care when lifting the frame.
- With your hand through the wrist tether strap loop, push the stroller holding the handle.
- The stroller can be steered in the desired direction - allowing the front wheels to swivel will make this easier.
- The front wheels may wobble or oscillate when walking fast. Locking the front swivel wheels will stop this.
- The stroller can be taken up kerbs by either pressing down on the handles and raising the front wheels or turning the stroller around and pulling the stroller up the kerb.
- Caution is required when pushing the stroller on a steep slope as the stroller may become unstable. Always hold the handle firmly.
- Do not run with the stroller.
- Whenever you stop, always apply the brakes before you leave the stroller.
- Do not hang bags or goods from the handle. Use the storage basket.

STROLLER OPERATION

16. FOLDING THE STROLLER

IMPORTANT NOTES:

PLEASE REFER TO PAGE 6 FOR LIFTING TECHNIQUES.

- REMOVE THE CHILD FROM THE STROLLER BEFORE COMMENCING ANY FOLDING OPERATION.
- FOLD THE STROLLER SLOWLY AND BE CAREFUL WHERE YOU PLACE YOUR HANDS.
- WHEN FOLDING THE STROLLER, BE AWARE OF THE DANGER OF BEING INJURED BY MOVING PARTS AND LOCKING DEVICES DURING THE PROCESS. KEEP ALL HANDS AND LIMBS CLEAR OF THESE PARTS.
- THERE IS POTENTIAL FOR FINGERS OR PARTS OF THE BODY TO BE INJURED WHEN THE STROLLER IS BEING FOLDED, DUE CARE SHOULD BE EXERCISED.
- KEEP CHILDREN CLEAR OF THE STROLLER DURING FOLDING THE STROLLER.


- A Remove the child from the stroller before commencing any folding operation.
- B Remove both child trays and adaptors from the stroller. (Refer to Page 54, Section 20, Step A)
- C Lock the brakes. (Refer to Page 23, Section 7, Step B1)
- D Lock the swivel wheels. (Refer to Page 24, Section 8, Step A1)
- E Raise each backrest to the fully upright position. (Refer to Pages 33 & 34, Section 11, Step A1 & Step A2)

STROLLER OPERATION

16. FOLDING THE STROLLER

PLEASE NOTE: To prevent the canopy back flaps from dragging on the ground when the stroller is folded, either remove the back flaps (See Pages 27 & 28), or tuck the bottom of each canopy back flap into the small mesh pocket on each backrest.

- F Close the canopies. (Refer to Page 25, Section 9, Step A1)
- G Rotate the pivotal handle towards the canopy as this will assist in preventing damage to the stroller handle when folding. (Refer to Pages 31 & 32, Section 10, Steps A1, A2 & A3)
- H Press and hold in the RED Sure Lock release button (1) located on the right hand side of the stroller.

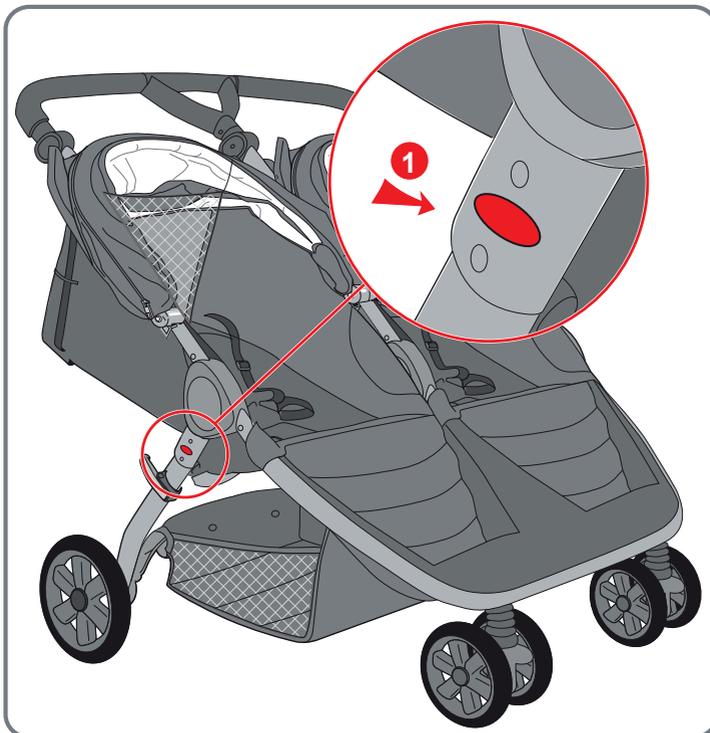

STROLLER OPERATION

16. FOLDING THE STROLLER


- 1 Move to the front of the stroller and with both hands pull up on both folding straps (2) as shown by the arrow. The stroller will now fold.



STROLLER OPERATION

16. FOLDING THE STROLLER

J Lock the frame together with the storage latch.

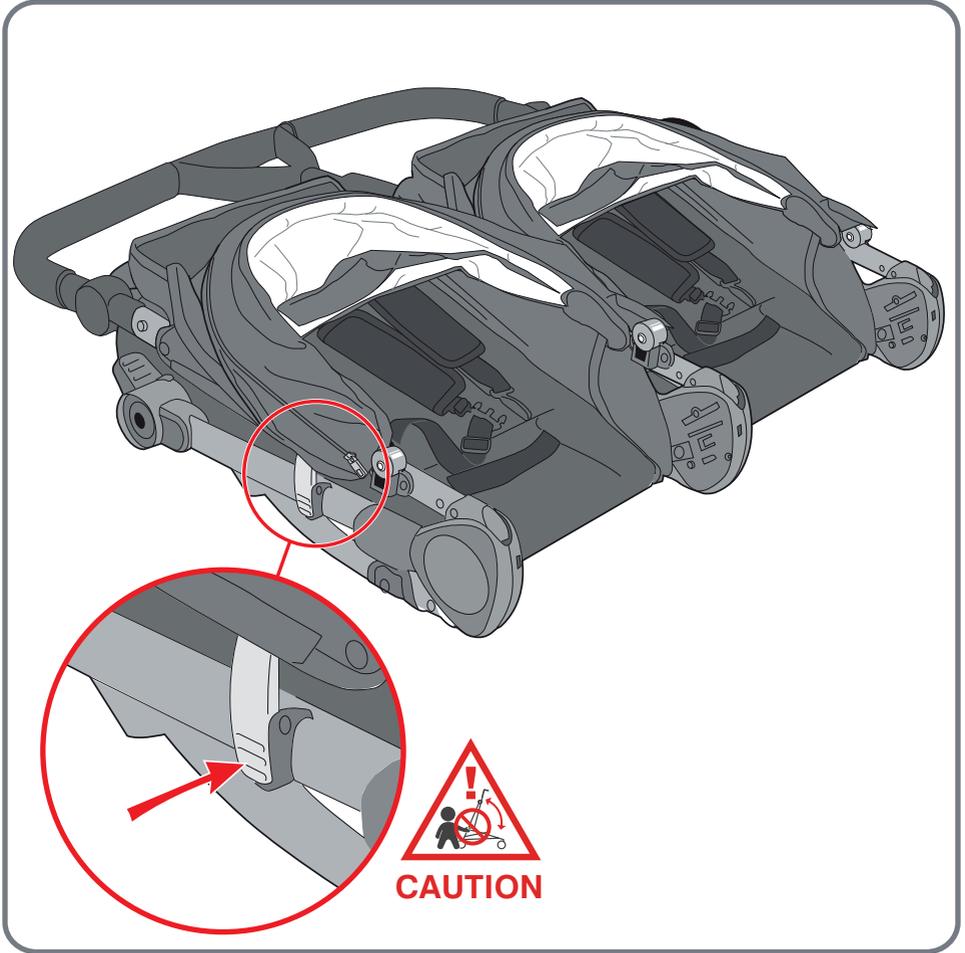


STROLLER OPERATION

17. LIFTING AND CARRYING THE STROLLER

IMPORTANT NOTES:

PLEASE REFER TO PAGE 6 FOR LIFTING TECHNIQUES.

- TO AVOID INJURY: BEND YOU KNEES WHEN OPENING, LIFTING CARRYING, FOLDING, UNFOLDING OR ADJUSTING THE STROLLER OR ANY ACCESSORIES.
- A Ensure the storage latch is locked onto the frame before lifting the stroller. To lift the stroller, grasp one of the folding straps, so the stroller is balanced.

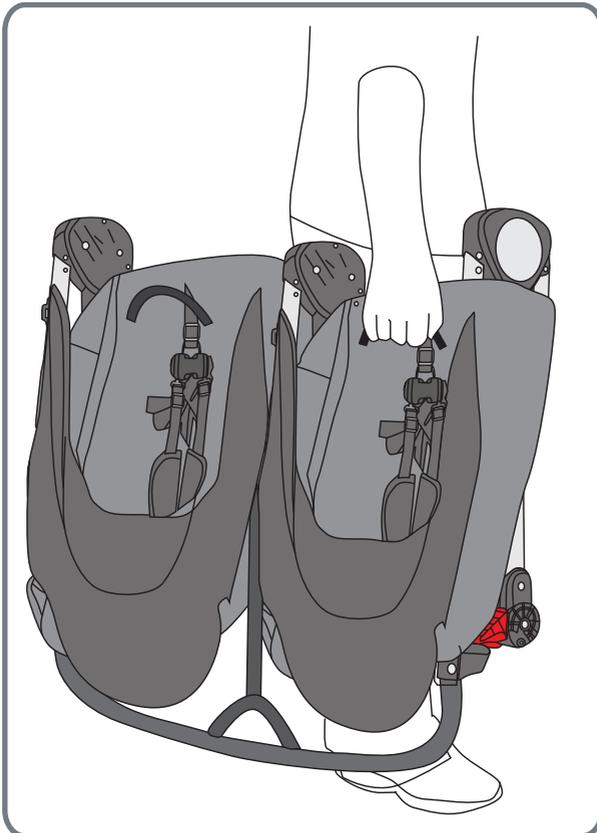

STROLLER OPERATION

18. REMOVING THE FRONT AND REAR WHEELS


- A To remove the front swivel wheel assembly, locate and press in the black button behind the wheel moulding.
- B To remove the rear wheels, pull the metal latch downwards on the underneath of the brake moulding to release the wheel, and then pull the wheel off.



STROLLER OPERATION

19. REMOVING THE CANOPIES


- A1 Unfasten the hook strip on the inside edge of the canopy from the loop strip on the side of the stroller.
- A2 Unfasten the hook square on the inside of the canopy back flap from the loop strip on the side of the stroller.
- A3 Unfasten the hook strip on the inside bottom edge of each canopy back flap from the loop strip along the top edge of the back rest.

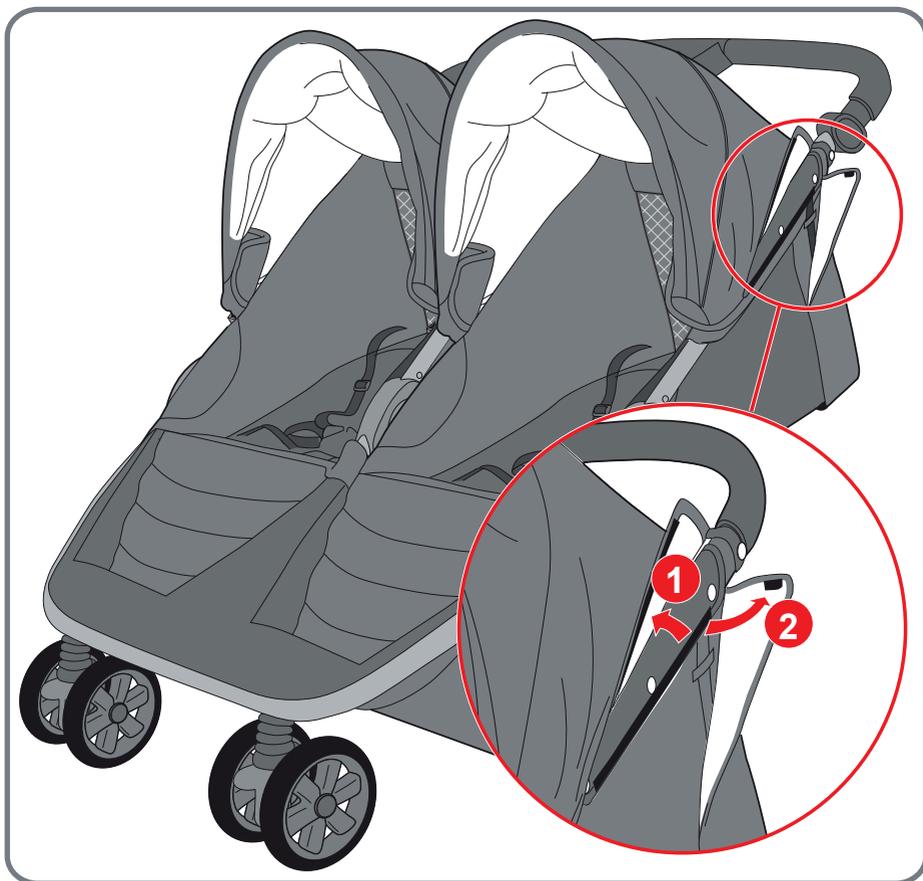

STROLLER OPERATION

19. REMOVING THE CANOPIES


A3

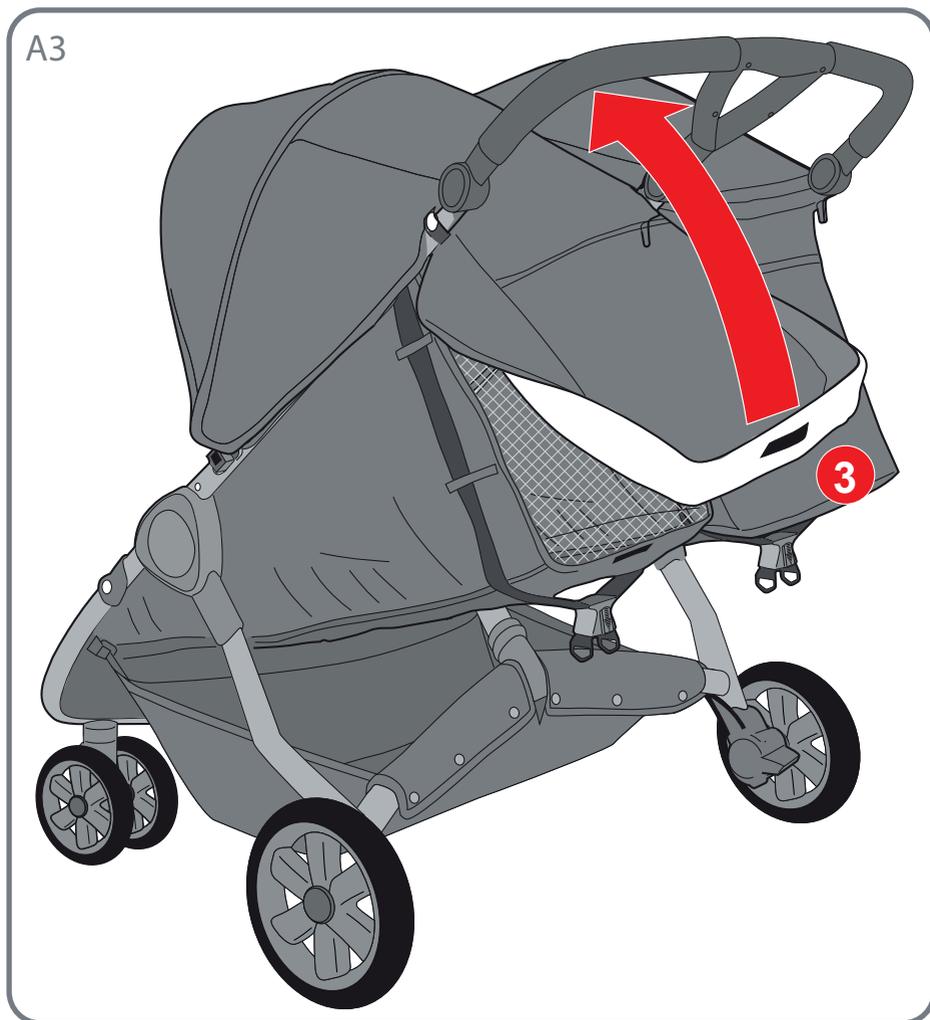

STROLLER OPERATION

19. REMOVING THE CANOPIES


- B1 Lift the back flap of each canopy over the stroller handle to reveal the hook strips along the back edge of the canopy.
- B2 Unfasten the loop strip on the back of the outer side canopy straps from the hook strips along the back edge of the canopy.
- B3 Unfasten the loop strip on the back of the inner canopy straps from the hook strips along the back edge of the canopy. Unthread the inner canopy straps from the guide mould located on the middle handle tube

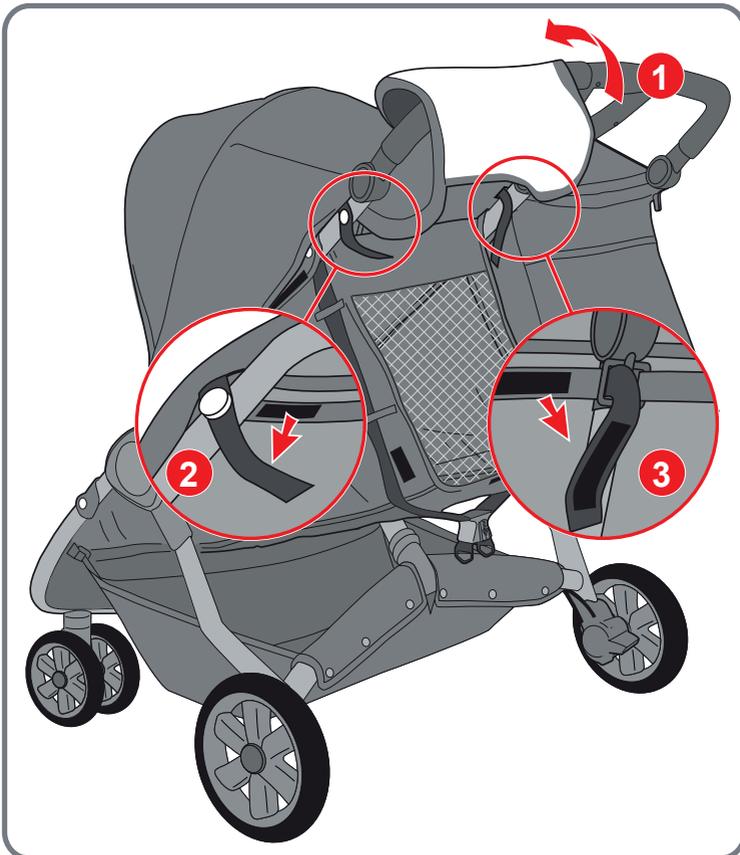

STROLLER OPERATION

19. REMOVING THE CANOPIES


- C1 Locate the straps on the outer sides of each canopy and pull the snap fastener on each strap out of the snap fastener on the top of each outer handle tube.
- C2 To remove the canopies, press in the button on the canopy mouldings and pull out of the canopy frame sockets.

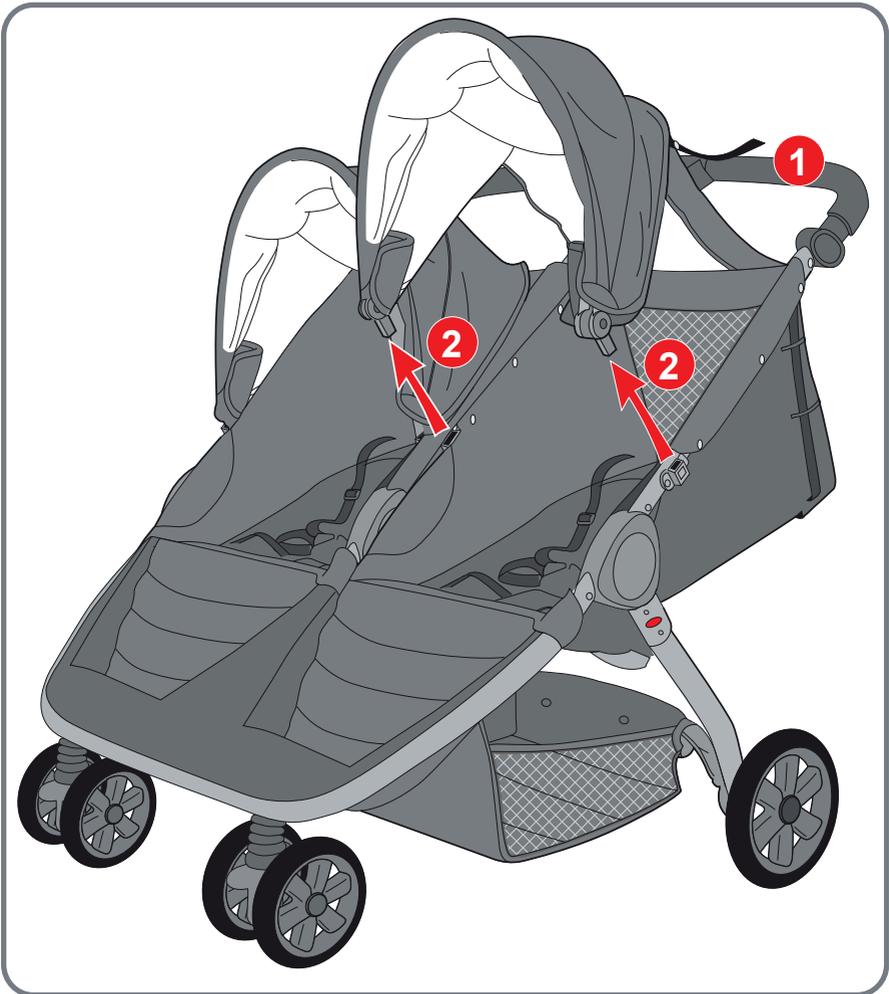

STROLLER OPERATION

20. REMOVING THE CHILD TRAYS

A Push the grey tabs on the adaptors and lift the adaptors and tray until it is removed.

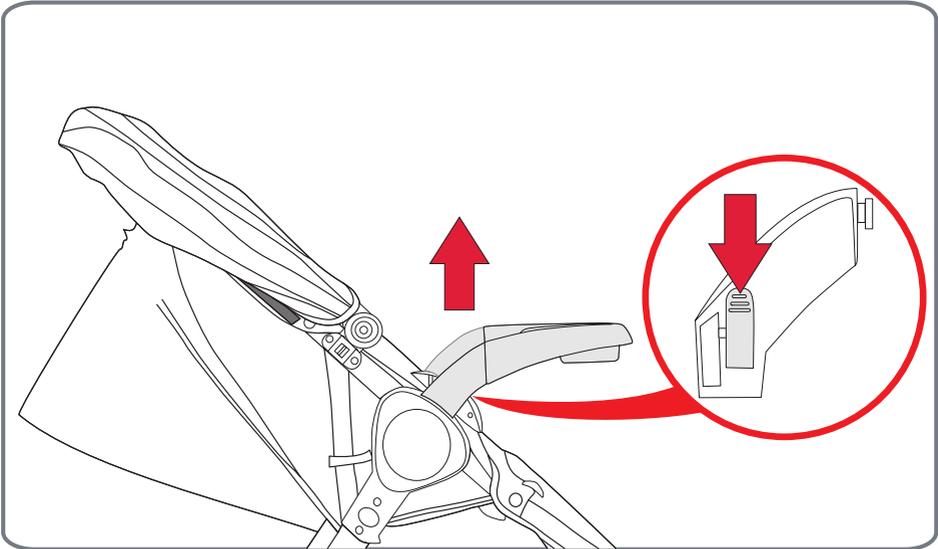

INFANT CARRIER WARNINGS

WARNINGS:

- IT IS UNSAFE TO USE ACCESSORIES NOT APPROVED FOR USE WITH THIS STROLLER.
- DO NOT USE ANY ACCESSORIES OTHER THAN THOSE APPROVED FOR USE WITH THIS STROLLER BY BRITAX.
- THE MAXIMUM WEIGHT OF THE CHILD USING THE STEELCRAFT INFANT CARRIER IS NOT TO EXCEED 9kg.

INFANT CARRIER IMPORTANT NOTES

- THE STEELCRAFT INFANT CARRIER IS THE ONLY COMPATIBLE INFANT CARRIER DESIGNED TO FIT THE AGILE TWIN STROLLER.
- THE INFANT CARRIER MUST BE CORRECTLY FITTED AND LOCKED ONTO THE STROLLER.
- WHEN LOCKED ONTO THE STROLLER FRAME, THE INFANT CARRIER MUST ONLY BE USED IN THE REARWARD FACING POSITION (FACING THE MOTHER), FITTED FACING TOWARD THE STROLLER HANDLE.
- SECURE THE CHILD USING THE INFANT CARRIER HARNESS AT ALL TIMES
- DO NOT LEAVE CHILD IN THE INFANT CARRIER FOR EXTENDED PERIODS.
- THE INFANT CARRIER IS DESIGNED TO PROVIDE MOBILITY OUTSIDE OF THE CAR BUT IT SHOULD NOT BE USED INSTEAD OF AN APPROPRIATE COT.
- THE INFANT CARRIER MUST BE REMOVED FROM THE FRAME BEFORE FOLDING.
- THE SUN IS VERY STRONG. DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN. THE CANOPY OR HOOD ON THIS PRODUCT WILL NOT GIVE YOUR CHILD TOTAL PROTECTION FROM THE HARMFUL RAYS OF THE SUN.

INFANT CARRIER IMPORTANT NOTES

PLEASE NOTE: THESE INSTRUCTIONS ARE FOR INSTALLING AND REMOVING THE INFANT CARRIER ON THE STROLLER ONLY. FOR INSTALLING AND PROPER USE OF THE INFANT CARRIER IN THE CAR, PLEASE FOLLOW THE INSTRUCTION BOOK PROVIDED WITH THE INFANT CARRIER.

STROLLER OPERATION


20. ATTACHING THE STEELCRAFT INFANT CARRIER

PLEASE NOTE: BEFORE INSTALLING THE STEELCRAFT INFANT CARRIER ON THE STROLLER, THE TRAY (SUPPLIED) OR ARMBAR (SOLD SEPARATELY) MUST BE REMOVED.

THE RECEIVERS CAN ONLY BE ATTACHED ON THE LEFT HAND SIDE OF THE STROLLER AS SHOWN IN THE PICTURE.

FIT RECEIVERS STANDING IN FRONT OF THE STROLLER. CAR SEAT RECEIVERS ARE MARKED LEFT AND RIGHT FOR CORRECT FITTING.


- A Stand in front of the stroller and pull the fabric back from the sides of the stroller to expose the stroller hinge. Take one car seat receiver at a time and insert the receiver into the stroller hinge as shown. Push on the receiver until you hear a 'click' which indicates the receiver has locked in. Pull up on each receiver to check they have fully locked in.

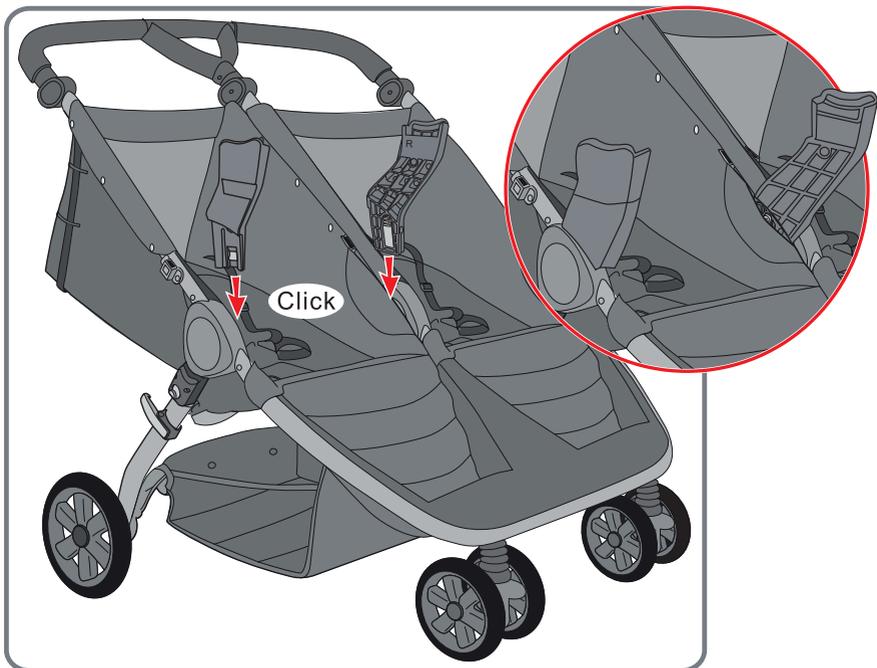


STROLLER OPERATION

20. ATTACHING THE STEELCRAFT INFANT CARRIER

- B Face the feet end of the Infant Carrier towards the stroller backrest. With the Infant Carrier handle in the upright position, locate the Infant Carrier handle mouldings over the receivers on either side. Notice the indicator is GREEN.

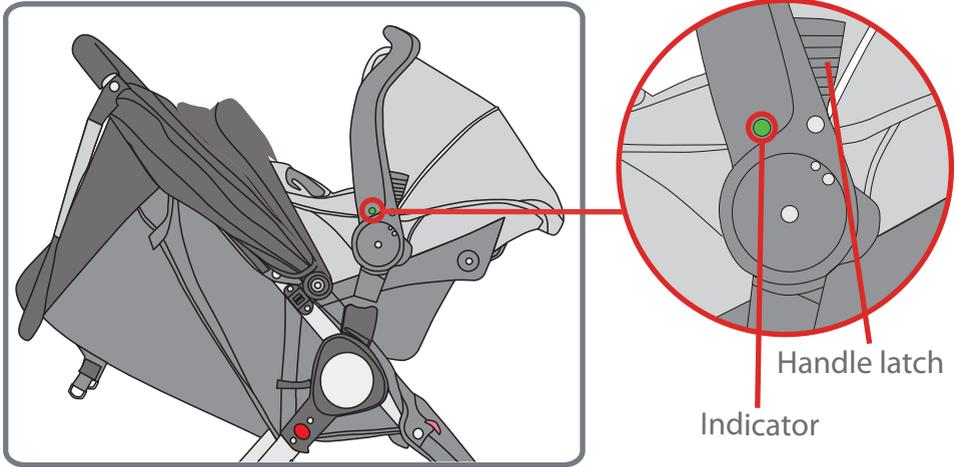


- C Lower the Infant Carrier into the receivers. Press down firmly on both sides.

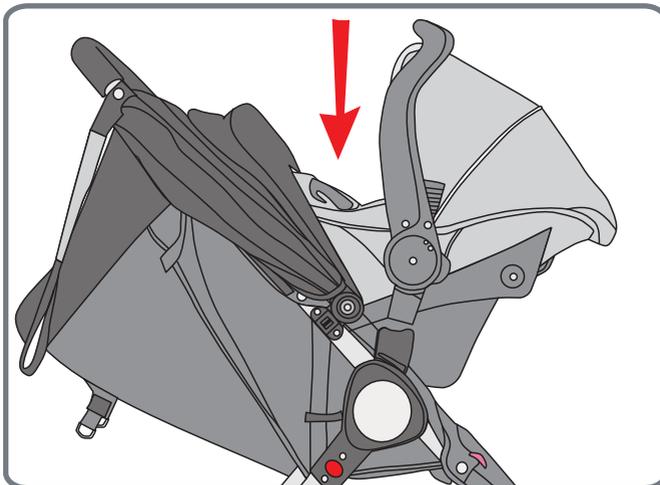

STROLLER OPERATION

20. ATTACHING THE STEELCRAFT INFANT CARRIER

- D The Infant Carrier now needs to be locked securely into the receivers. Squeeze in and hold the latches on either side of the handle, rotate the handle backwards. The GREEN indicator will now turn to RED.

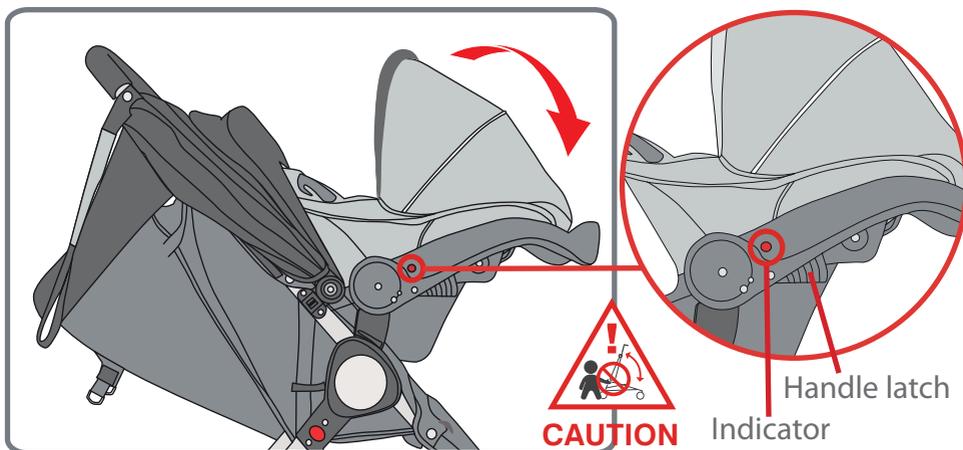


- E Release the handle latches. Then with one hand holding the front of the Infant Carrier, push the Infant Carrier handle all the way down until you hear it lock into the receivers. The handle indicator should now be GREEN and the Infant Carrier should be locked into the receivers. If the indicator is RED the Infant Carrier handle is not in the locked position, repeat step D.

See page 59 for Illustration.

IMPORTANT: Ensure that the Infant Carrier is locked into place by pulling up on both sides. Do not use the Infant Carrier if it is not correctly installed.

STROLLER OPERATION

20. ATTACHING THE STEELCRAFT INFANT CARRIER

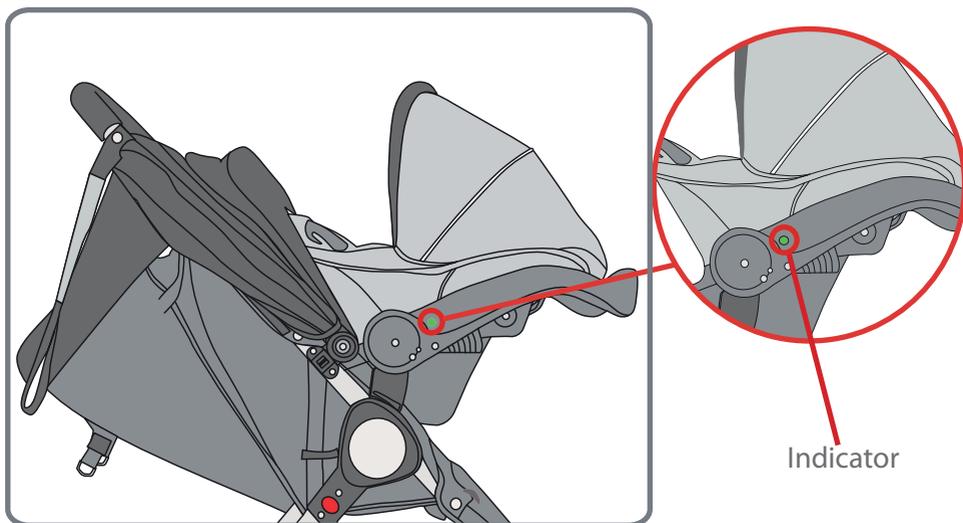


NOTE: Ensure the baby is secured in the Infant Carrier with the harness at all times. Refer to the Infant Carrier instructions regarding placing and securing your baby in the Infant Carrier. The Infant Carrier has been fitted with a hood when using the stroller. The hood may also be used in the car.


STROLLER OPERATION

21. REMOVING THE STEELCRAFT INFANT CARRIER

A To remove the Infant Carrier, squeeze both handle latches in to release the locks. The indicator will now be RED.

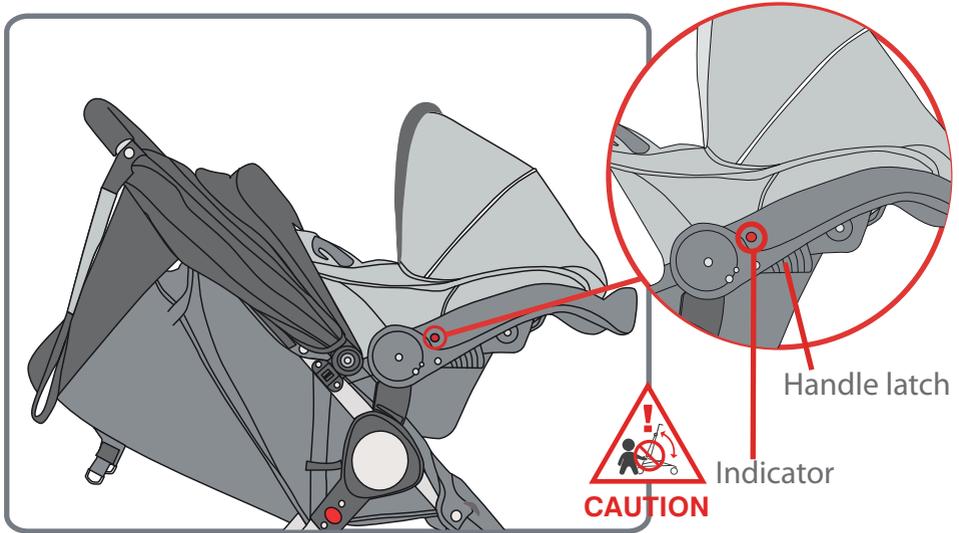


B Continue to rotate the handle forward until it returns to the upright position. Release the latches, the indicator should now be GREEN.

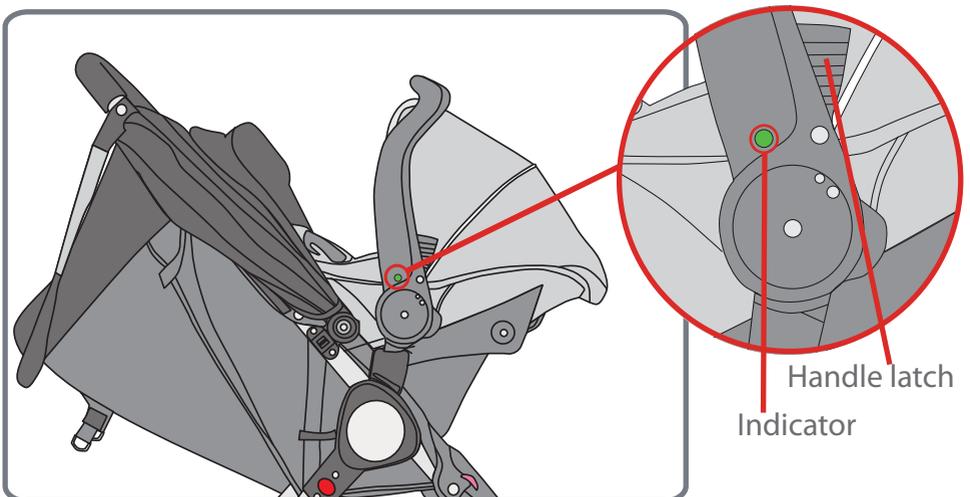


STROLLER OPERATION

21. REMOVING THE STEELCRAFT INFANT CARRIER

C Lift and remove the Infant Carrier away from the stroller.

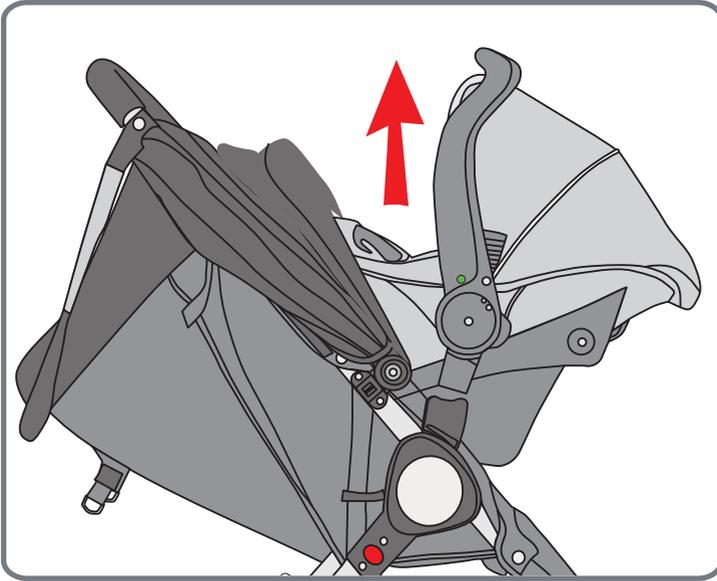

D To remove the receivers, press the red button in on the inside of the receiver and pull the receiver up.

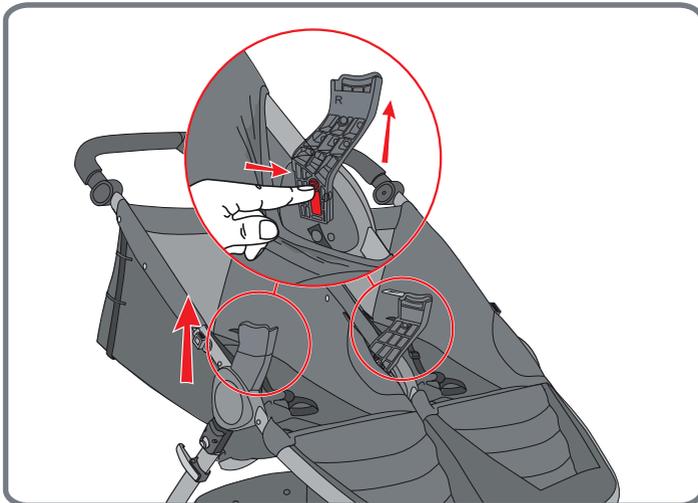

CARE AND MAINTENANCE

- To prolong the life of your stroller keep it clean and do not leave it in the direct sunlight or in the car boot for extended periods of time.
- Removable fabric covers and trims may be cleaned using warm water with a household soap or mild detergent. Allow it to dry fully, preferably away from the direct sunlight.
- Non removable fabric covers and trims may be spot cleaned using a damp sponge with soap or a mild detergent. Allow it to dry completely before folding or storing it away.
- In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well ventilated area.
- When using your stroller at the beach - completely clean your stroller afterwards to remove the sand and salt from the mechanisms and wheel assembly. Sand and salt will cause premature wear and corrosion.
- If there are compression marks on the tyres - Use a domestic hair dryer to gently warm (DO NOT OVERHEAT) the tyre and the compression marks should slowly disappear.
- Always check parts regularly for tightness of screws, nuts, and other fasteners - tighten if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.

SteelcraftTM

BRITAX CHILDCARE PTY. LTD A Britax International company.
(Incorporated in Victoria) A.B.N. 55 006 773 600
Level 4, 650 Lorimer Street, Port Melbourne, Victoria 3207, Australia
Phone: (03) 9288 7288 Fax: (03) 9311 5798

CUSTOMER SERVICE
1300 303 330 - Australia 0508 688 822 - New Zealand

Due to our continuing program of development, Britax reserves the right to alter the specifications, color or design without any further notice.

The Steelcraft trademark is the property of Britax Childcare Pty.Ltd - Australia.

The Britax trademark is the property of Britax Childcare Holdings Limited - UK.

Visit the Britax website at: www.britax.com.au or email us at au-custserv@britax.com

Due to the variations in the style and design of our products the illustrations used in this instruction booklet are generic.

This product is designed to comply with Australian and New Zealand standard AS/NZS2088:2013 "Prams and Strollers - Safety Requirements."

©2019 Copyright Britax Childcare Pty. Ltd. Australia

www.britax.com.au

Art No. 4001960_E