
For luxurious beginnings. With exclusive chrome detailing and beautifully soft, ink-black twill fabrics, the JIVE⁵ Platinum merges the award-winning functionality of our JIVE⁵ with a premium finish. Move in style everywhere you go.

EXCLUSIVE,
PREMIUM DETAILING

CRAFTED
WITH LUXURY

JIVE⁵ Platinum Pram Product Guide

redsbaby®

For your journey®

We are committed to innovating, crafting and bringing to life the best in baby products and experiences. Our products are designed in Australia for our unique lifestyle. They are as functional as they are beautiful, serving our core purpose to enrich your family journey.

CELEBRATING
HOMEGROWN

HEAD-TURNING
STYLE

CONTENTS

General instructions /7/

Product care /8/

Cleaning instructions /9/

Safety standards /10/

Warnings and safety precautions /11/

Features and components /20/

Assembly instructions /22/

Frame /22/

Basket /22/

Brake component /22/

Rear wheels /23/

Front wheels /23/

Canopy and bumper bar /24/

Bassinet /24/

To remove /25/

Using your JIVE⁵ Platinum /26/

Unfolding /27/

Folding /28/

Lifting and carrying safely /28/

Engaging and releasing the brake /29/

Locking the front wheels /30/

Adjusting the handlebar /31/

Using the 5-point safety harness /32/

Reclining the seat /34/

Reversing the seat /35/

Adjusting the footrest /36/

Using the tether strap /36/

Bassinet for overnight sleeping /37/

Warranty information /40/

For future[®] /42/

Company information /43/

Scan to Watch

How-to and assembly videos available
at redsbaby.com.au



Embrace Your Journey

GENERAL INSTRUCTIONS

Keep this document for future reference. It contains important information.

Please read thoroughly before commencing assembly and use of your JIVE⁵ Platinum. Incorrect assembly and usage can be dangerous and result in serious injury or even death.

There may be slight variations in the design of your product to the images shown in this product guide.

Your JIVE⁵ Platinum chassis is compatible with the JIVE⁵ Platinum seat and bassinet. Do not use your JIVE⁵ Platinum frame with any other model of pram, seat or bassinet.

Your JIVE⁵ Platinum Bassinet is approved for overnight sleeping when used with the Redsbaby Bassinet Stand.

Your JIVE⁵ Platinum is compatible with Britax capsules using the JIVE⁵ Platinum bassinet adaptors.

Your JIVE⁵ Platinum is also compatible with Maxi-Cosi, Joie and Nuna car capsules using our Maxi-Cosi Capsule Adaptors (sold separately).

Product care

GENERAL MAINTENANCE

- Regularly inspect the locking devices, brakes, harness assembly, catches, seat adjusters, joints and fixings to ensure they are secure and in full working order.
- Do not store your JIVE⁵ Platinum in your car for prolonged periods, especially in hot weather, as heat may warp certain plastic parts and reduce your product's life.
- The brakes and wheels are subject to wear and should be replaced when necessary.

Brakes are available by contacting our Customer Care team at info@redsbaby.com.au

- Should any parts of the JIVE⁵ Platinum become stiff or difficult to operate, ensure that dirt is not the cause.
- Sparingly apply a silicone spray lubricant to penetrate the components. Excessive application may encourage the accumulation of dirt. Regular light lubrication of moving parts will extend the life of your JIVE⁵ Platinum and make operating, opening and folding easier.
- Do not leave your JIVE⁵ Platinum in sunlight for prolonged periods, as fabrics may fade.
- Store your JIVE⁵ Platinum in a dry, well-ventilated and safe place.
- Do not use your JIVE⁵ Platinum if screws are loose or missing or if any component is damaged.

Cleaning instructions

GENERAL INSTRUCTIONS

- Do not use products that contain alcohol, as they may cause erosion, stains, discolouring and damage to the leatherette parts on your JIVE⁵ Platinum. This includes applying hand sanitiser to your hands or directly on the product.
- Do not place any fabric or other component of your JIVE⁵ Platinum in the dryer. Allow all parts to dry thoroughly before storing.

PLASTIC AND METAL PARTS

- Sponge clean with warm water and a mild detergent then air dry.
- Do not use any abrasive or corrosive cleaning products on your JIVE⁵ Platinum.

FABRICS

- Sponge lightly with warm water and a mild detergent, and air dry.
- Follow the care label to prolong the life of the fabric.

Safety standards

Redsbaby JIVE⁵ Platinum is designed to comply with AS 2088:2022 and CPN No.8 of 2007.

Redsbaby JIVE⁵ Platinum Bassinet is also designed to comply with ASTM F2194-16e1/16 CFR 1218 and ASTM F2194-22e1 when used with the Redsbaby Bassinet Stand.

Warnings and safety precautions

Please read the following warnings and safety precautions thoroughly before using your JIVE⁵ Platinum.

Incorrect assembly and use can result in serious injury or death.

Always follow the safety instructions to ensure that your JIVE⁵ Platinum is correctly folded, assembled, and the locks are engaged for safe usage.

After unpacking, immediately discard packaging materials, as these can become a choking hazard.

Always use the safety features that come with your JIVE⁵ Platinum, such as the tether strap, brakes and harness.



GENERAL WARNINGS

- To avoid injury or death: Always apply the brakes whenever the Redsbaby JIVE⁵ Platinum is stationary.
- Do not leave children unattended.
- Secure the child in the harness at all times.
- Do not carry extra children or bags on the Redsbaby JIVE⁵ Platinum.
- Make sure children are clear of any moving parts if you adjust the Redsbaby JIVE⁵ Platinum, otherwise they may be injured.
- Ensure the frame fold locks are engaged correctly before placing a child in the Redsbaby JIVE⁵ Platinum.
- Follow the manufacturer's instructions.
- Put on all the brakes whenever you park the Redsbaby JIVE⁵ Platinum.
- Use the harness at all times.
- When not in use disconnect shoulder straps from the waist strap and/or buckle.

- The harness can form loops which may cause a strangulation hazard. Never leave a harness connected when not fitted to a child in the Redsbaby JIVE⁵ Platinum.
- Use the tether strap to stop the Redsbaby JIVE⁵ Platinum rolling away.
- Do not use the seat or bassinet with any other models of pram/stroller.
- Do not use bassinet once the child can sit up unaided.
- Only use the bassinet in the flat position. Do not recline.
- Do not use any accessories that are not designed for or compatible with the Redsbaby JIVE⁵ Platinum.
- Take care when using on stairs or escalators.
- We recommend you do not use the Redsbaby JIVE⁵ Platinum on stairs, as this may damage the frame and lead to breakage.
- Do not use or leave the Redsbaby JIVE⁵ Platinum near open fire or exposed flames.
- Brakes must always be applied when the Redsbaby JIVE⁵ Platinum is not moving.

- The Redsbaby JIVE⁵ Platinum is compatible with the Redsbaby Buggyboard. The maximum weight of a child on the board is 20kg (44.1lbs). Ensure you securely connect the Redsbaby Buggyboard to the tubing that runs between the rear wheels of your Redsbaby JIVE⁵ Platinum.
- The rearward-facing position of the seat is only intended for a child up to 2 years, or until the child's feet extend over the edge of the leg rest. The front-facing position should be used from then on.
- This bassinet can be used for overnight sleeping only when the flap at the foot end of the bassinet is lifted and when used with the Redsbaby Bassinet Stand.
- DO NOT use the bassinet for overnight sleeping in your Redsbaby pram frame. Failure to follow these instructions may result in serious injury or death.
- The Redsbaby JIVE⁵ Platinum Bassinet is only approved for use with the Redsbaby JIVE, JIVE², JIVE³, JIVE⁵ Platinum Pram/stroller.
- Maximum weight for a child in the bassinet is 9kg (19.8lbs).



GENERAL SAFETY PRECAUTIONS

- When the vehicle is being folded and unfolded, there is potential for fingers or parts of the body to be injured and due care should be exercised.
- Overloading, incorrect folding or the use of non-approved accessories may cause injury or damage your Redsbaby JIVE⁵ Platinum.
- Ensure you follow the regular maintenance and care instructions included in this manual. Pay special attention to maintenance and care of the brakes.
- The Redsbaby JIVE⁵ Platinum can be used for two (2) children only when using the Redsbaby JIVE⁵ Platinum Second Seat Conversion Kit. Without the Second Seat Conversion Kit, the Redsbaby JIVE⁵ Platinum can only be used for (1) child.
- Do not hang bags on the Redsbaby JIVE⁵ Platinum handles, as this can cause it to become unstable.

- Do not lift or carry the Redsbaby JIVE⁵ Platinum when a child is in it.
- Do not lift or carry the Redsbaby JIVE⁵ Platinum when fully assembled. Only lift and carry when folded.
- The Redsbaby JIVE⁵ Platinum is designed for use on flat or gentle sloping surfaces and may be unstable on higher sloping and uneven surfaces. The vehicle may tip over when used incorrectly on steep inclines/declines.
- Take care when changing terrains and when going over uneven surface levels (inclines/declines/curbs/obstacles) with your pram. Ensure you apply pressure to the handle to lift the front wheels over uneven surface levels or when meeting an incline or decline as required (also called 'popping' the front wheels). Failure to take care when changing terrains or surface levels, and when going over uneven surface levels, may cause your pram to become unstable.
- When using your Redsbaby JIVE⁵ Platinum on stairs or escalators, take care.
- **WARNING: DO NOT USE FOR UNSUPERVISED SLEEPING.**
- The vehicle is not to be used as an unsupervised sleeping environment.



MAXIMUM WEIGHT LIMITS

- Maximum weight for a child in the bassinet is 9kg (19.8 lbs).
- Maximum weight for a child in the upper seat is 20kg (44.1 lbs).
- Maximum weight for a child in the lower seat is 17kg (37.5 lbs).
- Maximum weight for items in the basket is 12kg (26.4 lbs).

Additional Bassinet Safety Precautions



WARNING FALL HAZARD

Failure to follow to these warnings and instructions could result in death or serious injury.

To help prevent falls,

- Do not use this product when the infant begins to push up on hands and knees or has reached 9kg (19.8lbs), whichever comes first.
- Strings can cause strangulation! Do not place items with a string around a child's neck, such as hood strings or pacifier cords. Do no suspend strings over a product or attach strings to toys.
- Do not use if any part of the bassinet/ cradle is broken, torn or missing.




WARNING SUFFOCATION HAZARD

Babies have suffocated:


- On pillows, comforters and extra padding.
- In gaps between a wrong size mattress, or extra padding and product sides.
- NEVER add soft bedding or padding.
- Use ONLY the mattress provided by manufacturer.
- Always place baby on back to sleep to reduce the risk of SIDS and suffocation.
- If a sheet is used with the pad, use only the one provided by the product manufacturer or one specifically designed to fit the dimension of the product mattress.

Features and components

1	HANDLEBAR	11	FOLD LOCK
2	HANDLEBAR LATCHES	12	FRAME
3	SEAT RECLINE LEVER	13	FOOTREST
4	FRAME FOLD LATCHES	14	FRONT WHEELS
5	SEAT UNIT	15	CANOPY
6	BASKET	16	VENTILATION PANEL
7	BRAKE	17	ADAPTORS
8	REAR WHEELS	18	LEATHERETTE/FABRIC PANEL
9	CANOPY	19	APRON
10	BUMPER BAR		

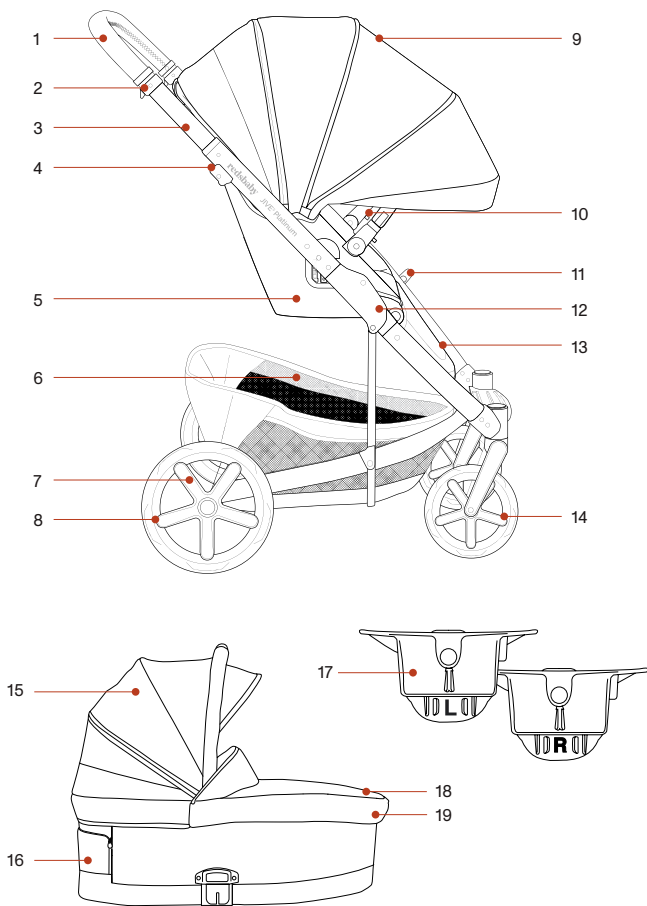


Assembly instructions

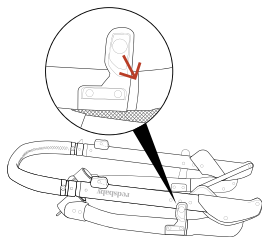

Frame

1. Place the frame on the ground and position yourself behind the brake.
2. Release the frame lock located on the left-hand side of the frame.
3. Holding the handlebar, gently lift the frame until the frame locks into place. When the frame has been fully opened, you will hear and feel a firm click.

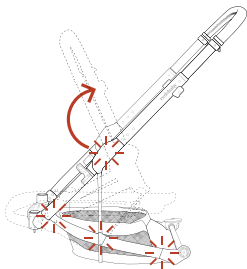

Basket

1. Unfold the frame.
2. Secure the basket's press studs to the frame.


Brake component

The brake is red in colour and is permanently assembled on your pram frame. The brake is located at the bottom right-hand side of the frame.

IMPORTANT


Check the wheels are clicked in correctly by tugging them outwards.

The wheels will fall off the pram if they are not attached correctly.

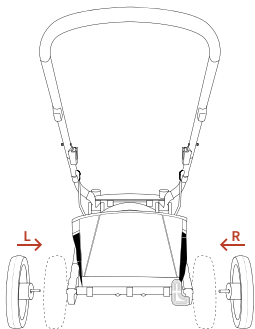


Rear wheels

1. Press the centre button on each wheel and insert it in the frame's rear wheel housing. Once inserted, release the centre button.
2. To remove the rear wheels press the button in the middle of the wheel and pull outwards.

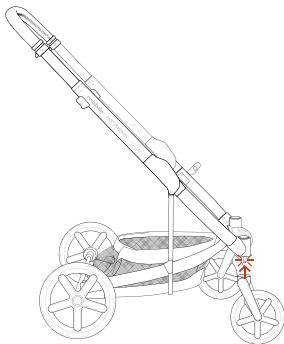

Front wheels


Insert wheels into the chassis front wheel housing. A firm click indicates the wheels are secured.

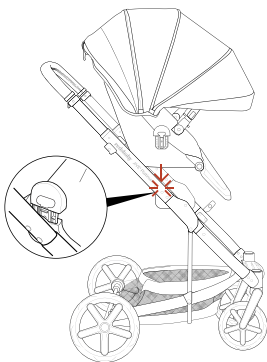

Canopy and bumper bar

The pram comes with the seat fabrics assembled.


1. Position the back of the canopy over the seat hand recline lever. Click the canopy rods into the sides of the seat frame.
2. Align the bumper bar pins with the openings on the seat frame and secure them.
3. Gently push the seat frame's connectors downwards into the chassis seat connectors until you feel and hear a firm click.

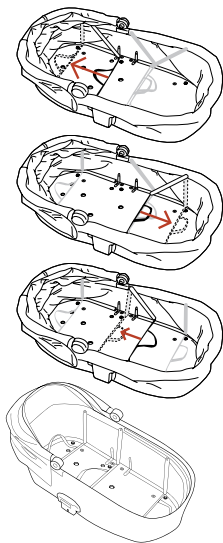


Bassinet

1. Pull the three support rods located in the bottom of the bassinet into place.
2. Push one of your hands into the base of the bassinet while pulling the support rods into position.
3. Once assembled correctly, your bassinet will sit rigid and upright.

Note: To ensure the sides of the bassinet are rigid and upright, pull the support rods up against the black stoppers on the bottom of the bassinet.

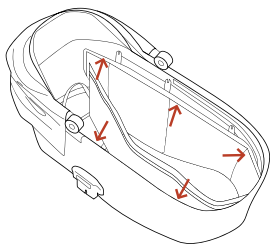

4. Secure the velcro and press stud on the lining to the bassinet body. Press firmly to secure in place.
5. Fit the bassinet mattress into the bottom of the bassinet snugly.
6. Secure the bassinet apron.

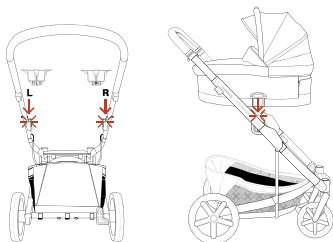

7. Secure the bassinet adaptors in the pram frame.
8. Click the bassinet into the adaptors. Check the bassinet is secured by lifting it upwards when in the pram frame.




To remove

Lift and release the locks on either side of the bassinet.


Using your JIVE⁵ Platinum

Unfolding and folding

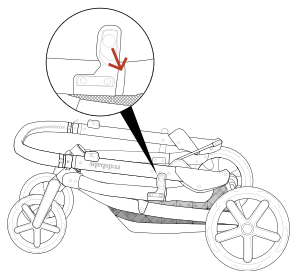


To unfold

1. Release the frame lock on the left-hand side of the frame.

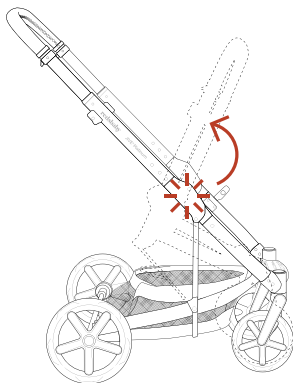

2. Gently lift the handlebar until the frame locks into place. A firm click indicates the frame is unfolded.

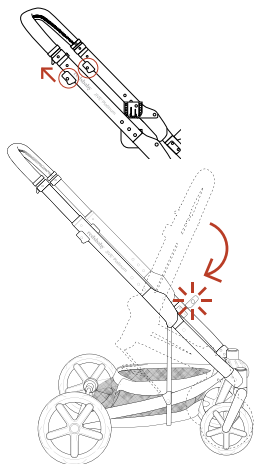

To fold


1. Using bassinet: Remove the bassinet from the frame.
2. Using seat: Return seat to forward-facing and fully upright position.
3. Return handlebar to the lowest position.
4. Simultaneously slide the frame fold latches on each side of the frame upwards.
5. While still holding the frame, fold latches upwards, fold the frame forwards and toward the ground, until the frame lock engages.

Lifting and carrying safely

- Always lift and carry the frame using two hands.
- Ensure the fold lock is engaged.


Engaging and releasing the brake

The brake is red and located next to the right rear wheel of the JIVE⁵ Platinum.

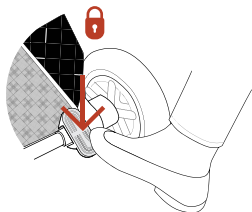

To engage


Press downwards on the brake. A firm click indicates the brake is engaged.

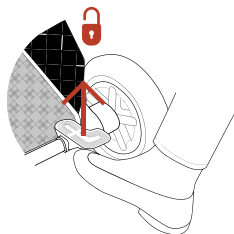

To release

Press your foot forwards on the top surface of the brake or flick upwards from underneath the brake until it disengages.

Locking the front wheels

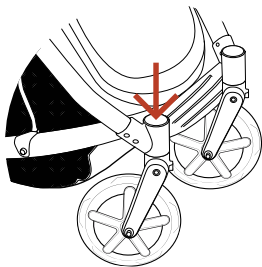


To lock

Press the buttons on the top of the front wheel housing downwards to lock.

To unlock


Press the buttons again to release.

Adjusting the handlebar

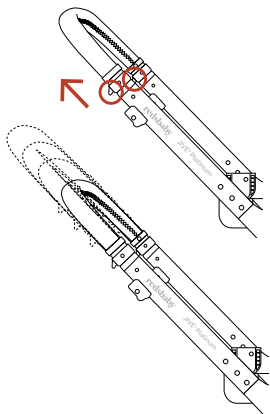


1. Pull both handlebar latches located under either side of the handlebar upwards.
2. Adjust to the desired height.

Using the 5-point safety harness

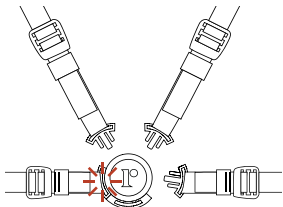

To lock


Insert the clips located on the shoulder and waist straps into the centre buckle. Click backwards to secure.

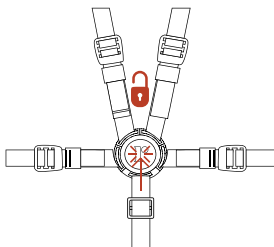

To unlock

Press the button in the middle of the buckle to release all straps at once.

Note: Padding has been provided for the shoulder straps and crotch strap.

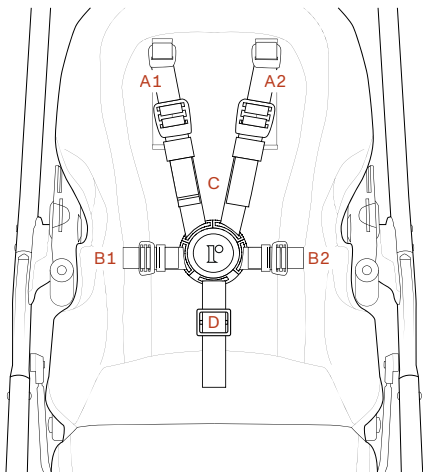


Adjusting the straps

1. Adjust the shoulder strap height by sliding the strap upwards and downwards to the desired height.
2. Adjust the shoulder straps (A1) and (A2), waist straps (B1) and (B2) and crotch strap (D) to the desired fit.


Note: Position the shoulder straps just above your child's shoulder.

Reclining the seat

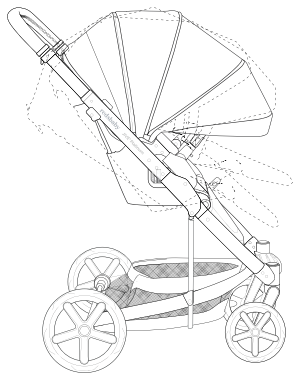


To recline

Lift the seat hand recline lever upwards and move the seat into the desired position.

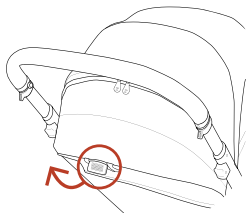


Reversing the seat

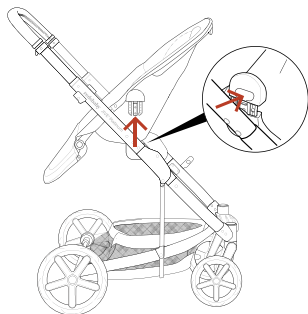


To reverse

1. Remove the seat unit by pushing the connectors located on both sides of the seat unit and lifting the seat upwards.

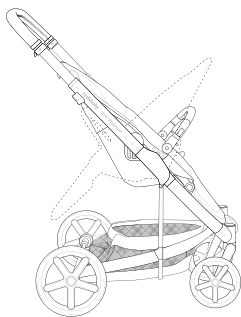

2. Position the seat forward or rearward facing.

Adjusting the footrest

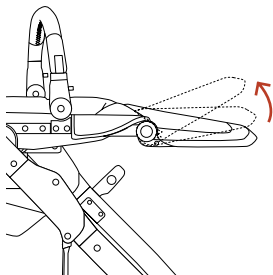

The footrest has three positions.


1. Press the buttons on both sides of the footrest to adjust the footrest downwards.
2. Lift the footrest to adjust upwards.

Note: The footrest will move freely in the upwards direction. It will not lock into place. This allows the seat to fold into the frame without resistance.

Using the tether strap



Attach the tether strap to your wrist at all times when using the JIVE^S Platinum.

Bassinet for overnight sleeping

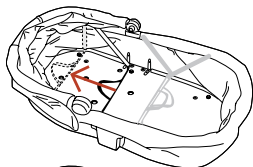




The JIVE⁵ Platinum Bassinet can only be used for overnight sleeping in the Redsbaby Bassinet stand.

1. Pull the three support rods located in the bottom of the bassinet into place.
2. Push one of your hands into the base of the bassinet while pulling the support rods into position.
3. Once assembled correctly, your bassinet will sit rigid and upright.

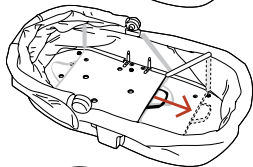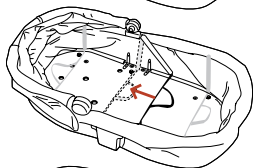


Note: To ensure the sides of the bassinet are rigid and upright, pull the support rods up against the black stoppers on the bottom of the bassinet.

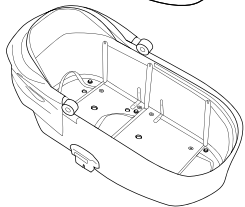

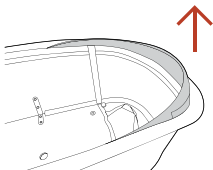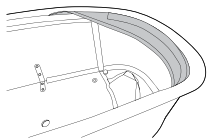

4. Lift the flap located at the foot end of the bassinet.

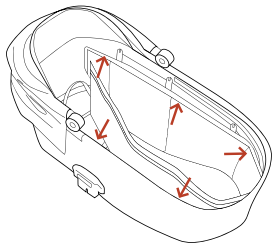

5. Secure the velcro and press stud on the lining to the bassinet body. Press firmly to secure in place.
6. Open the ventilation panel at the head end of the bassinet for more airflow.

The bassinet is now ready to be placed in the Bassinet Stand.

NOTE

More detailed instructions about using the Redsbaby Bassinet Stand can be found in the Bassinet Stand Product Guide.

Understand your warranty

36 MONTH WARRANTY

Your product comes with a standard 24 month warranty to cover faults in materials and quality when used under normal conditions and according to user manuals and technical specifications. Register your product online at [redsbaby.com.au](https://www.redsbaby.com.au) within 60 days of delivery to receive an additional 12 month warranty. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.

You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The 24 month warranty period starts from the date your product(s) are dispatched from our warehouse, including products purchased on pre-order. The benefits provided by our 36 Month Warranty are in addition to other rights and remedies available under law.

CLAIM VALIDITY

Immediately cease use of the product once you become aware of a fault or defect. Contact Redsbaby to report the issue. You must make a claim within the claims period for it to be valid.

WARRANTY EXPENSES

Redsbaby will provide repairs and replacements free of charge for claims made within the claims period. Redsbaby will provide free shipping for replacement products or parts and repairs shipped within Australia. The customer will be responsible for shipping charges for replacement products or parts and repairs shipped outside Australia.

HOW TO MAKE A CLAIM

Visit redsbaby.com.au/warranty and complete a warranty claim form or contact Customer Care for assistance with making your warranty claim. Further warranty information is available at redsbaby.com.au.

For future®

We strive to use resources and make decisions that safeguard our planet for future generations. Our products are made to last for years to come and wherever possible, use sustainable materials and packaging to minimise our impact on our beautiful planet.

'REDSBABY', 'JIVE', 'FOR YOUR JOURNEY' and
'FOR FUTURE' are registered trademarks of
Redsbaby Pty Ltd

ACN 625 563 519

729 Elizabeth Street
Zetland 2017 NSW Australia

02 7201 5891

redsbaby®

REDSBABY.COM.AU
@REDSBABYAUS